



# Technical Information

## Operating Instructions

### **M300 / GPS**

### **Contact Information**

Meinberg Funkuhren GmbH & Co. KG  
Lange Wand 9  
D-31812 Bad Pyrmont

Telephone: +49 (0) 52 81 / 9309-0  
Telefax: +49 (0) 52 81 / 9309-30

Internet: <http://www.meinberg.de>  
E-Mail: [info@meinberg.de](mailto:info@meinberg.de)

Bad Pyrmont, 16. Juli 2008

# Table of Contents

Quick Start.....	8
Network Timeserver with GPS synchronized time base.....	9
The Modular System LANTIME.....	10
Supported Network Services.....	12
Additional Features and Options.....	13
User Interface.....	13
Options.....	13
Why to use a Network Timeserver.....	14
Network Time Protocol (NTP).....	14
NTP Target.....	15
GPS satellite controlled clock.....	15
GPS170 Features.....	16
Time Zone and Daylight Saving.....	16
Mounting the GPS Antenna.....	17
Assembly with CN-UB/E.....	18
Booting the GPS receiver.....	19
Booting the Single Board Computer.....	19
Configuration User Interface.....	21
The menus in Detail.....	22
Root Menu.....	22
Menü: Reference Time.....	24
Setup GPS Receiver Parameters.....	25
Set Antenna Cable Length.....	25
Set GPS Receiver Simulation Mode.....	25
Init GPS Receiver.....	26
Initiate Cold Boot of GPS Receiver.....	26
Initiate Warm Boot of GPS Receiver.....	26
Init GPS Position.....	27
Init GPS Time.....	27
Info GPS.....	28
GPS Status & Version.....	28
GPS Receiver Position.....	28
GPS Satellite Constallation.....	29
Setup GPS Outputs.....	29
GPS Enable Outputs.....	29
Serial Outputs.....	30

Setup Time Zone of Serial Outputs.....	30
Menu: Time Service.....	32
Menu: external NTP.....	32
Menu: Stratum of local clock.....	32
Menu: Restart NTP.....	33
Programmable pulse (Option).....	34
SETUP POUT X.....	34
Mode.....	34
Timer mode.....	35
Single Pulse.....	35
Cyclic mode.....	36
PPS, PPM, PPH Modes.....	36
Menu: Synthesizer Frequency Output (Option).....	37
Menu: TIME CODE IRIG (Option).....	37
Menu: Network.....	38
Setup Global Configuration.....	39
Setup Network Interfaces.....	40
Setup Network Ipv4 Parameter.....	40
Menu: Setup Ipv6 Parameter.....	41
Menu: Link Mode.....	41
Menu: Setup Services.....	42
Menu: System.....	42
Set time zone.....	42
The LANTIME configuration interfaces.....	44
The WEB interface.....	45
Configuration: Main Menu.....	47
Configuration: Ethernet.....	48
Network interface specific configuration.....	50
IPv4 addresses and DHCP.....	50
IPv6 addresses and autoconf.....	50
High Availability Bonding.....	51
Additional Network Configuration.....	52
Configuration: Notification.....	53
Alarm events.....	54
E-mail messages.....	54
Windows Popup Messages.....	55
SNMP-TRAP messages.....	55
VP100/NET wall mount display.....	55
User defined Alarm scripts.....	56
NTP Client Monitoring.....	56
Alarm messages.....	57

Configuration: Security.....	58
Password.....	59
HTTP Access Control.....	59
SSH Secure Shell Login.....	60
Generate SSL Certificate for HTTPS .....	61
NTP keys and certificates.....	62
SNMP Parameter.....	62
Configuration: NTP.....	63
NTP Authentication.....	66
NTP AUTOKEY.....	68
Configuration: Local.....	71
Administrative functions.....	72
User Management.....	73
Administrative Information.....	74
Software Update.....	76
Automatic configuration check.....	77
Get Diagnostics Information.....	78
Web interface language.....	78
Configuration: Statistics.....	79
Statistical Information.....	80
Configuration: Manual.....	81
The Command Line Interface.....	83
CLI Ethernet.....	84
CLI Notification.....	87
Alarm events.....	87
E-mail messages.....	88
Windows Popup Messages.....	88
SNMP-TRAP messages.....	89
VP100/NET wall mount display.....	89
NTP Client Monitoring.....	90
CLI Security.....	91
Password.....	91
SSH Secure Shell Login.....	91
Generate SSL Certificate for HTTPS .....	92
NTP keys and certificates.....	92
CLI NTP Parameter.....	93
CLI NTP Authentication.....	94
CLI NTP Autokey.....	94
CLI Local.....	95
Administrative functions.....	95
User Management.....	96
Administrative information.....	96
Software Update.....	98

SNMP Support.....	99
Configuration over SNMP .....	101
Examples for the usage of the SNMP configuration features.....	102
Further configuration possibilities.....	104
Send special timeserver commands with SNMP.....	104
Configuration of the timeserver with SNMP: Reference.....	106
SNMP Traps.....	109
SNMP Trap Reference.....	110
Attachment: Technical Information.....	111
Skilled/Service-Personnel only: Replacing the Lithium Battery.....	111
Technical Specifications M600/300 Multipac.....	111
Safety instructions for building-in equipment.....	112
CE-Label.....	112
Rear Panel Connectors.....	113
Connector Assignments.....	113
RS232 TERMINAL.....	114
Time Sync Error Relay.....	115
Technical Specification.....	115
Technical Specifications GPS receiver.....	116
Oscillator options.....	117
Technical Specifications GPS Antenna.....	118
Signal Description GPS170.....	119
Rear Connector Pin Assignments GPS170.....	120
Technical Specifications LAN CPU.....	121
Rear Connector Pin Assignments LAN CPU.....	122
VGA, Keyboard Connector Pin Assignments.....	122
Technical Specifications Power Supply.....	123
Timecode (option).....	124
Abstract.....	124
Principle of Operation.....	124
Block Diagram Timecode.....	124
IRIG Standard Format.....	125
AFNOR Standard Format.....	126
Assignment of CF Segment in IEEE1344 Code.....	127
Generated Time Codes.....	128
Selection of Generated Time Code.....	128
Outputs.....	129
AM - Sine Wave Output.....	129
PWM DC Output.....	129
Technical Data.....	129

Time Strings.....	130
Format of the Meinberg Standard Time String.....	130
Format of the GPS Capture String.....	131
Format of the SAT-Time String.....	132
Format of the Uni Erlangen String (NTP) .....	133
Format of the NMEA 0183 String (RMC).....	135
Format of the ABB SPA Time String.....	136
Format of the COMPUTIME Time String.....	137
Format of the RACAL standard Time String.....	138
Format of the SYSPLEX-1 Time String.....	139
Konformitätserklärung.....	140
Manual VP100/NET Display configuration.....	141
Global Configuration File.....	143
Global Option File.....	144
Third party software.....	145
Operating System GNU/Linux.....	145
Samba.....	145
Network Time Protocol Version 4 (NTP).....	146
mini_httpd.....	146
GNU General Public License (GPL).....	147
Reference.....	151

## Quick Start

When booting the system the following message will be displayed while dots will be counted up in the lower line:

```
MEINBERG TIMESERVER      please wait...
.....
```

Main Menu will be displayed with some important status informations after booting has finished:

```
GPS: NORMAL OPERATION    Mon, 28.08.2006
NTP: Offset PPS: -50us   UTC  14:33:10
```

If the GPS receiver remains asynchronous (Refclock LED is still red after 12 minutes) the number of satellites in view and the good satellites are to check (press buttons „↓,ok,↓,ok,→,ok“ from main menu). The antenna has to be installed without any obstructions to the sky.

```
SATELLITE CONSTELLATION
In view: 8    Good: 8    Sel: 05 17 04 22
```

For first time installation enter TCP/IP address, netmask and default gateway. To get an overview of the current configuration press F2 from main menu. Press F2 again to enter SETUP configuration page. Please ask your administrator for proper TCP/IP configuration:

```
Global Cfg.      Services
-> Interfaces  <-
```

Then press 3 times the OK button to change to IPV4 ETH0 configuration page to enter the IP address, netmask and the default gateway:

```
SETUP:      Ipv4 LAN Parameter ETH0
Ipv4  ADDRESS: 192.168.10.200
```

**NOTE:** These settings are related to the first Ethernet connection (ETH0).

After this all further settings can be done via network interface, either by using a WEB browser or a Telnet Session.

Default user: **root**


Default password: **timeserver**

## **Network Timeserver with GPS synchronized time base**

LANTIME (Local Area Network Timeserver) provides a high precision time base to a TCP/IP network (Stratum-1-Server). The NTP (Network Time Protocol) is used to synchronize all NTP clients with the reference. The several LANTIME variants differ from each other by the time reference. A GPS receiver, a DCF77 receiver or an IRIG time code receiver can be integrated as an internal reference as well as a combination of these references (hybrid system). External references are also possible. M300 (equivalent to LANTIME/GPS) is a set of equipment composed of a satellite controlled clock GPS170, a single-board computer with integrated network board and a power supply, all installed in a metal 19" modular chassis and ready to operate. A simplified LINUX operating system is installed on the single-board computers flash disk. Eight push buttons and a 2 x 40 character LC display can be used to configure and monitor the time server. After the network connection has been established the time server can also be configured and monitored remotely from a workstation via TELNET or FTP. An integrated HTTP server enables access to the LANTIME by using an ordinary WEB browser.

# The Modular System LANTIME

LANTIME M300 is a set of equipment composed of a reference clock (e.g.: satellite controlled clock GPS170 or Time Code Receiver TCR5xx), a single-board computer SBC LX800 500 MHz with integrated network card, and a power supply unit NLP65, all installed in a metal desktop case and ready to operate. The interfaces provided by LANTIME are accessible via connectors in the rear panel of the case. Details of the components are described below.

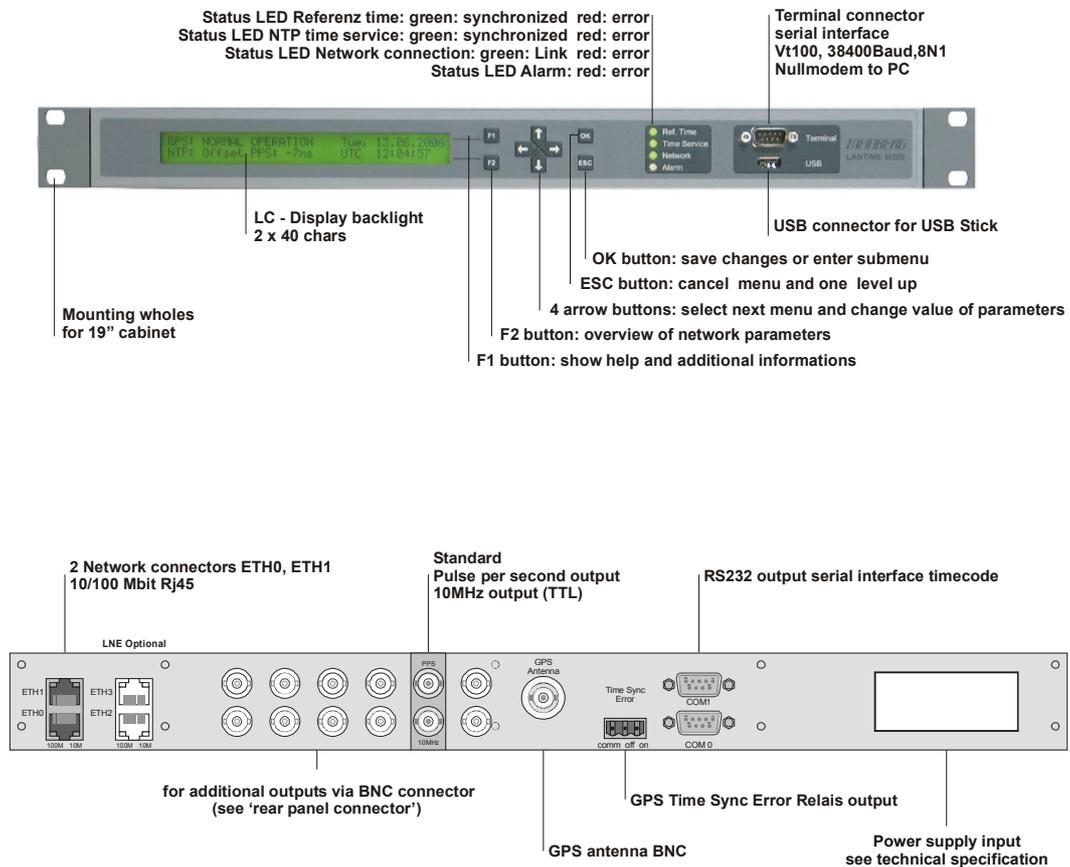

The implemented NTPD distributes the reference time from the GPS receiver cyclic in the network. Information on the NTPD is monitored on the LC display or can be inquired via the network.

The installation of LANTIME is very easy for the system/network administrator. The network address, the netmask and the default gateway have to be configured from the front panel of LANTIME. The network address or the equivalent name of LANTIME has to be shown to all NTP clients in the TCP/IP network.

As well as NTP the Linux system also supports a number of further network protocols: HTTP(S), FTP, SSH and Telnet. Because of this remote configuration or status requests can come from any WEB browser. This access via the network can be deactivated. Changes in the receiver status, errors or other important events are logged either on the local Linux system or on an external SYSLOG-Server. In addition messages can be sent to a data center via SNMP traps or automatically generated e-mails where they can be recorded. Furthermore all alarm messages can be displayed by the large display VP100/20/NET that is accessed via network connection. In order to avoid a service interruption several LANTIME NTP servers can be installed in the same network to obtain redundancy.

## Supported Network Services

The following network services are provided via RJ45 10/100Base-T Ethernet (Auto sensing):

- NTP v2, v3, v4
  - NTP broadcast mode
  - NTP multicast
  - NTP symmetric keys
  - NTP Autokey
- Simple Network Time Protocol (SNTP)
- TIME
- SNMP v1,2,3 with extended SNMP-Agent and SNMP-Traps for NTP and reference clock status
- DHCP Client
- NFS
- TELNET
- FTP
- HTTP
- HTTPS with Openssl2
- SSH2 Secure Shell Login
- Alarm messages via e-mail
- IPv6
  - 3 global IPv6 addresses configurable
  - Autoconf Feature to be disabled
  - supported network services: NTP, HTTP, HTTPS, SNMP, SSH
- Windows „net time“ via NETBIOS
- Winpopup (Window Mail)

## **Additional Features and Options**

- external NTP timeserver
- free configuration of NTP: thereby MD5 authentication and access control via address & mask restriction
- extended menu guidance for configuration and monitoring via Telnet, SSH or serial terminal interface
- optional up to 3 RJ45/10/100 Mbit Ethernet interfaces
- extended HTTP statistic support with long-term graphic and access statistic to NTP
- alarm messages can be displayed on external large display VP100/20/NET
- USB memory stick slot for extended functionality: software update, transfer of secure certificates, log files and configurations, keypad locking

## **User Interface**

- terminal connection via serial interface, status LED
- Web browser interface with graphical statistic of the one-day cycle offsets
- Telnet or Secure Shell Login for password protected operation of the Linux operating system
- FTP access for updating the operating system and downloading log files
- Simple Network Management Protocol for automatically SNMP-Traps in case of alarm
- SYSLOG messages can be passed to different computers
- configurable e-mail notification
- Simulation of a synchronous radio clock in order to operate without antenna

## **Options**

- up to two further Ethernet RJ45 connectors
- Frequency and pulse outputs via BNC connectors (e.g. 10 MHz, 2.048 MHz, PPS)
- higher free running accuracy with optional oscillators (OCXO)
- IRIG-B outputs
- ANZ14/NET or VP100/20/NET as display connected via network

## Why to use a Network Timeserver

A network timeserver should be used if accurate time is essential for undisturbed operation. It is possible to synchronize computers in a network using Public Domain Time servers over the Internet, but there are good reasons not to use them:

- The possibility to send notification via e-mail or SNMP-Trap to an administrator in the event of any synchronisation failure.
- The computers in the network do not have a reliable internet connection.
- The computers in the network cannot rely on the availability of external timeservers. Most operators of these timeservers do not guarantee continuous availability nor the accuracy of their service.
- NTP is able to compensate for the propagation delay of the network packets only in case of “usual” internet traffic. However, if unforeseen occurrences cause badly fluctuating propagation times, it is possible that the time synchronisation is disturbed. Reasons for this may be: hacker attacks, numerous upcoming new viruses etc.
- An own timeserver cannot be easily compromised by external sources.

## Network Time Protocol (NTP)

NTP is a common method for synchronization of hardware clocks in local and global networks. The basic concept, version 1 [Mills88], was published in 1988 as RFC (Request For Comments). Experiences made from the practical use in Internet was followed by version 2 [Mills89]. The software package NTP is an implementation of the actual version 3 [Mills90], based on the specification RFC-1305 from 1990 (directory doc/NOTES). Permission to use, copy, modify and distribute this software for any purpose and without fee is hereby granted (read File COPYRIGHT).

NTP's way of operation is basically different from that of most other protocols. NTP does not synchronize all connected clocks, it forms a hierarchy of timeservers and clients. A level in this hierarchy is called a *stratum*, and Stratum-1 is the highest level. Timeservers of this level synchronize themselves by a reference time source, such as a radio controlled clock, GPS-receiver or modem time distribution. Stratum-1-Servers distribute their time to several clients in the network which are called Stratum-2.

A high precision synchronization is feasible because of the several time references. Every computer synchronizes itself by up to three valued time sources. NTP enables the comparison of the hardware times and the adjustment of the own clock. A time precision of 128 ms, often better than 50 ms, is possible.

## **NTP Target**

The software package NTP was tested on different UNIX systems. Many UNIX systems have pre-installed a NTP client. Only some configurations have to be made (/etc/ntp.conf). NTP clients as freeware or shareware are also available for the most other operating systems like Windows XP/2000/NT/95/98/3x, OS2 or MAC. The following WEB site is recommended to get the latest version of NTP: "<http://www.eecis.udel.edu/~ntp/>". More information you can find on our web page at "<http://www.meinberg.de/english/sw/ntp.htm>".

## **GPS satellite controlled clock**

A Meinberg GPS170 satellite controlled radio clock is used as a reference time base. The satellite receiver clock GPS170 has been designed to provide extremely precise time to its user. The clock has been developed for applications where conventional radio controlled clocks can not meet the growing requirements in precision. High precision available 24 hours a day around the whole world is the main feature of the new system which receives its information from the satellites of the Global Positioning System.

The Global Positioning System (GPS) is a satellite-based radio-positioning, navigation, and time-transfer system. It was installed by the United States Department of Defence and provides two levels of accuracy: The Standard Positioning Service (SPS) and the Precise Positioning Service (PPS). While PPS is encrypted and only available for authorized (military) users, SPS has been made available to the general public.

GPS is based on accurately measuring the propagation time of signals transmitted from satellites to the user's receiver. A nominal constellation of 21 satellites together with 3 active spares in six orbital planes 20000 km over ground provides a minimum of four satellites to be in view 24 hours a day at every point of the globe. Four satellites need to be received simultaneously if both receiver position (x, y, z) and receiver clock offset from GPS system time must be computed. All the satellites are monitored by control stations which determine the exact orbit parameters as well as the clock offset of the satellites' on-board atomic clocks. These parameters are uploaded to the satellites and become part of a navigation message which is retransmitted by the satellites in order to pass that information to the user's receiver.

The high precision orbit parameters of a satellite are called ephemeris parameters whereas a reduced precision subset of the ephemeris parameters is called a satellite's almanac. While ephemeris parameters must be evaluated to compute the receiver's position and clock offset, almanac parameters are used to check which satellites are in view from a given receiver position at a given time. Each satellite transmits its own set of ephemeris parameters and almanac parameters of all existing satellites.

## **GPS170 Features**

The hardware of GPS170 is a 100 mm x 160 mm microprocessor board. The front panel integrates a 2 x 40 character LC display, two LED indicators and 5 push buttons. The receiver is connected to the antenna/converter unit by a 50  $\Omega$  coaxial cable (refer to "Mounting the Antenna"). Feeding the antenna/converter occurs DC insulated via the antenna cable. Optionally an antenna splitter for up to four receivers connected to one antenna is available.

The navigation message coming in from the satellites is decoded by GPS170's microprocessor in order to track the GPS system time with an accuracy of better than 500 ns or 250 ns (OCXO). Compensation of the RF signal's propagation delay is done by automatic determination of the receiver's position on the globe. A correction value computed from the satellites' navigation messages increases the accuracy of the board's TCXO or OCXO to  $10^{-9}$  and automatically compensates the oscillators aging. The last recent value is restored from the battery buffered memory at power-up.

## **Time Zone and Daylight Saving**

GPS system time differs from the universal time scale (UTC) by the number of leap seconds which have been inserted into the UTC time scale after GPS had been initiated in 1980. The current number of leap seconds is part of the navigation message supplied by the satellites, so GPS170's internal real time is based on UTC. Conversion to local time including handling of daylight saving year by year can be done by the receiver's microprocessor if the corresponding parameters are set up by the GPS Monitor (included Windows software).

Internally LANTIME always runs on UTC based time. NTP calculates this UTC time from the GPS receiver's local time. The time zone of LANTIME is fixed to UTC. However, the time monitored on the LC display is the GPS receiver's local time.

## Mounting the GPS Antenna

The GPS satellites are not stationary but circle round the globe in a period of about 12 hours. They can only be received if no building is in the line-of-sight from the antenna to the satellite, so the antenna/converter unit must be installed in a location from which as much of the sky as possible can be seen. The best reception is given when the antenna has a free view of 8° angular elevation above the horizon. If this is not possible the antenna should be installed with a mostly free view to the equator because of the satellite courses which are located between latitudes of 55° North and 55° South. If this is not possible problems occur especially when at least four satellites for positioning have to be found.


The antenna/converter unit can be mounted on a pole with a diameter up to 60 mm or on a wall. A 50 cm plastic tube, two holders for wall-mounting and clamps for pole-mounting are added to every GPS170. A standard coaxial cable with 50 Ω impedance should be used to connect the antenna/converter unit to the receiver. The maximum length of cable between antenna and receiver depends on the attenuation factor of the used coaxial cable.

Example:

Type of cable	diameter Ø [mm]	Attenuation at 100MHz [dB]/100m	max. length [m]
RG58/CU	5mm	15.9	300 <sup>1</sup>
RG213	10.5mm	6.9	600 <sup>1</sup>
1)This specifications are made for antenna/converter units produced after January, 2005			
The values are typically ones; the exact ones are to find out from the data sheet of the used cable.			

Up to four GPS170 receivers can be run with one antenna/converter unit by using the optional antenna splitter. The total length of one antenna line between antenna, splitter and receiver must not be longer than the max. length shown in the table above. The position of the splitter in the antenna line does not matter. When installing the high voltage protector CN-UB/E (CN-UB-280DC) be aware to set it directly after reaching indoor. The CN-UB/E is not for outdoor usage.

# Assembly with CN-UB/E

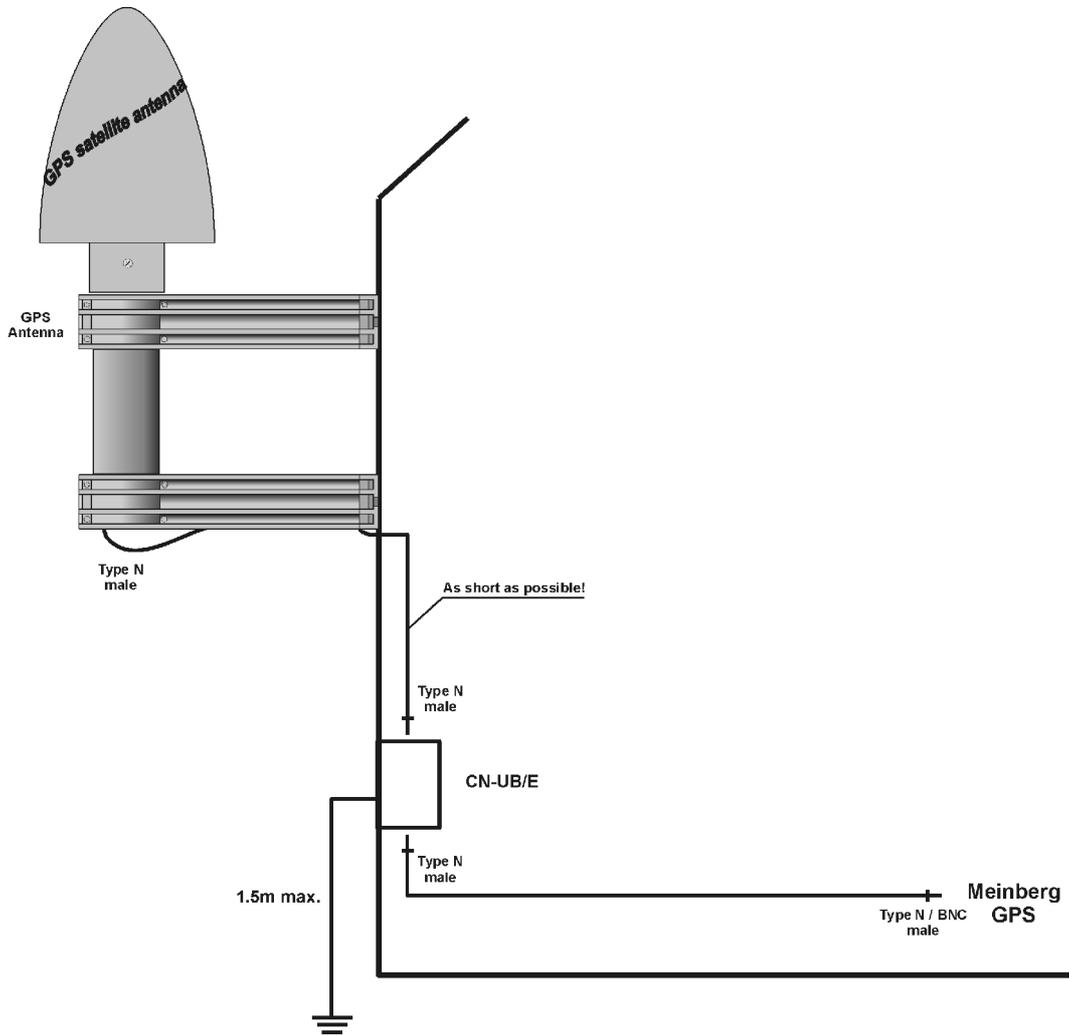

## Booting the GPS receiver

If both, the antenna and the power supply, have been connected the system is ready to operate. About 2 minutes after power-up the receiver's oscillator has warmed up and operates with the required accuracy. If the receiver finds valid almanac and ephemeris data in its battery buffered memory and the receiver's position has not changed significantly since its last operation the receiver can find out which satellites are in view now. Only a single satellite needs to be received to synchronize and generate output pulses, so synchronization can be achieved maximally one minute after power-up.

If the receiver position has changed by some hundred kilometers since last operation, the satellites' real elevation and Doppler might not match those values expected by the receiver thus forcing the receiver to start scanning for satellites. This mode is called **Warm Boot** because the receiver can obtain ID numbers of existing satellites from the valid almanac. When the receiver has found four satellites in view it can update its new position and switch to **Normal Operation**. If the almanac has been lost because the battery had been disconnected the receiver has to scan for a satellite and read in the current almanacs. This mode is called **Cold Boot**. It takes 12 minutes until the new almanac is complete and the system switches to Warm Boot mode scanning for other satellites.

## Booting the Single Board Computer

The LINUX operating system is loaded from a packed file on the flash disk of the single board computer to a RAM disk. All files of the flash disk are stored in the RAM disk after booting. Because of that it is guaranteed that the file system is in a defined condition after restart. This boot process takes approx. two minutes. During this time the following message appears on the display:

```
MEINBERG TIMESERVER      please wait...  
.....
```

After starting up the LINUX system the network function is initiated and the program for communication with the GPS and the NTPD (NTP daemon) is started. After that NTPD starts synchronization with the reference clocks (usual the hardware clock of the single board computer and the GPS receiver). Until synchronization is finished the following message is displayed:

```
GPS: NORMAL OPERATION    Mon, 28.08.2006  
NTP: sync to local       UTC 14:33:10  
-----  
GPS: NORMAL OPERATION    Mon, 28.08.2006  
NTP: not sync            UTC 14:33:10
```

For the synchronization of the NTPD with the GPS it is necessary that the GPS receiver is synchronous with the GPS time. In this case the following message is monitored on the display:

GPS: NORMAL OPERATION	Mon, 28.08.2006
NTP: Offset PPS: -50us	UTC 14:33:10

The second line shows the user that the NTPD is synchronized with the GPS with an offset of -50us. Because of the internal time of the NTP which is adjusted by a software PLL (phase locked loop) it takes a certain time to optimise this offset. The NTPD tries to keep the offset below  $\pm 128$  ms; if the offset becomes too large the system time is set with the GPS time. Typically values for the offset are  $\pm 5$  ms after the NTPD has already synchronized.

## Configuration User Interface

There are several ways to configure the LANTIME parameters:

- Command Line Interface (CLI) via TELNET
- Command Line Interface via SSH
- Command Line Interface via serial terminal in front panel (38400/8N1/VT100)
- HTTP Interface
- Secure HTTP Interface (HTTPS)
- Front panel LCD Interface
- SNMP Management

To put LANTIME into operation for the first time an IP address is entered via the front panel keys and LC display (refer to: DHCP IPv4 or AUTOCONF IPv6). LANTIME variants with serial terminal connector in the front panel can be configured via serial terminal (38400Baud/8N1/VT100) can be configured via the serial interface in the front panel, running a terminal software e.g. on a laptop. If once the IPv4 address, netmask and IPv4 GATEWAY are configured, or the network interface is initialized by IPv6 SCOPE-LINK, the LANTIME is accessible from any computer in the network (remote).

To set up a TELNET connection the following commands are entered:

```
telnet 198.168.10.10 // LANTIME IP address  
user: root  
password: timeserver
```

With “setup” the configuration program is started.

To set up a SSH connection the following commands are entered:

```
ssh root@198.168.10.10 // LANTIME IP address  
password: timeserver
```

With “setup” the configuration program is started.

To set up a HTTP connection the following address is to enter in a web browser:

```
http://198.168.10.10 // LANTIME IP address  
password: timeserver
```


To set up a Secure HTTP (HTTPS) connection the following address is entered in a web browser:

```
https://198.168.10.10 // LANTIME IP address  
password: timeserver
```

## The menus in Detail

### Root Menu

The root menu is shown when the receiver has completed initialization after power-up. With the four arrow buttons and the buttons „OK“, „ESC“, „F1“ and „F2“ the navigation and setting of parameters can be managed. Main menu can be reached by pressing „ESC“ some times. The main menu reflect some of the main parameters of the time server. First line displays the status of the Reference Clock. The text "NORMAL OPERATION" might be replaced by "COLD BOOT", "WARM BOOT" or "UPDATE ALMANAC". If the antenna is disconnected or not working properly, the text "ANTENNA FAULTY" is displayed instead.

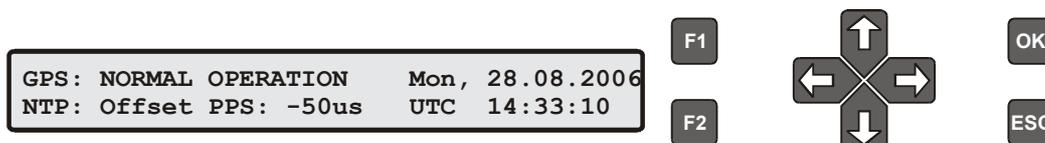

Current time and date of the timeserver with the name of the time zone (NTP uses UTC time zone) will be monitored on the right side. If the "IGNORE LOCK" option is enabled an "\*" will be shown behind the time.



The multicolor LEDs will reflect the current state of the device:

#### „Ref. Time“

green: the reference clock (e.g. integrated GPS) produce valid time.  
red: the reference clock produce no valid time (e.g. not synchronized)

#### „Time Service“

green: NTP has been synchronized to reference clock.  
red: NTP is not synchronous to reference clock or sync to „local clock“

#### „Network“

green: all watched network ports has been “link up“ detected  
red: at least one of the watched network ports (look at „Setup Device Parameter / Check Network Linkup“) is not connected


#### „Alarm“

off: no error at moment  
ret: general error – more information will be shown on display.

When pressing the „OK“ button from main menu the version of the LANTIME software, the NTP and the LINUX kernel version will be displayed.


```
TYP:ELX800  GPS170  M3x V5.26  2.6.12
SN:030100000000      NTP:  4.2.0
```

The following main menus will be displayed when pressing the „UP“ and „DOWN“ arrow buttons:

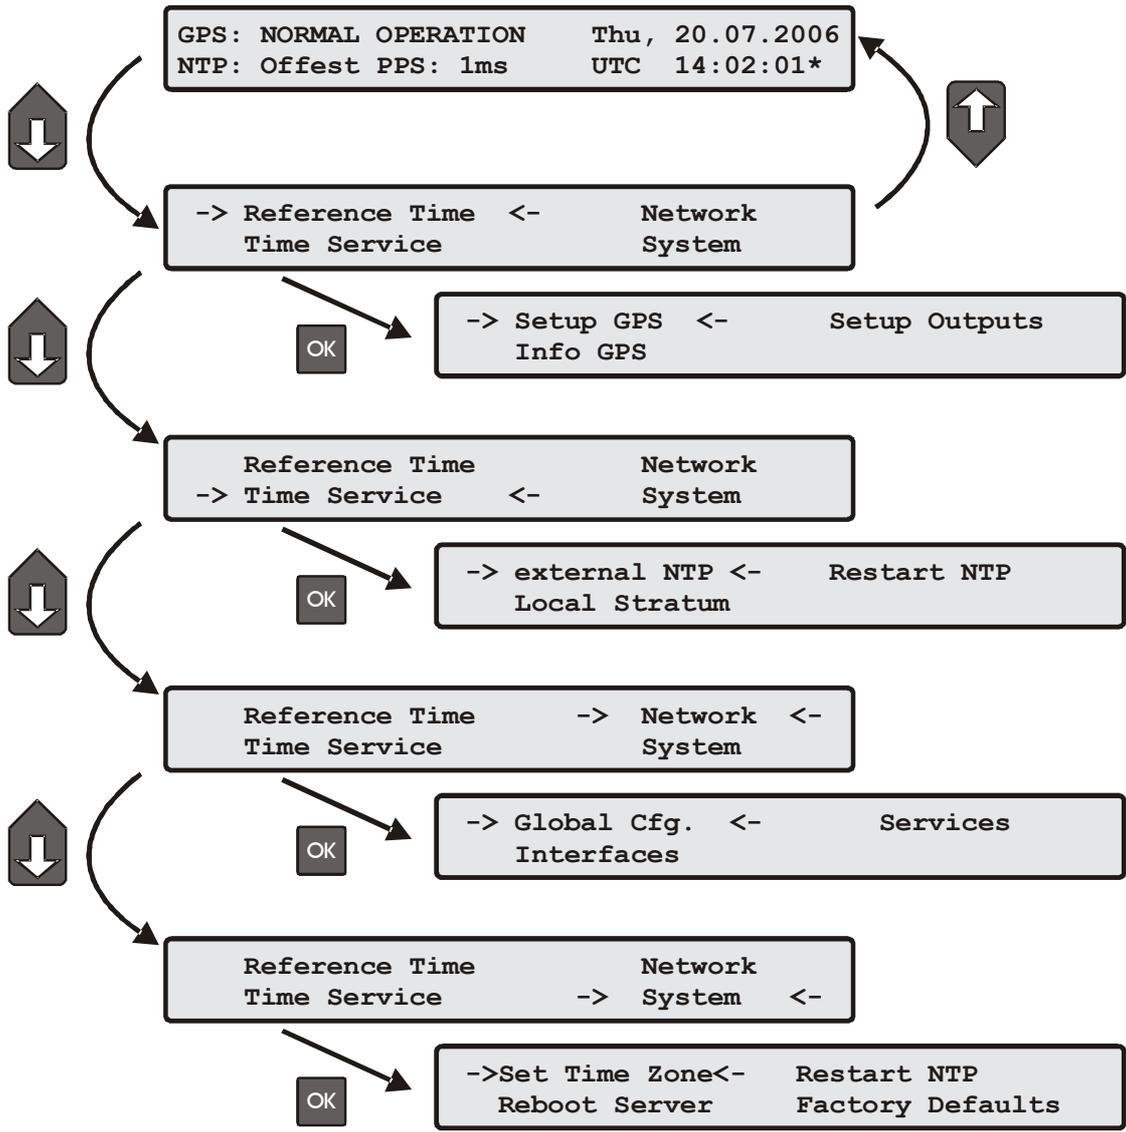


## Menü: Reference Time

The Reference Clock menu and all its sub menus will manage all status information and parameters of the reference clock.

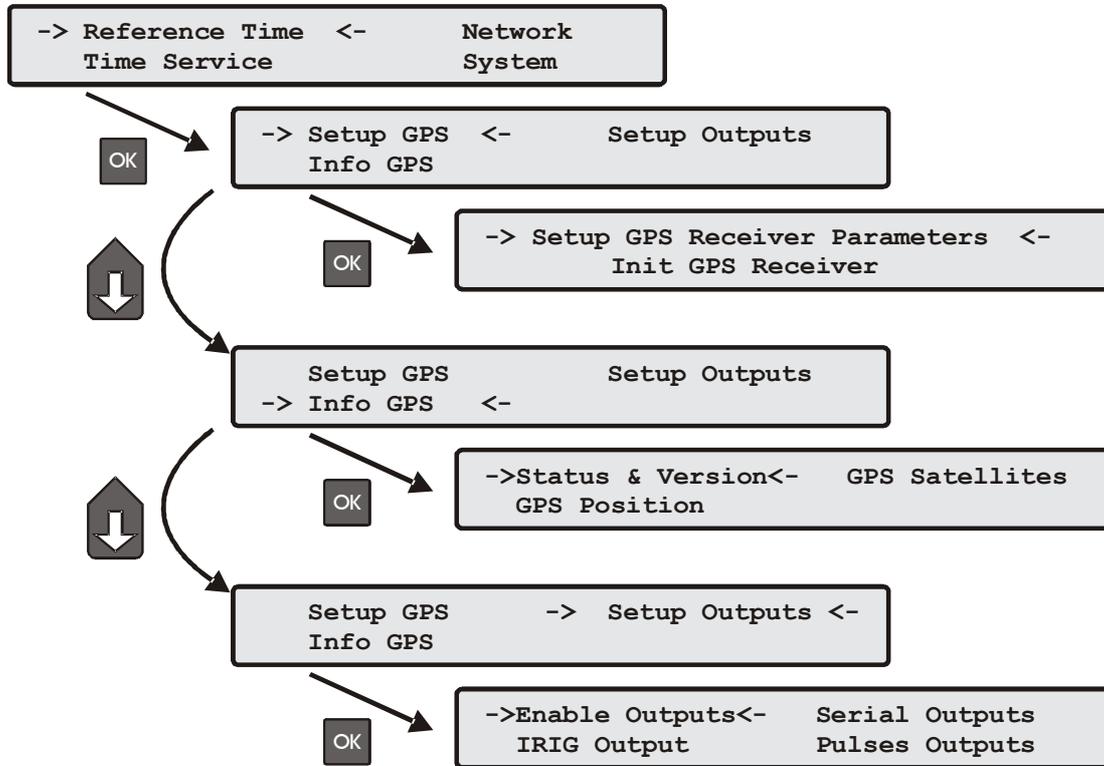

To enter the following sub menus press the „OK“ or right arrow button.

## Setup GPS Receiver Parameters

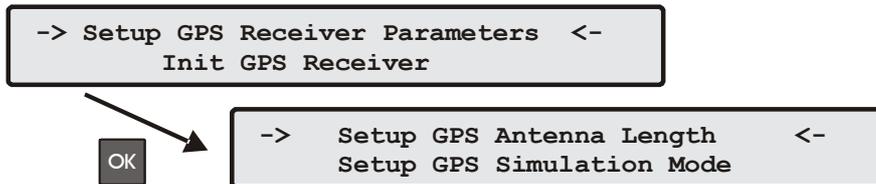

## Set Antenna Cable Length

This menu asks the user to enter the length of the antenna cable. The received time frame is delayed by approx. 5ns per meter antenna cable. The receiver is able to compensate this delay if the exact cable length is given. The default value is 20m. The maximum value that can be entered is 500 m (only with low loss cable).


```
Set Antenna Cable Length  
of GPS receiver: 020m
```

## Set GPS Receiver Simulation Mode

Enabling this menu lets the user run the LANTIME without antenna. Normally the NTPD loses synchronization with the GPS when the antenna is disconnected or the GPS did not receive enough satellites (red Ref.Time LED is turned on). When Simulation Mode is enabled the status information from the GPS is fixed to SYNC. So it is possible to set the NTPD with any other time entered by the SETUP INITIAL TIME menu. Usually this menu should be disabled. If this option is enabled an "\*" will be shown behind the time string in the root menu.

```
Set GPS Receiver Simulation Mode  
disabled
```

## Init GPS Receiver

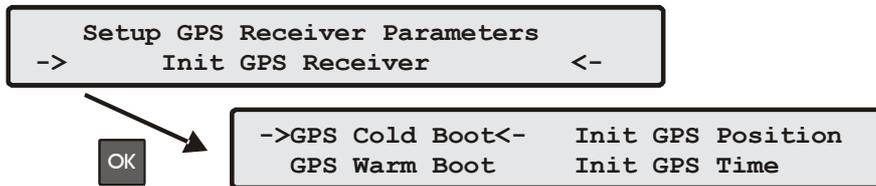

### Initiate Cold Boot of GPS Receiver

This menu lets the user initialize all GPS data's, e.g. all saved satellite data will be cleared. The user has to acknowledge this menu again before the initialization starts. The system starts operating in the COLD BOOT mode and seeks for a satellite to read its actual parameters.

```
Initiate COLD BOOT of GPS receiver
Press F2 to confirm
```

### Initiate Warm Boot of GPS Receiver

This menu lets the user force the receiver into the Boot Mode. This may be necessary when the satellite data in the memory are too old or the receiver position has changed by some hundred kilometers since last operation. Synchronization time may be reduced significantly. If there is valid satellite data in the memory the system starts in the WARM BOOT mode, otherwise the system changes into COLD BOOT to read new data.

```
Initiate WARM Boot of GPS receiver
Press F2 to confirm
```

## Init GPS Position

When the receiver is primarily installed at a new location far away from the last position saved in the receiver's memory the satellites in view and their Doppler will differ so much from those expected due to the wrong position that GPS has to scan for satellites in Warm Boot mode. Making the new approximately known position available to the receiver can avoid Warm Boot and speed up installation.

```
Set Initial Position
LAT: 51.1234  LON:10.2111  ALT: 120m
```


## Init GPS Time

If the receiver's on-board real time clock keeps a wrong time the receiver is unable to compute the satellites' correct elevation angles and Doppler. This sub menu enables the user to change the receiver's system time for initialization. After the receiver has locked, its real time clock will be adjusted using the information from the satellites.

```
Set Initial Time
MESZ 14:26:00 29.08.2006
```

When the antenna is disconnected it is possible to set the LANTIME with any time. Note that the NTP will not synchronize to a GPS losing its reception or if the deviation to the system time is larger than 1024 seconds. In this case the menu Simulation Mode has to be active. After setting the clock manually the system time will be set and the NTP will be restarted.

## Info GPS

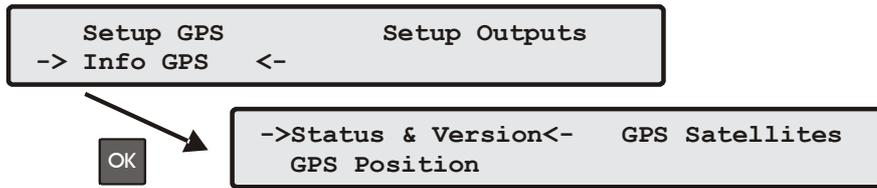

## GPS Status & Version

```
Reference Clock GPS State: SYNC  
GPS170 v1.17 S/N: 024000000000 OCXO HQ
```

This first menu will monitor the current state („sync“ or „not sync“). The next line will reflect the firmware version, the serial number of the internal GPS and the type of the integrated oscillator.

## GPS Receiver Position

This menu shows the current receiver position. The „OK“ key lets the user select one of three formats. The default format is geographic latitude, longitude and altitude with latitude and longitude displayed in degrees, minutes and seconds. The next format is geographic too, with latitude and longitude displayed in degrees with fractions of degrees. The third format displays the receiver position in earth centered, earth fixed coordinates (ECEF coordinates). The first two formats are shown below:


```
GPS RECEIVER POSITION  
LAT: 51.1234 LON:10.2111 ALT: 120m
```

## GPS Satellite Constallation

The SV constellation menu gives an overview of the current satellites (SVs) in view. The display shows the number of satellites with an elevation of 5° or more (In view), the number of satellites that can be used for navigation (Good) and the selected set of satellites which are used to update the receiver position (Sel).

```
SATELLITE CONSTELLATION
In view: 8   Good: 7   Sel: 05 22 17 09
```

## Setup GPS Outputs

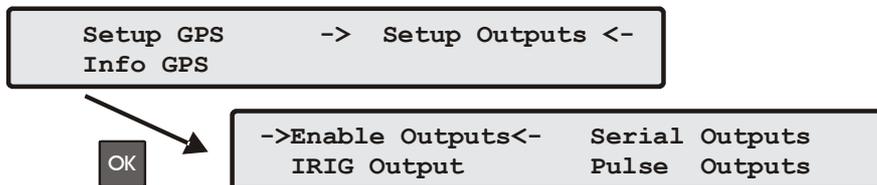

## GPS Enable Outputs

This menu lets the user configure at which time after power up the serial ports, pulse outputs, and frequency synthesizer output are to be enabled. Outputs which are shown to be enabled **always** will be enabled immediately after power-up. Outputs which are shown to be enabled **if sync** will be enabled after the receiver has decoded the signals from the satellites and has checked or corrected its on-board clock. The default setting for all outputs is **if sync**.

```
Enable Outputs
Pulses: always   Serial: always
```

## Serial Outputs

```
->Setup COM 0 <- Setup Time Zone
Setup COM 1
```

This menu lets the user configure the baud rate and the framing of the serial RS232 port to one of the following values:

Baudrate: 300 bis 19200  
Datenformat: 7E2, 8N1, 8E1, 8O1

COM provides a time string once per second, once per minute or on request. If the „on request“ is activated you have to send the character „?“ to get the timestring.

Defaulteinstellung: COM: 19200 baud, 8N1, per second

```
Serial Port Parameter
Speed, Framing, Mode, Type
```

This topic is used to select one of several different types of serial time strings or the capture string for each serial port.

The following time strings can be selected. All time strings are described in the appendix at the end of this documentation.

- Standard Meinberg-Telegramm
- GPS Capture-Telegramm
- SAT-Telegramm
- UNI-Erlangen-Telegramm
- NMEA-Telegramm (RMC)
- SPA-Telegramm
- Computime-Telegramm
- Sysplex1-Telegramm
- RACAL-Telegramm

## Setup Time Zone of Serial Outputs

The time zone of the GPS receiver can be set up. These parameters will affect the serial output lines and the time code (IRIG) outputs. The internal time zone of the timeserver and the time of NTP will always be UTC. The time monitored in the main menu will be the time of the NTP.

This menu lets the user enter the names of the local time zone with daylight saving disabled and enabled, together with the zones' time offsets from UTC. The left part of

the display shows the zone and offset if daylight saving is off whereas the right part shows name and offset if daylight saving is on. These parameters are used to convert UTC to local time, e.g. MEZ = UTC + 1h and MESZ = UTC + 2h for central Europe. The range of date daylight saving comes in effect can be entered using the next two topics of the setup menu.

```

DAYLIGHT SAVING OFF: |MEZ | +01:00h
DAYLIGHT SAVING ON : |MESZ | +02:00h

```

These two topics let the user enter the range of date for daylight saving to be in effect. Concerning parameter input both topics are handled identically, so they are described together in this chapter. Beginning and ending of daylight saving may either be defined by exact dates for a single year or using an algorithm which allows the receiver to re-compute the effective dates year by year. The figures below show how to enter parameters in both cases. If the number of the year is displayed as wildcards ('\*'), a day-of-week must be specified. Then, starting from the configured date, daylight saving changes the first day which matches the configured day-of-week. In the figure below March 25, 1996 is a Saturday, so the next Sunday is March 31, 1996.

All changeover rules for the daylight saving like "the first/the second/the second to last/the last Sunday/Monday etc. in the x-th month," can be described by the used format "first specified day-of-week after a defined date".

If the number of the year is not displayed as wildcards the complete date exactly determines the day daylight saving has to change (March 31, 1996 in the figures below), so the day-of-week does not need to be specified and therefore is displayed as wildcards.

```

DAYLIGHT SAV ON      Date: 25.03.****
Day of Week: Sun     Time: 2:00:00

DAYLIGHT SAV ON      Date: 31.03.1996
Day of Week: ***     Time: 2:00:00

DAYLIGHT SAV OFF     Date: 25.10.****
Day of Week: Sun     Time: 3:00:00


DAYLIGHT SAV OFF     Date: 25.03.1996
Day of Week: Sun     Time: 3:00:00

```

If no changeover in daylight saving is wanted, identical dates and times must be entered in both of the sub menus. In addition identical offsets for DAYLIGHT SAV ON/OFF should be configured in the sub menu TIMEZONE. After this a restart should be done.

## Menu: Time Service


The NTP configuration page is used to set up the additional NTP parameters needed for a more specific configuration of the NTP subsystem.

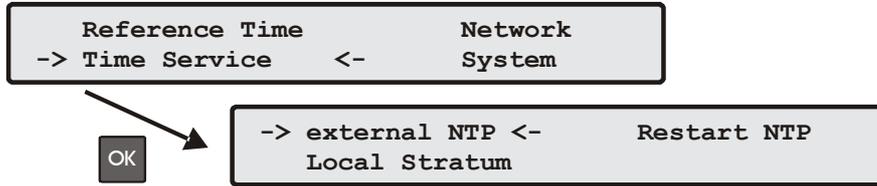

## Menu: external NTP


The default configuration of the timeserver consists of a local clock, which represents the hardware clock of your LANTIME system and the GPS reference clock. The local clock is only chosen as the NTP time reference after the GPS clock lost its synchronization. The stratum level of this local clock is set to 12, this ensures that clients recognize the switchover to the local clock and are able to eventually take further actions. The local clock can be disabled if the timeserver should not answer anymore when the reference clock is out of order.

Seven additional external NTP servers can be set up to provide a high grade of redundancy for the internal reference clock.

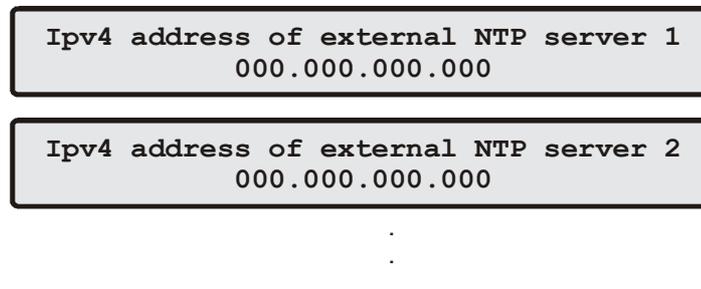

## Menu: Stratum of local clock

The local clock is only chosen as the NTP time reference after the GPS clock lost its synchronization. The stratum level of this local clock is set to 12, this ensures that clients recognize the switchover to the local clock and are able to eventually take further actions. The local clock can be disabled if the timeserver should not answer anymore when the reference clock is out of order. The field “Stratum of local clock” is used to change the stratum level of the local clock (see above), default is 12.



## **Menu: Restart NTP**

If the time of the reference clock has changed (e.g. while testing with different times) the system time has to be set with the time of the reference clock and the NTP has to be restarted.

`Set system time with refclock once  
and restart NTP`

## Programmable pulse (Option)

At the male connector type VG64 there are optionally three programmable TTL outputs (Prog Pulse 1-3), which are arbitrarily programmable.

### SETUP POUT X

This menu is used for configuration of the pulse outputs. There are three pulse outputs available (POUT 1-3).

```
Programmable Pulses Output
Out1:TIMER Out2:CYCLIC Out3:PASSIV
```

With the arrow key right or OK Button the parameters of each programmable pulse output can be set:

```
--> Programmable Pulses Output 1 <--
Programmable Pulses Output 2
Programmable Pulses Output 3
```

Each programmable pulse output has its own Mode to be set. With the arrow keys up and down the mode can be selected:

```
---> POUT1 Mode PASSIV <---
POUT1 Mode TIMER
POUT1 Mode SINGLE
POUT1 Mode CYCLIC
POUT1 Mode PPS
POUT1 Mode PPM
POUT1 Mode PPH
```

### Mode

This field selects the mode of operation of an output. Possible modes are PASSIV, TIMER, SINGLE, CYCLIC, PPS, PPM and PPH.

## Timer mode

```
POUT1 TIMER1:  output active:low  
ON: 10:50:00  OFF: 11:00:00
```

```
POUT1 TIMER2:  output active:low  
ON: 13:00:00  OFF: 14:00:00
```

```
POUT1 TIMER1:  output active:low  
ON: 23:45:00  OFF: 09:30:00
```

If Timer mode is selected, a window as shown above is displayed. The switching plan is assigned per day. Three turn-on and turn-off times are programmable for each output. If a switching time has to be configured, only the turn-on and turn-off time must be programmed. Thus the example shows switching times from 10:50 to 11:00, 13:00 to 14:00 and 23:45 to 09:30. A turn-off time earlier than the turn-on time would cause the output to be enabled over midnight. For example a program '**ON Time**' 10:45:00, '**OFF Time**' 9:30:00 would cause an active output from 10:45 to 9:30 (the next day!). If one or more of the three switching times are unused just enter the same time into the fields '**ON Time**' and '**OFF Time**'. In this case the switch time does not affect the output.

## Single Pulse

Selecting **Single Pulse** generates a single pulse of defined length once per day.

```
POUT1 SINGLE:  output active:low  
TIME: 12:00:00  LNG: 00.10 sec
```

You can enter the time when the pulse is generated in the field '**Time**'. The value in field '**LNG**' determines the pulse duration. A pulse duration from 10 msec to 10 sec in steps of 10 msec can be selected.

The example shows a single pulse at 12:00 every day with a duration of 100 ms.

## Cyclic mode

**Cyclic mode** is used for generating periodically repeated pulses.

```
POUT1 CYCLIC:  output active:low  
TIME: 00:00:02  LNG: 00.10 sec
```

The value in field '**Time**' determines the time between two consecutive pulses (2 sec in example above). This cycle time must be entered as hours, minutes and seconds. The pulse train is synchronized at 0:00 o'clock local time, so the first pulse of a day always occurs at midnight. A cycle time of 2 seconds for example, would cause pulses at 0:00:00, 0:00:02, 0:00:04 etc. Basically it is possible to enter any cycle time between 0 and 24 hours, however only a cycle times that causes a constant distance between all consecutive pulses make sense. For example a cycle time of 1 hour 45 minutes would generate a pulse every 6300 seconds (starting from 0 o'clock). The duration between the last pulse of a day and the first pulse of the next day (0:00:00 o'clock) would only be 4500 sec.

## PPS, PPM, PPH Modes

```
POUT1 Pulse Per Sec (PPS):  
output active:low  LNG: 00.10 sec
```

```
POUT1 Pulse Per Min (PPM):  
output active:low  LNG: 00.10 sec
```

```
POUT1 Pulse Per Hour (PPH):  
output active:low  LNG: 00.10 sec
```

These modes generate pulses of defined length once per second, once per minute or one per hour. '**Time**' determines the pulse duration (10 msec...10 sec). ***The respective output remains in active state, when selecting a pulse duration longer than 990ms in pulse per sec mode..***

## Menu: Synthesizer Frequency Output (Option)

The Frequency Synthesizer is an optional output.

```
Synthesizer Frequency Output
Frequency: 100.0 Hz      Phase: 090.0
```

This setup menu lets the user edit the frequency and phase to be generated by the on-board synthesizer. Frequencies from 1/8 Hz up to 10 MHz can be entered using four digits and a range. The range can be selected if the „UP“ or „DOWN“ key is pressed while the cursor is positioned on the frequency's units string. If the least significant range has been selected valid fractions of the frequency are .0, .1 (displayed as 1/8), .3 (displayed as 1/3), .5 and .6 (displayed as 2/3). Selection of 1/3 or 2/3 means real 1/3 or 2/3 Hz, not 0.33 or 0.66. If frequency is set to 0 the synthesizer is disabled.

The last line of the display lets the user enter the phase of the generated frequency from  $-360^\circ$  to  $+360^\circ$  with a resolution of  $0.1^\circ$ . Increasing the phase lets the signal come out later. Phase affects frequencies less than 10.00 kHz only, if a higher frequency is selected a message "(phase ignored)" informs the user that the phase value is ignored.

## Menu: TIME CODE IRIG (Option)


The Time Code IRIG is an optional output.

```
Time Code (IRIG, AFNOR, IEEE) Output
Code: B002+B122      Time: Local
```

This menu lets the user select the Timecodes to be generated by GPS-TC. Most IRIG-Codes do not carry any time zone information, hence UTC is selected for output by default. If desired, the clocks local time can be output by selecting "TIME: LOCAL".

Refer to chapter [Timecode](#) for details.


## Menu: Network

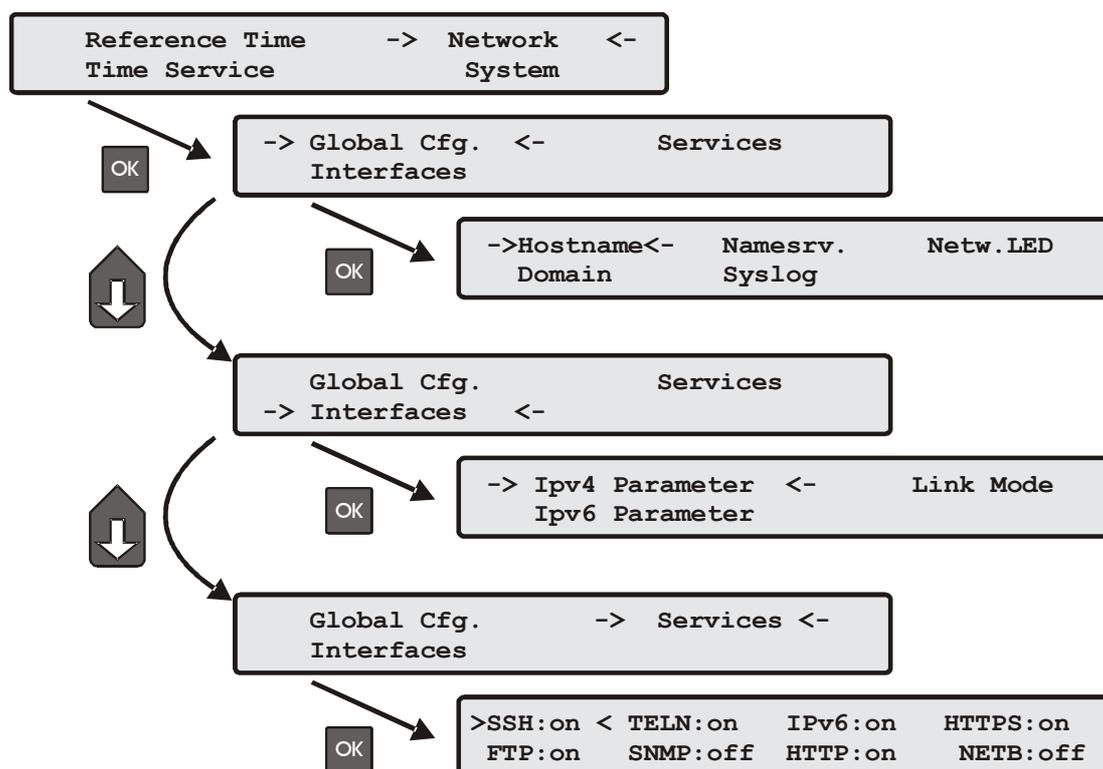

In this submenu the network configuration parameters related to the network interfaces can be changed. The submenus can be selected with the arrow keys and the “OK” button:

As soon as an IP address is configured, additional network configuration can be done via network connection with TELNET, SSH or the WEB interface. Ask your network administrator for network specific parameters. Every change of the network parameters will restart the NTP. All network specific parameters will be saved on the flash disk (/mnt/flash/config/global\_configuration) and will be reloaded after reboot. It is highly recommended not to edit this file manually but to configure the parameters via the several configuration interfaces (HTTP, CLI or SNMP). If this file is not present, an empty file will be created. See Appendix for the default settings of this file.

## Setup Global Configuration

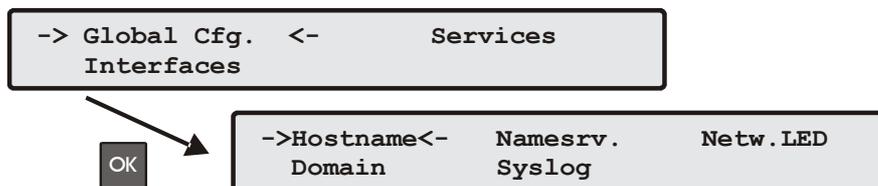

In this sub menu you can change the global network settings like host and domain name, nameserver and syslog server. Further name- or syslog servers can be set up via HTTP interface or CLI Setup. In the nameserver and syslog server fields you have to enter an Ipv4 address.

All information written to the LANTIME SYSLOG (/var/log/messages) can be forwarded to one or two remote SYSLOG servers. The SYSLOG daemon of this remote SYSLOG needs to be configured to allow remote systems to create entries. A Linux SYSLOG daemon can be told to do so by using the command “syslogd -r” when starting the daemon.

If you enter nothing in the SYSLOG server fields or specify 0.0.0.0 as the SYSLOG servers addresses, the remote SYSLOG service is not used on your LANTIME.


Please be aware of the fact that all SYSLOG entries of the timeserver are stored in „/var/log/messages“ and will be deleted when you power off or reboot the timeserver. A daily CRON job is checking for the size of the LANTIME SYSLOG and deletes it automatically if the log size is exceeding a certain limit.

By specifying one or two remote SYSLOG servers, you can preserve the SYSLOG information even when you need to reboot or switch off the LANTIME.


```
SETUP: Check Network LinkUp on LAN Ports
ETH0:x  ETH1:  ETH2:  ETH3:  PTP0:
```

The submenu „Netw. LED“ will monitor the network ports, which will be checked continuously if the network port is „LINKED UP“. If one of these ports has no link up, the network LED on the front panel will change to red. An „L“ for „LED“ indicates if the port is checked. Please navigate through the list of ports with the LEFT/RIGHT buttons and change the setting with the UP/DOWN buttons.

## Setup Network Interfaces

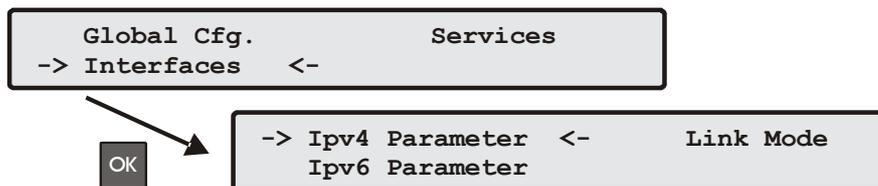

## Setup Network Ipv4 Parameter

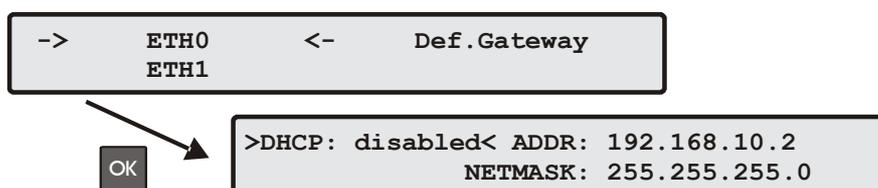

There is a separate configuration submenu for every physical network interface. If there is no DHCP client mode activated a static IP address for each interface can be entered. IPv4 addresses are built of 32 bits which are grouped in four octets, each containing 8 bits. You can specify an IP address in this mask by entering four decimal numbers, separated by a point “.”.

Example: 192.168.10.2


Additionally you can specify the IPv4 netmask and your default gateway address.

Please contact your network administrator, who can provide you with the settings suitable for your specific network.

If there is a DHCP (Dynamic Host Configuration Protocol) server available in your network, the LANTIME system can obtain its IPv4 settings automatically from this server. If you want to use this feature (again, you should ask your network administrator whether this is applicable in your network), you can change the DHCP Client parameter to “ENABLED”. Using DHCP is the default factory setting.

If the DHCP client has been activated, the automatically obtained parameters are shown in the appropriate fields (IPv4 address, netmask, gateway).

## Menu: Setup Ipv6 Parameter

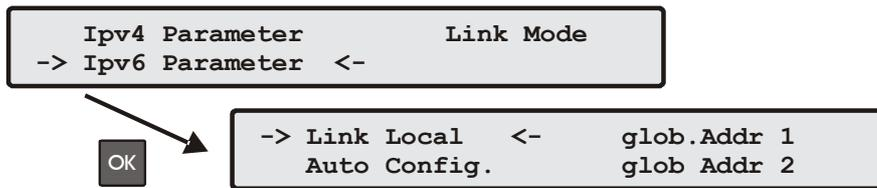

The IPv6 parameters can be configured via the front panel display for the first ethernet port (ETH0) only. Additional IPv6 configuration can be done via network connection with TELNET, SSH or the WEB interface.

You can specify up to three IPv6 addresses for your LANTIME timeserver (two via front panel display and another one via WEB interface). Additionally you can switch off the IPv6 autoconf feature. IPv6 addresses are 128 bits in length and written as a chain of 16 bit numbers in hexadecimal notation, separated with colons. A sequence of zeros can be substituted with “::” once.


If you enabled the IPv6 protocol, the LANTIME always gets a link local address in the format “fe80:: ...”, which is based upon the MAC address of the interface. If a IPv6 router advertiser is available in your network and if you enabled the IPv6 autoconf feature, your LANTIME will be set up with up to three link global addresses automatically.

## Menu: Link Mode




The parameters for speed and link mode of the net card can be changed with the menu item „Link Mode“. There are 5 modes available: Autosensing, 10 MBit/Half-Duplex, 100 MBit/Half-Duplex, 10 MBit/Full-Duplex, 100 MBit/Full-Duplex. Default setting is Autosensing.

## Menu: Setup Services

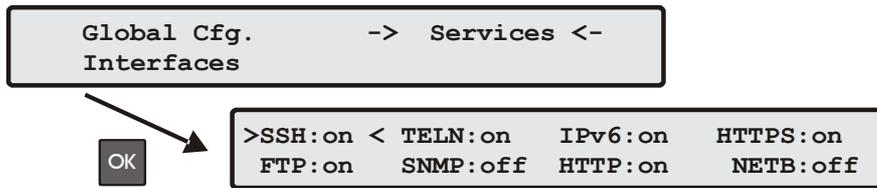

The possible network protocols and access methods can be configured. After pressing the OK button you can enable/disable SSH, TELNET, SNMP, FTP, IPV6, HTTP, HTTPS and NETBIOS by using the UP/DOWN Keys and navigate through the list with the LEFT/RIGHT keys. After you saved your settings with the “OK” button, all these subsystems are stopped and eventually restarted (only if they are enabled, of course).

## Menu: System

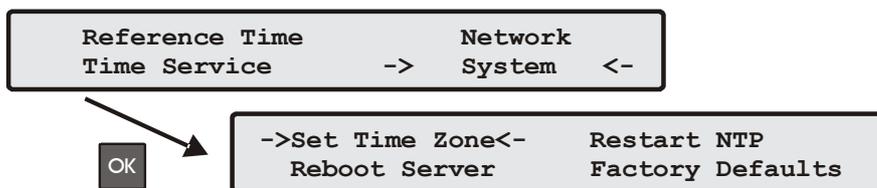

In this submenu system specific parameters can be configured.

With **Set time zone** the time zone displayed on the front panel display can be configured (see below).

With **Restart NTP** you can stop the currently running NTP daemon and restart it afterwards.

The command **Reboot time server** reboots the Linux operating system – the build-in reference clock will not be restarted.

When **Reset to factory defaults** is called, all system parameters will be reset to initial values. However the parameters of each network interface do not change.

### Set time zone

The time zone of the time that is shown on the front panel display can be set up here. The internal time zone of the timeserver and the time of NTP will always be UTC. These parameters will not affect the serial output lines and the timecode (IRIG) outputs. These parameters have to be configured in another menu (Reference Time->Setup Outputs)

This menu lets the user enter the names of the local time zone with daylight saving disabled and enabled, together with the zones' time offsets from UTC. The left part of the display shows the zone and offset if daylight saving is off whereas the right part shows name and offset if daylight saving is on. These parameters are used to convert UTC to local time, e.g. MEZ = UTC + 1h and MESZ = UTC + 2h for central Europe. The range of date daylight saving comes in effect can be entered using the next two topics of the setup menu.

```

DAYLIGHT SAVING OFF: |MEZ | +01:00h
DAYLIGHT SAVING ON : |MESZ | +02:00h

```

These two topics let the user enter the range of date for daylight saving to be in effect. Concerning parameter input both topics are handled identically, so they are described together in this chapter. Beginning and ending of daylight saving may either be defined by exact dates for a single year or using an algorithm which allows the receiver to re-compute the effective dates year by year. The figures below show how to enter parameters in both cases. If the number of the year is displayed as wildcards ('\*'), a day-of-week must be specified. Then, starting from the configured date, daylight saving changes the first day which matches the configured day-of-week. In the figure below March 25, 1996 is a Saturday, so the next Sunday is March 31, 1996.

All changeover rules for the daylight saving like "the first/the second/the second to last/the last Sunday/Monday etc. in the x-th month," can be described by the used format "first specified day-of-week after a defined date".

If the number of the year is not displayed as wildcards the complete date exactly determines the day daylight saving has to change (March 31, 1996 in the figures below), so the day-of-week does not need to be specified and therefore is displayed as wildcards.

```

DAYLIGHT SAV ON      Date: 25.03.****
Day of Week: Sun     Time: 2:00:00

DAYLIGHT SAV ON      Date: 31.03.1996
Day of Week: ***     Time: 2:00:00

DAYLIGHT SAV OFF     Date: 25.10.****
Day of Week: Sun     Time: 3:00:00

DAYLIGHT SAV OFF     Date: 25.03.1996
Day of Week: Sun     Time: 3:00:00

```


If no changeover in daylight saving is wanted, identical dates and times must be entered in both of the sub menus. In addition identical offsets for DAYLIGHT SAV ON/OFF should be configured in the sub menu TIMEZONE. After this a restart should be done.

## The LANTIME configuration interfaces


The LANTIME offers three different options for configuration and status management: Web interface, Command Line Interface Setup and SNMP. In order to use the SNMP features of your LANTIME, you need special software like management systems or SNMP clients. In order to use the web interface, all you need is a web browser (LANTIME supports a broad range of browsers).

In addition to the SNMP and web interface, you can also manage your LANTIME configuration via a command line interface (CLI), which can be used via a TELNET or SSH connection. A setup tool can be started after login, just type “setup” and press ENTER at the prompt.

There are only a few differences between the web interface and the CLI, most options are accessible from both interfaces (the CLI has no statistical functions).

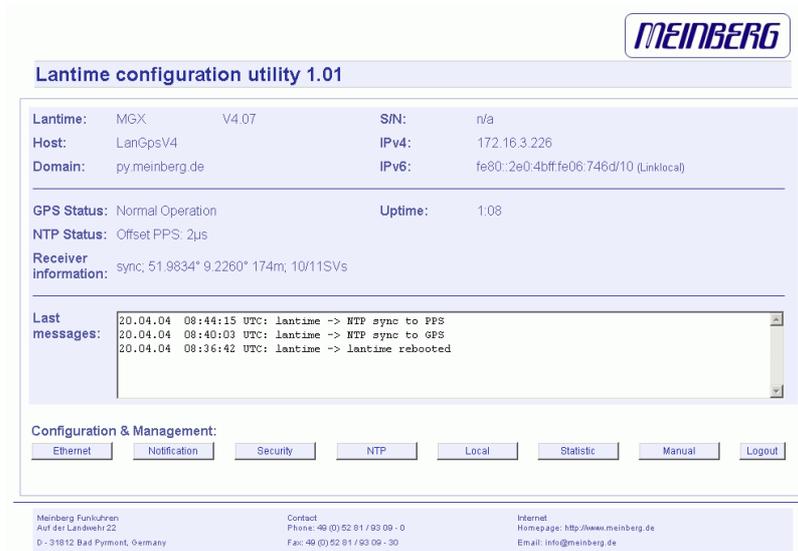

The screenshot shows the 'Lantime configuration utility 1.01' web interface. At the top right is the 'MEINBERG' logo. The main content area displays system information: Lantime: MGX V4.07, S/N: n/a, Host: LanGpsV4, IPv4: 172.16.3.226, Domain: py.meinberg.de, IPv6: fe80::2e0:4bff:fe06:746d/10 (LinkLocal). It also shows GPS Status: Normal Operation, Uptime: 1:08, NTP Status: Offset PPS: 2µs, and Receiver information: sync; 51.9834° 9.2260° 174m; 10/11SVs. A 'Last messages' section contains a log of events: '20.04.04 08:44:15 UTC: lantime -> NTP sync to PPS', '20.04.04 08:40:03 UTC: lantime -> NTP sync to GPS', and '20.04.04 08:36:42 UTC: lantime -> lantime rebooted'. At the bottom, there is a 'Configuration & Management' section with buttons for Ethernet, Notification, Security, NTP, Local, Statistic, Manual, and Logout. A footer contains contact information for Meinberg Funkuhren.

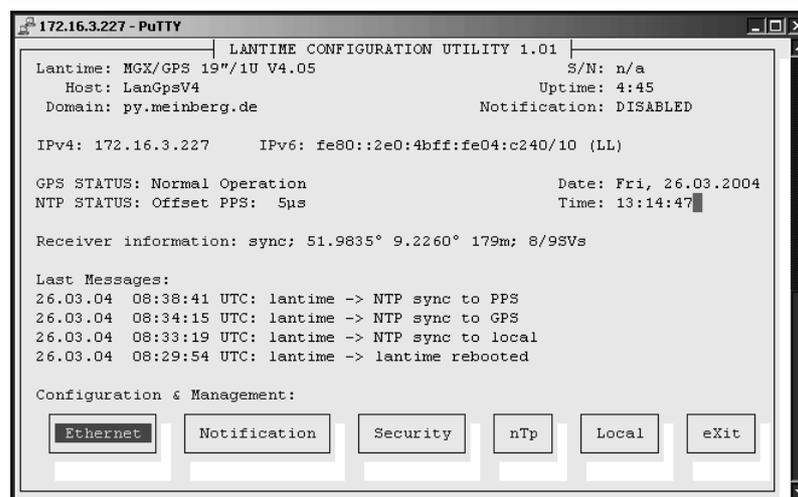

The screenshot shows the 'LANTIME CONFIGURATION UTILITY 1.01' CLI interface running in a PuTTY window titled '172.16.3.227 - PuTTY'. The output displays system information: Lantime: MGX/GPS 19"/1U V4.05, S/N: n/a, Host: LanGpsV4, Uptime: 4:45, Domain: py.meinberg.de, Notification: DISABLED, IPv4: 172.16.3.227, IPv6: fe80::2e0:4bff:fe04:c240/10 (LL), GPS STATUS: Normal Operation, Date: Fri, 26.03.2004, NTP STATUS: Offset PPS: 5µs, Time: 13:14:47, and Receiver information: sync; 51.9835° 9.2260° 179m; 8/9SVs. A 'Last Messages' section contains a log of events: '26.03.04 08:38:41 UTC: lantime -> NTP sync to PPS', '26.03.04 08:34:15 UTC: lantime -> NTP sync to GPS', '26.03.04 08:33:19 UTC: lantime -> NTP sync to local', and '26.03.04 08:29:54 UTC: lantime -> lantime rebooted'. At the bottom, there is a 'Configuration & Management' section with buttons for Ethernet, Notification, Security, nTp, Local, and eXit.

The above screen shots show the web interface and the Command Line Interface setup tool. The CLI setup tool cannot be used by more than one user at a time, the web interface can be used by more than one user in parallel, but the two or more running sessions may influence each other. We explicitly do not recommend the parallel usage of the configuration interfaces.


## The WEB interface

Connect to the web interface by entering the following address into the address field of your web browser:

**http://198.168.10.10**

(You need to replace 198.168.10.10 with the IP address of your LANTIME). If you want to use an encrypted connection, replace the <http://> with <https://> in the above address. You may be prompted to accept the SSL certificate of your LANTIME the first time you are connecting to the system via HTTPS.

In both HTTP and HTTPS mode, you will see the following login screen:

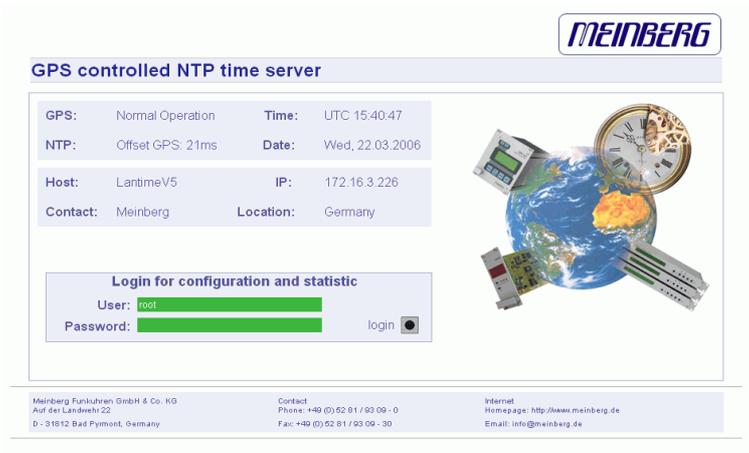

The screenshot shows the web interface for a Meinberg GPS controlled NTP time server. The page has a blue header with the 'MEINBERG' logo. Below the header, the title 'GPS controlled NTP time server' is displayed. The main content area is divided into two columns. The left column contains status information:

GPS:	Normal Operation	Time:	UTC 15:40:47
NTP:	Offset GPS: 21ms	Date:	Wed, 22.03.2006
Host:	LantimeV5	IP:	172.16.3.226
Contact:	Meinberg	Location:	Germany

The right column features an illustration of a globe with a clock and a GPS receiver. Below the status information is a login form with the title 'Login for configuration and statistic'. The form includes fields for 'User:' (containing 'root') and 'Password:', and a 'login' button. At the bottom of the page, there is a footer with contact information:

Meinberg Funkuhren GmbH & Co. KG Auf der Landwehr 22 D - 31812 Bad Pyrmont, Germany	Contact Phone: +49 (0) 52 81 / 93 09 - 0 Fac: +49 (0) 52 81 / 93 09 - 30	Internet Homepage: <a href="http://www.meinberg.de">http://www.meinberg.de</a> Email: <a href="mailto:info@meinberg.de">info@meinberg.de</a>
---	--	--

On this start page you see a short status display, which corresponds with the LC display on the front panel of the LANTIME unit. The upper line shows the operation mode of the GPS receiver. As well as “GPS: NORMAL OPERATION” you may also read “GPS: COLD BOOT”, “GPS: WARM BOOT” or “GPS: UPDATE ALMANACH”. If the connection to the antenna is broken, a “GPS: ANTENNA FAULTY” will appear.

In the upper right corner of the LC display the time and time zone can be found, below that you will find the date and weekday.

On the second line the systems reports the NTP status. During the initial synchronisation process a “NTP: not sync” indicates that the NTP system is not synchronised, this can also appear if the GPS loses synchronisation and the NTP switches back to its “LOCAL CLOCK” time source.

The GPS clock is connected to the LANTIME system internally by using a serial connection and additionally by using the second pulse. There are therefore 2 reference clocks used by NTPD, the GPS and PPS time source. You will find the two time sources in the status information of the NTPD. After the NTP is synchronised, the Display shows “NTP: Offset GPS: x” or “NTP: Offset PPS: x” where “x” is the actual offset to the GPS or PPS time source.

This page will be reloaded every 30 seconds in order to reflect the current status of the unit. Please bear this in mind when you try to login and enter your password. If you do not press ENTER or the Login button within 30 seconds, the user and password field is cleared and you have to start over again.

## Configuration: Main Menu

**MEINBERG**

**Lantime configuration utility 1.01**

<b>Lantime:</b>	MGX V4.07	<b>S/N:</b>	n/a
<b>Host:</b>	LanGpsV4	<b>IPv4:</b>	172.16.3.226
<b>Domain:</b>	py.meinberg.de	<b>IPv6:</b>	fe80::2e0:4bff:fe06:746d/10 (Linklocal)

---

**GPS Status:** Normal Operation      **Uptime:** 1:08

**NTP Status:** Offset PPS: 2µs

**Receiver information:** sync; 51.9834° 9.2260° 174m; 10/11SVs

---

**Last messages:**

```
20.04.04 08:44:15 UTC: lantime -> NTP sync to PPS
20.04.04 08:40:03 UTC: lantime -> NTP sync to GPS
20.04.04 08:36:42 UTC: lantime -> lantime rebooted
```

---

**Configuration & Management:**

[Ethernet](#)   [Notification](#)   [Security](#)   [NTP](#)   [Local](#)   [Statistic](#)   [Manual](#)   [Logout](#)

---

Meinberg Funkuhren  
Auf der Landwehr 22  
D - 31812 Bad Pyrmont, Germany

Contact  
Phone: 49 (0) 52 81 / 93 09 - 0  
Fax: 49 (0) 52 81 / 93 09 - 30

Internet  
Homepage: <http://www.meinberg.de>  
Email: [info@meinberg.de](mailto:info@meinberg.de)

After entering the right password, the main menu page shows up. This page contains an overview of the most important configuration and status parameters for the system.

The start page gives a short overview of the most important configuration parameters and the runtime statistics of the unit. In the upper left corner you can read which LANTIME model and which version of the LANTIME software you are using. This LANTIME software version is a head version number describing the base system and important subsystems. Below the version you will find the actual hostname and domain of your LANTIME unit, the IPv4 and IPv6 network address of the first network interface and on the right side the serial number, the uptime of the system (time since last boot) and the notification status.

In the second section the actual status of the GPS reference clock and the NTP subsystem is shown, additional information about the GPS receiver are also found here. This includes the number of satellites in view and the number of good satellites in view.

The third section shows the last messages of the system, with a timestamp added. The newest messages are on top of the list. This is the content of the file /var/log/messages, which is created after every start of the system (and is lost after a power off or reboot).

By using the buttons in the lower part of the screen, you can reach a number of configuration pages, which are described below.

# Configuration: Ethernet



- Ethernet
- Notification
- Security
- NTP
- Local
- Statistic
- Manual
- Main Menu

## Ethernet configuration

### Main network information:

Hostname:   
 Domainname:   
 Nameserver 1:   
 Nameserver 2:   
 Syslogserver 1:   
 Syslogserver 2:

### Default Gateways:

IPv4 Gateway:   
 IPv6 Gateway:

### Available network services:

	Telnet	FTP	SSH	HTTP	HTTPS	SNMP	NETBIOS
Active:	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

### Available internet protocols:

	IPv4	IPv6
Active:	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

### Available network interfaces: 3

#### Interface 0:

TCP/IP address:  IPv6 1:   
 Netmask:  IPv6 2:   
 DHCP-Client:  IPv6 3:   
 Net link mode:  Autoconf:   
 IP by Router Advertisement:   
 Link local:

#### Interface 1:

TCP/IP address:  IPv6 1:   
 Netmask:  IPv6 2:   
 DHCP-Client:  IPv6 3:   
 Net link mode:  Autoconf:   
 High availability bonding:  Link local:

#### Interface 2:

TCP/IP address:  IPv6 1:   
 Netmask:  IPv6 2:   
 DHCP-Client:  IPv6 3:   
 Net link mode:  Autoconf:   
 High availability bonding:  Link local:

### Additional network configuration:

- Show additional network configuration
- Edit additional network configuration
- Edit Samba Configuration

- Save settings
- Reset changes
- Back

[ top ]

Meinberg Funkuhren      Contact      Internet  
 Auf der Landwehr 22      Phone: +49 (0) 52 81 / 93 09 - 0      Homepage: <http://www.meinberg.de>  
 D - 31812 Bad Pyrmont, Germany      Fax: +49 (0) 52 81 / 93 09 - 30      Email: [info@meinberg.de](mailto:info@meinberg.de)

In the network configuration all parameters related to the network interfaces can be changed. In the first section you can change the hostname and domain name. You can also specify two nameserver and two SYSLOG server. In the nameserver and syslog server fields you may enter an IPv4 or IPv6 address (the syslog servers can be specified as a hostname, too).

All information written to the LANTIME SYSLOG (/var/log/messages) can be forwarded to one or two remote SYSLOG servers. The SYSLOG daemon of this remote SYSLOG needs to be configured to allow remote systems to create entries. A Linux SYSLOGD can be told to do so by using the command “syslogd -r” when starting the daemon.

If you enter nothing in the SYSLOG server fields or specify 0.0.0.0 as the SYSLOG servers addresses, the remote SYSLOG service is not used on your LANTIME.

Please be aware of the fact that all SYSLOG entries of the timeserver are stored in /var/log/messages and will be deleted when you power off or reboot the timeserver. A daily CRON job is checking for the size of the LANTIME SYSLOG and deletes it automatically, if the log size is exceeding a certain limit.

By specifying one or two remote SYSLOG servers, you can preserve the SYSLOG information even when you need to reboot or switch off the LANTIME.

In the second section the possible network protocols and access methods can be configured. You can enable/disable TELNET, FTP, SSH, HTTP, HTTPS, SNMP and NETBIOS by checking/unchecking the appropriate check boxes. After you saved your settings with the “Save” button, all these subsystems are stopped and eventually restarted (only if they are enabled, of course).

The third section allows you to select the IP protocol version 6. In this version the IPv4 protocol is mandatory and cannot be disabled, but as a workaround a standalone IPv6 mode can be achieved by entering an IPv4 address “0.0.0.0” and disabling the DHCP client option for every network interface of your LANTIME. By doing so, you ensure that the timeserver cannot be reached with IPv4. Please note that TELNET, FTP and NETBIOS cannot be used over IPv6 in this version. It is no problem to use IPv4 and IPv6 in a mixed mode environment on your LANTIME.

## **Network interface specific configuration**

The interface specific parameters can be found in the Interface section. If your LANTIME is equipped with only one network interface, you will find only one sub section (Interface 0). Otherwise you see a sub section for each installed Ethernet port.

Here, the parameters for the network port can be changed. In the upper section of the page you can enter the IPv4 parameters, the lower part gives you access to the IPv6 parameters of the interface.

### **IPv4 addresses and DHCP**

IPv4 addresses are built of 32 bits, which are grouped in four octets, each containing 8 bits. You can specify an IP address in this mask by entering four decimal numbers, separated by a point “.”.

Example: 192.168.10.2

Additionally you can specify the IPv4 netmask and your default gateway address.

Please contact your network administrator, who can provide you with the settings suitable for your specific network.

If there is a DHCP (Dynamic Host Configuration Protocol) server available in your network, the LANTIME system can obtain its IPv4 settings automatically from this server. If you want to use this feature (again, you should ask your network administrator whether this is applicable in your network), you can change the DHCP Client parameter to “ENABLED”. In order to activate the DHCP client functionality, you can also enter the IP address “000.000.000.000” in the LCD menu by using the front panel buttons of the LANTIME. Using DHCP is the default factory setting.

The MAC address of your timeserver can be read in the LCD menu by pressing the NEXT button on the front panel twice. This value is often needed by the network administrator when setting up the DHCP parameters for your LANTIME at the DHCP server.

If the DHCP client has been activated, the automatically obtained parameters are shown in the appropriate fields (IPv4 address, netmask, gateway).

### **IPv6 addresses and autoconf**

You can specify up to three IPv6 addresses for your LANTIME timeserver. Additionally you can switch off the IPv6 autoconf feature. IPv6 addresses are 128 bits in length and written as a chain of 16bit numbers in hexadecimal notation, separated with colons. A sequence of zeros can be substituted with “::” once.

**Examples:**

"::" is the address, which simply consists of zeros  
 ":::1" is the address, which only consists of zeros and a 1 as the last bit. This is the so-called host local address of IPv6 and is the equivalent to 127.0.0.1 in the IPv4 world  
 "fe80::0211:22FF:FE33:4455"  
 is a typical so-called link local address, because it uses the "fe80" prefix.  
 In URLs the colon interferes with the port section, therefore IPv6-IP-addresses are written in brackets in an URL.  
 ("http://[1080::8:800:200C:417A]:80/" ; the last ":80" simply sets the port to 80, the default http port)

If you enabled the IPv6 protocol, the LANTIME always gets a link local address in the format "fe80:: ...", which is based upon the MAC address of the interface. If a IPv6 router advertiser is available in your network and if you enabled the IPv6 autoconf feature, your LANTIME will be set up with up to three link global addresses automatically.

The last parameter in this sub section is "Netlink mode". This controls the port speed and duplex mode of the selected Ethernet port. Under normal circumstances, you should leave the default setting ("autosensing") untouched, until your network administrator tells you to change it.

## **High Availability Bonding**

The standard moniker for this technology is IEEE 802.3ad, although it is known by the common names of trunking, port trunking, teaming and link aggregation. The conventional use of bonding under Linux is an implementation of this link aggregation.

Only one link is used at any given time. At least two physical Ethernet ports must be linked to one bonding group to activate this feature. The first Ethernet Port in one bonding group provides the IP-Address and the net mask of this new virtual device. The implementation of the LANTIME Bonding feature will not replace the MAC address of the active ethernet port. Depending on the LINK state of the ETH-port the IP address of the first port in the bonding group will be set to the next ethernet port. All services will be restarted automatically.

## Additional Network Configuration

You can configure additional network parameter like special network routes or alias definitions. For this you will edit a script file which will be activated every time after the network configuration will run.



The screenshot shows the Meinberg web interface for network configuration. At the top right is the MEINBERG logo. Below it is a navigation menu with buttons for Ethernet, Notification, Security, NTP, Local, Statistic, Manual, and Main Menu. The main heading is "Ethernet configuration". Below this, a text area displays the content of the file /mnt/flash/config/netconf.cmd:

```
#!/bin/bash

#Example how to setup an additional route
route add -net 172.16.6.0 netmask 255.255.255.0 eth0
```

At the bottom of the text area are "Save file" and "Close" buttons. The footer contains contact information for Meinberg Funkuhren, including address, phone, fax, and internet details.

Also the Samba Configuration from “/etc/samba/smb.conf” can be edited:



The screenshot shows the Meinberg web interface for Samba configuration. At the top right is the MEINBERG logo. Below it is a navigation menu with buttons for Ethernet, Notification, Security, NTP, Local, Statistic, Manual, and Main Menu. The main heading is "Ethernet configuration". Below this, a text area displays the content of the file /mnt/flash/config/samba/smb.cnf:

```
create mask = 0600
browseable = No

[print$]
comment = Printer Drivers
path = /var/lib/samba/drivers
write list = @ntadmin root
force group = ntadmin
create mask = 0664
directory mask = 0775
```

At the bottom of the text area are "Save file" and "Close" buttons. The footer contains contact information for Meinberg Funkuhren, including address, phone, fax, and internet details.

# Configuration: Notification



- [Ethernet](#)
- [Notification](#)
- [Security](#)
- [NTP](#)
- [Local](#)
- [Statistic](#)
- [Manual](#)
- [Main Menu](#)

## Notification management

### Email information:

To address:  [CC recipients](#)

From address:

Smarthost:

### Windows messenger information (WinPopup):

Mail address 1:

Mail address 2:

### SNMP information:

SNMP manager 1: <input type="text"/>	Community: <input type="text"/>
SNMP manager 2: <input type="text"/>	Community: <input type="text"/>
SNMP manager 3: <input type="text"/>	Community: <input type="text"/>
SNMP manager 4: <input type="text"/>	Community: <input type="text"/>

### VP100/NET display information:

Display 1: <input type="text"/>	Serial number: <input type="text"/>
Display 2: <input type="text"/>	Serial number: <input type="text"/>

### User defined notification:

### NTP client monitoring:

NTP client offset limit:  ms

NTP client stratum limit:

### Notification conditions :

Condition:	Triggers:					
	Email	Wmail	SNMP	VP100/NET	User	Relais
Normal Operation	<input type="checkbox"/>					
NTP not sync	<input type="checkbox"/>					
NTP stopped	<input type="checkbox"/>					
Server boot	<input type="checkbox"/>					
Receiver not responding	<input type="checkbox"/>					
Receiver not sync	<input type="checkbox"/>					
Antenna faulty	<input type="checkbox"/>					
Antenna reconnect	<input type="checkbox"/>					
Antenna short circuit	<input type="checkbox"/>					
Config changed	<input type="checkbox"/>					
Leap Second announced	<input type="checkbox"/>					
NTP client offset limit	<input type="checkbox"/>					

[ top ]

## Alarm events

On this page you can set up different notification types for a number of events. This is an important feature because of the nature of a timeserver: running unobserved in the background. If an error or problem occurs, the timeserver is able to notify an administrator by using a number of different notification types.

The LANTIME timeserver offers different ways of informing the administrator or a responsible person about nine different events: EMAIL sends an e-mail message to a specified e-mail account, SNMP-TRAP sends a SNMP trap to one or two SNMP trap receivers, WINDOWS POPUP MESSAGE sends a winpopup message to one or two different computers. DISPLAY shows the alarm message on a wall mount display model VP100/NET, which is an optional accessory you can obtain for your LANTIME. You also can use user defined scripts and the error relay out (see appendix).

"Normal Operation"	NTP and reference clock in normal operation
"NTP not sync"	NTP is not synchronised to a reference time source
"NTP stopped"	NTP has been stopped (mostly very large time offsets)
"Server boot"	System has been restarted
"Receiver not responding"	No contact to the internal GPS receiver
"Receiver not sync"	Internal GPS clock is not synchronised to GPS time
"Antenna faulty"	GPS antenna disconnected
"Antenna reconnect"	GPS antenna reconnected
"Antenna short circuit"	GPS detects antenna short circuit"
"Config changed"	Configuration was changed by a user
"Leap second announced"	A leap second has been announced
"NTP client offset limit"	Client management detects an error

Every event can use a combination of those four notification types, of course you can disable notification for an event (by just disabling all notification types for this event). The configuration of the four notification types can be changed in the upper section of the page, you can control which notification is used for which event in the lower part of the page.

## E-mail messages

You can specify the e-mail address which is used as the senders address of the notification e-mail (From: address), the e-mail address of the receiver (To: address) and a SMTP smarthost, that is a mail server forwarding your mail to the receiver's mail server. If your LANTIME system is connected to the internet, it can deliver those e-mails itself by directly connecting to the receivers mail server. Additional e-mail addresses can be specified via the CC-recipients button.

These settings cannot be altered with the LC display buttons of the front panel. Please note the following:

- The host name and domain name should be known to the SMTP smarthost
- A valid nameserver entry is needed
- The domain part of the "From:" address has to be valid

## Windows Popup Messages

Most Microsoft Windows operating systems provide you with a local notification tool. You can send messages via the special Windows protocol in your local network. It is not necessary to enable the NETBIOS protocol of the LANTIME in order to use this notification. On the Windows client side it is necessary to activate the “Microsoft Client for Windows” in the network configuration.

You can enter the Windows computer name of up to two Windows PCs in the appropriate fields. Every message contains a time stamp and a plain text message:



## SNMP-TRAP messages

Up to two SNMP trap receiver hosts can be configured in this subsection, you may use IPv4 or IPv6 addresses or specify a hostname. Additionally you have to enter a valid SNMP community string for your trap receiving community. These can be unrelated to the SNMP community strings used for status monitoring and configuration access (see SNMP configuration on the “Security” page).

## VP100/NET wall mount display

The VP100/NET wall display is an optional accessory for the LANTIME timeserver, it has an own integrated Ethernet port (10/100 Mbit) and a SNTP client. The time for the display can be received from any NTP server using the SNTP protocol (like your LANTIME), additionally the display is capable of showing text messages, which are sent by using a special utility. The LANTIME can send an alarm message to one or two VP100/NET displays over the network, whenever an event occurs for which you selected the display notification type. If this happens, a scrolling alarm message is shown three times on the display.

Just enter the display’s IP address and its serial number (this is used for authorisation), which can be found by pressing the SET button on the back of the display four times. The serial number consists of 8 characters, representing four bytes in hexadecimal notation.


If you want to use the display for other purposes, you can send text messages to it by using our command line tool *send2display*, which can be found on the LANTIME. This allows you to use the display by CRON jobs or your own shell scripts etc. If you run the tool without parameters, a short usage screen is shown, explaining all parameters it may understand. See appendix for a printout of this usage screen.

## User defined Alarm scripts

You can define your own alarm script for every event by using the “Edit user defined notification script”. This script will be called automatically if one of the selected events occurs. This user alarm script will be stored on the Flash-Disk at “/mnt/flash/user\_defined\_notification”. This script will be called with index and the alarm message as text. The index value of the test message is 0.

## NTP Client Monitoring

You can monitor a group of NTP clients and supervise the time offset, the NTP stratum value and if the client is reachable or not. With the button „edit client list“ you can edit the list of clients to monitor. You can add the TCP/IP address or the hostname of the client:

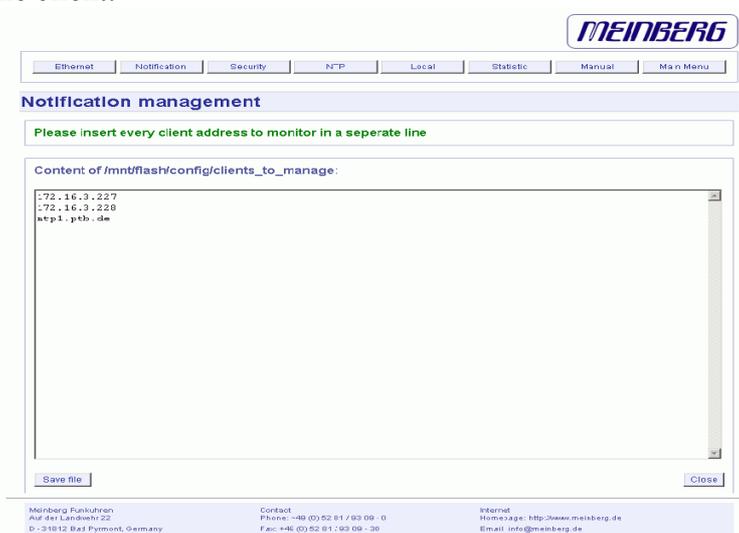

The screenshot shows the Meinberg web interface for 'Notification management'. The main content area displays the 'Content of /mnt/flash/config/clients\_to\_manage:' with the following text:

```
172.16.3.227
172.16.3.228
ntp1.pfb.de
```

Below the text area are 'Save file' and 'Close' buttons. The footer contains contact information for Meinberg Funkuhren, including address, phone, fax, internet, and email details.

You can monitor the current states of the configured clients:



The screenshot shows the Meinberg web interface for 'Status of monitored NTP clients'. The main content area displays the 'Content of /www/client\_management:' with the following text:

```
NTP Client Management updated at 18.10.05 10:28:55 UTC
172.16.3.227 : not reachable *** Error Condition ! ***
server 172.16.3.228, stratum 16, offset: 1.747151, delay 0.02644 *** Error: Offset > 10ms ! ***
server 192.53.103.103, stratum 1, offset 0.002865, delay 3.09436
```

Below the text area is a 'Close' button. The footer contains contact information for Meinberg Funkuhren, including address, phone, fax, internet, and email details.

## Alarm messages

You can change the alarm message text for every event by using the “Edit Messages“ button, the messages are stored in a file /mnt/flash/notification\_messages on the flash disk of your timeserver.



---

### Notification management

---

Notification conditions : please adjust the messages to fulfill your needs

Condition:	Adjusted condition:
NTP not sync	
NTP stopped	
Server boot	
Receiver not responding	
Receiver not sync	
Antenna faulty	
Antenna reconnect	
Config changed	
Leap Second announced	
<input type="button" value="Default messages"/>	

[ top ]

---

<small>Meinberg Funkuhren Auf der Landwehr 22 D - 31812 Bad Pyrmont, Germany</small>	<small>Contact Phone: 49 (0) 52 81 / 93 09 - 0 Fax: 49 (0) 52 81 / 93 09 - 30</small>	<small>Internet Homepage: <a href="http://www.meinberg.de">http://www.meinberg.de</a> Email: <a href="mailto:info@meinberg.de">info@meinberg.de</a></small>
--	---	---

# Configuration: Security



- Ethernet
- Notification
- Security
- NTP
- Local
- Statistic
- Manual
- Main Menu

## Security management

### Login:

New password:

Re-enter:

### SSH key generation:

### HTTPS certificate generation:

### NTP autokey generation:

NTP autokey password:

### NTP symmetric keys:

### SNMP:

Read community String:

Read/Write community string:

SNMP contact:

SNMP location:   
[Please edit these values on the local page](#)

User name :

Authentication passphrase:

Re-enter passphrase:

[ top ]

Meinberg Funkuhren  
Auf der Landwehr 22  
D - 31812 Bad Pyrmont, Germany

Contact  
Phone: +49 (0) 52 81 / 93 09 - 0  
Fax: +49 (0) 52 81 / 93 09 - 30

Internet  
Homepage: <http://www.meinberg.de>  
Email: [info@meinberg.de](mailto:info@meinberg.de)

## Password

On the “Security“ page you can manage all security relevant parameters for your timeserver. In the first section “Login” the administration password can be changed, which is used for SSH, TELNET, FTP, HTTP and HTTPS access. The password is stored encrypted on the internal flash disk and can only be reset to the default value “timeserver” by a “factory reset”, changing all settings back to the factory defaults. Please refer to the LCD configuration section in this manual.

## HTTP Access Control

With this function you can restrict the access to the web interface and allow only a few hosts to login. Only the hosts you entered in the list are able to login to the HTTP/HTTPS server of your LANTIME.



The screenshot shows the 'Security management' page of the Meinberg web interface. The 'HTTP access control' section is active, displaying a text input field and an 'Add/Remove address' button. Below this, a list titled 'Authorised TCP/IP addresses:' is empty, showing the message 'no access control currently configured'. A 'Close' button is located at the bottom right of the configuration area. The footer contains contact information for Meinberg Funkuhren, including address, phone, fax, internet, and email details.

If a non-allowed host tries to login, the following message appears:



The screenshot displays the 'GPS controlled NTP time server' login page. A red error message reads: 'Permission denied - it's not allowed to login from 172.16.3.20'. The page shows system status: 'GPS: Normal Operation', 'Time: UTC 09:50:23', 'NTP: Offset PPS: 0µs', and 'Date: Tue, 20.04.2004'. A login form is visible with a 'Password:' field and a 'login' button. The footer includes the same contact information as the previous screenshot.

## SSH Secure Shell Login

The SSH provides you with a secure shell access to your timeserver. The connection is encrypted, so no readable passwords are transmitted over your network. The actual LANTIME version supports SSH1 and SSH2 over IPv4 and IPv6. In order to use this feature, you have to enable the SSHD subsystem and a security key has to be generated on the timeserver by using the “Generate SSH key” button. Afterwards, a SSH client can connect to the timeserver and opens a secure shell:

```
ssh root @ 192.168.16.111
```

The first time you connect to a SSH server with an unknown certificate, you have to accept the certificate, afterwards you are prompted for your password (which is configured in the first section of this page).

If you generate a new SSH key, you can copy and paste it into your SSH client configuration afterwards in order to allow you to login without being prompted for a password. We strongly recommend to use SSH for shell access, TELNET is a very insecure protocol (transmitting passwords in plain text over your network).

If you enabled SSH, your LANTIME automatically is able to use secure file transfer with SCP or SFTP protocol. The usage of FTP as a file transfer protocol is as insecure as using TELNET for shell access.



---

**Security management**

Content of /tmp/ssh\_key\_output:

```
Generating public/private rsa key pair.
Your identification has been saved in /mnt/flash/packages/ssh/etc/ssh/ssh_host_key.
Your public key has been saved in /mnt/flash/packages/ssh/etc/ssh/ssh_host_key.pub.
The key fingerprint is:
8e:60:93:71:17:a9:8a:11:06:00:86:5e:5e:85:77:b2 LanGpsV4

ssh_host_key.pub:

1024 35
1357591306774735019902961003033114663603927620378216333556987288199788390795457634997982217705497163
2215703795216605133710932780189167267274303919533038554848715917403180512441617844661360580516117177
1351647624196090387680733698388474051003966900898761279039014130572524653525536357290081450326356907
314722461 LanGpsV4
```

---

Meinberg Funkuhren Auf der Landwehr 22 D - 31812 Bad Pyrmont, Germany	Contact Phone: 49 (0) 52 81 / 93 09 - 0 Fax: 49 (0) 52 81 / 93 09 - 30	Internet Homepage: <a href="http://www.meinberg.de">http://www.meinberg.de</a> Email: <a href="mailto:info@meinberg.de">info@meinberg.de</a>
---	--	--

## Generate SSL Certificate for HTTPS

HTTPS is the standard for encrypted transmission of data between web browser and web server. It relies on X.509 certificates and asymmetric crypto procedures. The timeserver uses these certificates to authenticate itself to the client (web browser). The first time a web browser connects to the HTTPS web server of your LANTIME, you are asked to accept the certificate of the web server. To make sure that you are talking to your known timeserver, check the certificate and accept it, if it matches the one stored on the LANTIME. All further connections are comparing the certificate with this one, which is saved in your web browser configuration. Afterwards you are prompted to verify the certificate only when it changed.

By using the button “Generate SSL certificate for HTTP“ you can create a new certificate. Please enter your organisation, name, mail address and the location in the upcoming form and press “Generate SSL certificate” to finally generate it.

MEINBERG

### Generate HTTPS certificate

Please fill out the following fields:

Country name:  (2 letter code)

Locality name:

Organization name:

Common name:

Email address:

Generate Diffie-Hellman parameter

Meinberg Funkuhren  
Auf der Landwehr 22  
D - 31812 Bad Pyrmont, Germany

Contact  
Phone: 49 (0) 52 81 / 93 09 - 0  
Fax: 49 (0) 52 81 / 93 09 - 30

Internet  
Homepage: <http://www.meinberg.de>  
Email: [info@meinberg.de](mailto:info@meinberg.de)

After the successful generation of the certificate, it is shown to you:

MEINBERG

### Security management

Content of /www/filetmp:

```
-----BEGIN RSA PRIVATE KEY-----
MIIcXAlBAABQDQ7cR44ckgVW/cdkg3Poa0H1/SPHL3ye8M/H7BKMP6g10BaDg
7/Rg706Odc64LkzYTqg6zA5tbbM23BL6r3M61gf80nKHAL+pFehdBuzbFTbBd99
0Bncg3Y1V63jyvuGR30c+PbHzR1+/wAVTmg09M00610UPyHke8z8//SMA1DAQAB
Ac0sR1Tc0Mh8yPtcRda7Up2ZM+Hw0XK/Fx3i8P1q0eP1EABR8udH2wec2P69U
Ykb1+01q6Rk6FECXq889ayP8m5ext85X1f22Rk184qQ0h50g+V3FbRSLU0OV
K4dx33i3c3b1nd8V0n4zk1aef11qoeP92HvR55HQTvu08CQD9Fuzw762bC616
P5U7Q3+6417BT1MTeM1UaUfgru9W4T0pYv14Cuc170c9b09B5f6MeFmU0xv2bv
h4c0v1/3SAEAab0kxw540R0V9MWE89K9NcTJF54KRE4fT39M68Y09P90pK1ALx
YpE+2+P+*3/XQ1dsBkq6LL92mLH85wq6wAQAQNgM1W0nPk22Me/CbYyvs84ucT9V
```

Meinberg Funkuhren  
Auf der Landwehr 22  
D - 31812 Bad Pyrmont, Germany

Contact  
Phone: 49 (0) 52 81 / 93 09 - 0  
Fax: 49 (0) 52 81 / 93 09 - 30

Internet  
Homepage: <http://www.meinberg.de>  
Email: [info@meinberg.de](mailto:info@meinberg.de)

It is also possible to upload your own HTTPS certification. If you upload a non valid certification HTTPS will not work.


## NTP keys and certificates

The fourth and fifth section of the “Security“ page allow you to create the needed crypto keys and certificates for secure NTP operation (please see NTP authentication below).

The function “Generate new NTP public key“ is creating a new self-signed certificate for the timeserver, which is automatically marked as “trusted“.

**Important note:** This certificate is depending on the hostname of your LANTIME, it is mandatory to re-create the certificate after changing the hostname. The certificates are build with the internal command “ntp-keygen -T” (ntp-keygen is part of the installed NTP suite). Your LANTIME is using the /etc/ntp/ directory for storing its private and public keys (this is called the “keysdir”). Please refer to the chapter “NTP Autokey” for further information (below).

The two options “Show NTP MD5 key“ and “Edit NTP MD5 keys“ allow you to manage the symmetric keys used by NTP. More about that can be found in the chapter about symmetric keys (below).

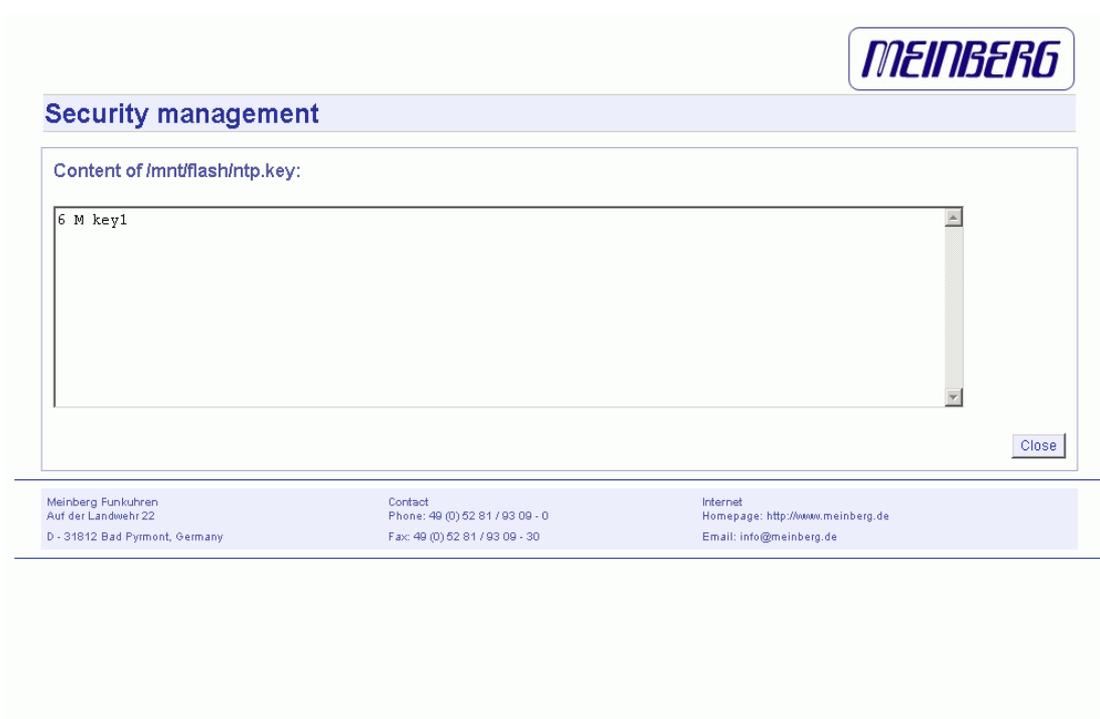

The screenshot displays the Meinberg Security management interface. At the top right is the Meinberg logo. Below it is a header for "Security management". The main content area shows the "Content of /mnt/flash/ntp.key:" with a text box containing "6 M key1". A "Close" button is located at the bottom right of the text box. At the bottom of the interface, there is a footer with contact information for Meinberg Funkuhren, including address, phone, fax, internet homepage, and email.

Meinberg Funkuhren Auf der Landwehr 22 D - 31812 Bad Pyrmont, Germany	Contact Phone: 49 (0) 52 81 / 93 09 - 0 Fax: 49 (0) 52 81 / 93 09 - 30	Internet Homepage: <a href="http://www.meinberg.de">http://www.meinberg.de</a> Email: <a href="mailto:info@meinberg.de">info@meinberg.de</a>
---	--	--

## SNMP Parameter

In the last Section all parameters for SNMP can be configured. More information you can find later in this manual.

## Configuration: NTP



Ethernet
Notification
Security
NTP
Local
Statistic
Manual
Main Menu

### NTP management

**NTP configuration:**

External NTP server address 1: <input style="width: 80%;" type="text" value="172.16.3.225"/>	Key: <input style="width: 40%;" type="text"/>	<input checked="" type="checkbox"/> use autokey	<input checked="" type="checkbox"/> Prefer
External NTP server address 2: <input style="width: 80%;" type="text"/>	Key: <input style="width: 40%;" type="text"/>	<input type="checkbox"/> use autokey	<input type="checkbox"/> Prefer
External NTP server address 3: <input style="width: 80%;" type="text"/>	Key: <input style="width: 40%;" type="text"/>	<input type="checkbox"/> use autokey	<input type="checkbox"/> Prefer
External NTP server address 4: <input style="width: 80%;" type="text"/>	Key: <input style="width: 40%;" type="text"/>	<input type="checkbox"/> use autokey	<input type="checkbox"/> Prefer
External NTP server address 5: <input style="width: 80%;" type="text"/>	Key: <input style="width: 40%;" type="text"/>	<input type="checkbox"/> use autokey	<input type="checkbox"/> Prefer

---

Stratum of local clock:

disable local clock

Local trusted key:

NTP broadcast address:  Key:   use autokey

Broadcast intervall:

NTP Trusttime:  Days ▼  
0=Standard receiver trust time used

Active:	<input type="checkbox"/>	Autokey	<input checked="" type="checkbox"/>	PPS
---------	--------------------------	---------	-------------------------------------	-----

Edit additional NTP parameter
Show current NTP configuration
Config NTP access control

---

Save settings
Reset changes
Back

Meinberg Funkuhren GmbH & Co. KG  
 Auf der Landwehr 22  
 D - 31812 Bad Pyrmont, Germany

Contact  
 Phone: +49 (0) 52 81 / 93 09 - 0  
 Fax: +49 (0) 52 81 / 93 09 - 30

Internet  
 Homepage: <http://www.meinberg.de>  
 Email: [info@meinberg.de](mailto:info@meinberg.de)

The NTP configuration page is used to set up the additional NTP parameters needed for a more specific configuration of the NTP subsystem.

The default configuration of the timeserver consists of a local clock, which represents the hardware clock of your LANTIME system and the GPS reference clock. The local clock is only chosen as the NTP time reference after the GPS clock lost its synchronisation. The stratum level of this local clock is set to 12, this ensures that clients recognise the switchover to the local clock and are able to eventually take further actions. The local clock can be disabled if the timeserver should not answer any more when the reference clock is out of order.

Because the reference clock is internally connected to the LANTIME system by using a serial connection, the accuracy using this way of synchronisation is around 1 ms. The high accuracy of the LANTIME timeserver (around 10 microseconds) is

available by using the ATOM driver of the NTP subsystem, which is directly interpreting the PPS (pulse per second) of the GPS reference clock. The default configuration looks like this:

```
# *** lantime ***
# NTP.CONF for GPS167 with UNI ERLANGEN

server 127.127.1.0          # local clock
fudge  127.127.1.0 stratum 12 # local stratum

server 127.127.8.0 mode 135 prefer # GPS167 UNI Erlangen PPS
fudge  127.127.8.0 time1 0.0042  # relative to PPS
server 127.127.22.0        # ATOM (PPS)
fudge  127.127.22.0 flag3 1      # enable PPS API
enable stats
statsdir /var/log/
statistics loopstats
driftfile /etc/ntp.drift

# Edit /mnt/flash/ntpconf.add to add additional NTP parameters
```

By using the NTP configuration page, a number of additional parameters can be added to this default ntp.conf. In the upper section up to five external NTP servers can be set up to provide a high grade of redundancy for the internal reference clock. For each of these external NTP servers the AUTOKEY or symmetric key feature of NTP can be used to ensure the authentic of these time sources. The “Prefer“ flag can be set for each external server. The internal refclock has set this flag by default. The “Prefer“ flag is usefull if one of the refclocks are not available or out of sync.

The field “Stratum of local clock” is used to change the stratum level of the local clock (see above), default is 12.

The “Local trusted key“ field holds a list of all trusted symmetric keys (comma or space separated), which have to be accepted by the NTPD of your LANTIME.

If you want to use your LANTIME timeserver to send NTP broadcast packets to your network, you have to enter a valid broadcast address in “NTP broadcast address”. If you want to use IPv6 multicast mode, you have to enter a valid IPv6 multicast address in this field. Please note that NTP Version 4, which is used by the LANTIME timeserver, only permits authenticated broadcast mode. Therefore you have to set up the AUTOKEY feature or a symmetric key if you use a NTPv4 client and want to broadcast / multicast your time. A sample configuration of the NTP client for broadcast with symmetric keys looks like:

```
broadcastclient yes
broadcastdelay 0.05 # depends on your network
keys /etc/ntp/keys
trustedkey 6 15
requestkey 15
controlkey 15
```

In the next section you can enable the AUTOKEY feature for your LANTIME timeserver and the PPS mode (which is enabled in default settings), see above for a description.

The NTP Trusttime will specify the time how long the NTP will trust the reference time if this is not synchronized (free running). This time will be set in seconds or minutes or hours. The value 0 will be select the default value for the specific reference clock. The default values are:


LANTIME/GPS : 96 h  
LANTIME/PZF : 0,5 h  
LANTIME/RDT: 0,5 h  
LANTIME/NDT: 96 h

After each restart and after any change of configuration a new /etc/ntp.conf file is generated by the LANTIME software. Any changes you made to this file are lost. In order to use your custom ntp.conf (your LANTIME is using a standard version of the NTP software suite, therefore all configuration parameters of the NTP software are fully supported), you have to edit the file /mnt/flash/ntpconf.add, which is automatically appended to the /etc/ntp.conf file generated at boot time or when reloading configuration after a change. You can edit this file by using the button “Edit additional NTP parameter”.



The screenshot shows the MEINBERG NTP management web interface. At the top right is the MEINBERG logo. Below it is a header "NTP management". The main content area is titled "Content of /mnt/flash/ntpconf.add:" and contains a text area with the following text: "# Edit /mnt/flash/ntpconf.add to add additional NTP parameters". Below the text area are two buttons: "Save file" and "Close". At the bottom of the page is a footer with contact information: "Meinberg Funkuhren, Auf der Landwehr 22, D - 31812 Bad Pyrmont, Germany", "Contact, Phone: +49 (0) 52 81 / 93 09 - 0, Fax: +49 (0) 52 81 / 93 09 - 30", and "Internet, Homepage: http://www.meinberg.de, Email: info@meinberg.de".

By choosing “Show current NTP configuration“, you can review the actual state of the /etc/ntp.conf file. The file cannot be changed on this page, see above for a description why editing this file is not reasonable.

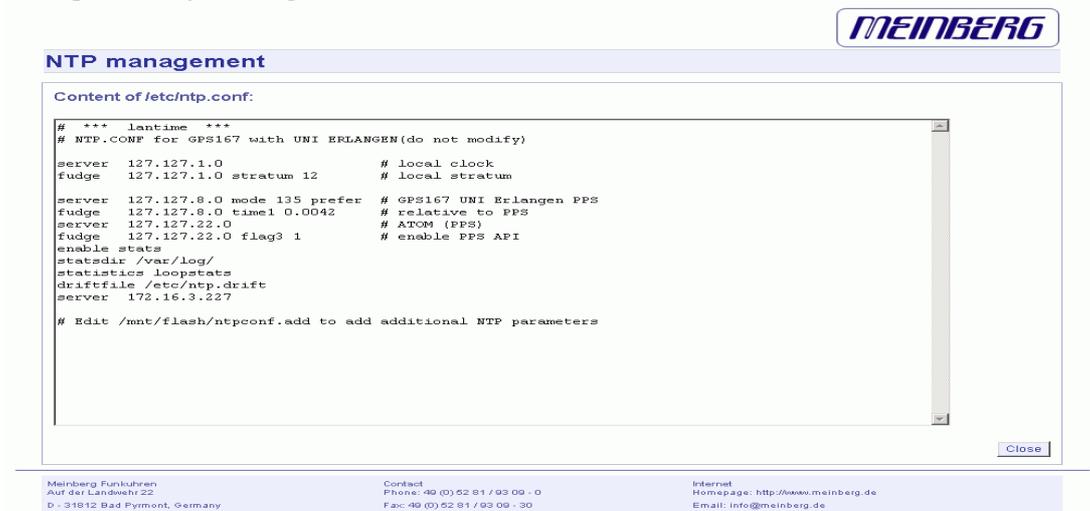

The screenshot shows the MEINBERG NTP management web interface. At the top right is the MEINBERG logo. Below it is a header "NTP management". The main content area is titled "Content of /etc/ntp.conf:" and contains a text area with the following text: "# \*\*\* lantime \*\*\*", "# NTP.CONF for GPS167 with UNI ERLANGEN (do not modify)", "server 127.127.1.0 # local clock", "fudge 127.127.1.0 stratum 12 # local stratum", "server 127.127.8.0 mode 135 prefer # GPS167 UNI Erlangen PPS", "fudge 127.127.8.0 time1 0.0042 # Relative to PPS", "server 127.127.22.0 # ATOM (PPS)", "fudge 127.127.22.0 flag3 1 # enable PPS API", "enable stats", "statsdir /var/log/", "statistics loopstats", "driftfile /etc/ntp.drift", "server 172.16.3.227", "# Edit /mnt/flash/ntpconf.add to add additional NTP parameters". Below the text area is a "Close" button. At the bottom of the page is a footer with contact information: "Meinberg Funkuhren, Auf der Landwehr 22, D - 31812 Bad Pyrmont, Germany", "Contact, Phone: 49 (0) 52 81 / 93 09 - 0, Fax: 49 (0) 52 81 / 93 09 - 30", and "Internet, Homepage: http://www.meinberg.de, Email: info@meinberg.de".

## NTP Authentication

NTP version 2 and version 3 support an authentication method using symmetric keys. If a packet is sent by the NTPD while using this authentication mode, every packet is provided with a 32 bit key ID and a cryptographic 64/128 bit checksum of the packet. This checksum is built with MD5 or DES, both algorithms offer a sufficient protection against manipulation of data.

Please note that the distribution of DES in the United States of America and Canada is subject to restrictions, while MD5 is not affected by that. With any of these algorithms the receiving NTP clients validate the checksum. Both parties (server and client) need to have the same crypto key with the same key ID.

In the authentication mode a party is marked “untrusted” and not suitable for synchronisation, whenever unauthorised packets or authorised packets with a wrong key are used. Please note that a server may recognise a lot of keys but uses only a few of them. This allows a timeserver to serve a client, who is demanding an authenticated time information, without “trusting” the client.

Some additional parameters are used to specify the key IDs used for validating the authentic of each partner. The configuration file `/etc/ntp.conf` of a server using this authentication mode may look like this:

```
# peer configuration for 128.100.100.7  
# (expected to operate at stratum 2)  
# fully authenticated this time  
peer 128.100.49.105 key 22 # suzuki.ccie.utoronto.ca  
peer 128.8.10.1 key 4 # umdl.umd.edu  
peer 192.35.82.50 key 6 # lilben.tn.cornell.edu  
keys /mnt/flash/ntp.keys # path for key file  
trustedkey 1 2 14 15 # define trusted keys  
requestkey 15 # key (mode 6) for accessing server variables  
controlkey 15 # key (mode 7) for accessing server variables
```

The “keys” parameter indicates the location of the file, in which all symmetric keys are stored. The “trustedkey” line identifies all key IDs, which have to be considered “trusted” or “uncompromised”. All other keys defined in the keyfile are considered “compromised”. This allows to re-use already owned keys by just adding their respective key ID to the “trustedkey” parameter. If a key needs to be “switched off”, it can be removed from this line without actually removing it from the system. This ensures an easy way to re-activate it later without actually transferring the key again.

The line “requestkey 15” declares the key ID for mode-6 control messages (as described in RFC-1305), which are used by the `ntpq` utility for example. The “controlkey” parameter is specifying the key used for mode-7 private control messages, for example used by the `ntpd` utility. These keys protect the `ntpd` variables against unauthorised modification.

The ntp.keys file mentioned above holds a list of all keys and their respective ID known by the server. This file should not be world-readable (only root should be able to look into this) and it may look like this:

```
# ntp keys file (ntp.keys)
1      N      29233E0461ECD6AE      # des key in NTP format
2      M      RIrop8KPPvQvYotM      # md5 key as an ASCII random string
14     M      sundial              # md5 key as an ASCII string
15     A      sundial              # des key as an ASCII string
# the following 3 keys are identical
10     A      SeCReT
10     N      d3e54352e5548080
10     S      a7cb86a4cba80101
```

The first column holds the key ID (used in the ntp.conf file), the second column defines the format of the key, which is following in column three. There are four different key formats: “A” means DES key with up to eight 7-bit ASCII characters, where each character is standing for a key octet (this is used by Unix passwords, too). “S” is a DES key written in hexadecimal notation, where the lowest bit (LSB) of each octet is used as the odd parity bit. If the key format is specified as “N”, it also consists of a hexadecimal string, but in NTP standard format by using the highest bit (HSB) of each octet used as the odd parity bit. A key defined as “M” is a MD5 key with up to 31 ASCII characters. The LANTIME supports MD5 authentication only.

Please be aware of the following restrictions: No “#”, “\t” (tab), “\n” (newline) and “\0” (null) are allowed in a DES or MD5 ASCII key. The key ID 0 is reserved for special purposes and should not appear in the keys file.

## NTP AUTOKEY

NTP Version 4 supports symmetric keys and additionally provides the so-called AUTOKEY feature. The authentic of received time at the NTP clients is sufficiently ensured by the symmetric key technique. In order to achieve a higher security, e.g. against so-called replay attacks, it is important to change the used crypto keys from time to time.

In networks with a lot of clients, this can lead to a logistic problem, because the server key has to be changed on every single client. To help the administrator to reduce this work (or even eliminate it completely), the NTP developers invented the AUTOKEY feature, which works with a combination of group keys and public keys. All NTP clients are able to verify the authentic of the time they received from the NTP servers of their own AUTOKEY group by using this AUTOKEY technique.

The AUTOKEY features works by creating so-called secure groups, in which NTP servers and clients are combined. There are three different kinds of members in such a group:

### **a) Trusted Host**

One or more trusted NTP servers. In order to become a “trusted” server, a NTP server must own a self-signed certificate marked as “trusted”. It is good practice to operate the trusted hosts of a secure group at the lowest stratum level (of this group).

### **b) Host**

One ore more NTP servers, which do not own a “trusted“ certificate, but only a self-signed certificate without this “trusted” mark.

### **c) Client**

One ore more NTP client systems, which in contrast to the above mentioned servers do not provide accurate time to other systems in the secure group. They only receive time.

All members of this group (trusted hosts, hosts and clients) have to have the same group key. This group key is generated by a so-called trusted authority (TA) and has to be deployed manually to all members of the group by secure means (e.g. with the UNIX SCP command). The role of a TA can be fulfilled by one of the trusted hosts of the group, but an external TA can be used, too.

The used public keys can be periodically re-created (there are menu functions for this available in the web interface and also in the CLI setup program, see “Generate new NTP public key” in section “NTP Autokey” of the “Security Management” page) and then distributed automatically to all members of the secure group. The group key remains unchanged, therefore the manual update process for crypto keys for the secure group is eliminated.

A LANTIME can be a trusted authority / trusted host combination and also a “non-trusted” host in such a secure group.

To configure the LANTIME as a TA / trusted host, enable the AUTOKEY feature and initialise the group key via the HTTPS web interface (“Generate groupkey”) or CLI setup program. In order to create such a group key, a crypto password has to be used in order to encrypt / decrypt the certificate. This crypto password is shared between all group members and can be entered in the web interface and CLI setup program, too. After generating the group key, you have to distribute it to all members of your secure group (and setup these systems to use AUTOKEY, too). In the ntp.conf file of all group members you have to add the following lines (or change them, if they are already included):

```
crypto pw cryptosecret
keysdir /etc/ntp/
```

In the above example “cryptosecret“ is the crypto password, that has been used to create the group key and the public key. Please note that the crypto password is included as a plain text password in the ntp.conf, therefore this file should not be world-readable (only root should have read access to it).

On the clients, the server entries must be altered to enable the AUTOKEY feature for the connections to the NTP servers of the group. This looks like:

```
server time.meinberg.de autokey version 4
server time2.meinberg.de
```

You find the server time.meinberg.de which is using the AUTOKEY feature, while time2.meinberg.de is used without any authentic checks.

If you want to setup the LANTIME server as a trusted host, but need to use a different trusted authority, please create your own group key with this TA and include it with the web interface of your LANTIME (on page “Security Management” see section “NTP autokey” , function “Upload groupkey”).

If you want to setup the LANTIME as a “non-trusted” NTP server, you have to upload the group key of your secure group ( “Security Management” / “NTP autokey” / “Upload groupkey”) and create your own, self-signed certificate (without marking it as “trusted”). Because every certificate which is creating by using the web interface and/or CLI setup is marked “trusted”, you have to execute the tool “ntp-keygen” manually on your LANTIME by using shell access (via SSH).


```
LantimeGpsV4:/etc/ntp # ntp-keygen -q cryptosecret
```

Here, too, “cryptosecret“ is the crypto password used in the ntp.conf entry. Then you have to copy the new ntpkeys to the flash disk with:

```
cp /etc/ntp/ntpkey_* /mnt/flash/config/ntp/uploaded_groupkeys
```

A detailed description about ntp-keygen can be found on the NTP website (<http://www.ntp.org>).

Example:

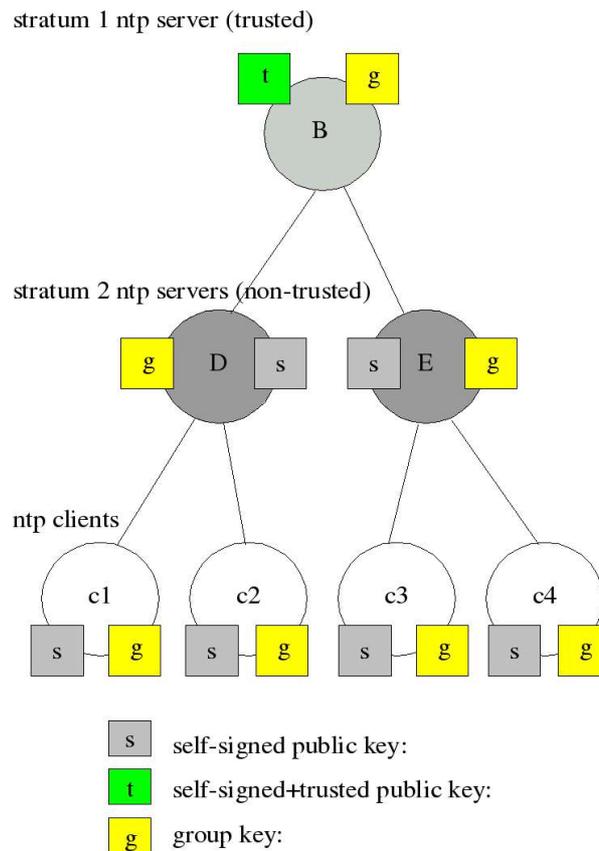

This autokey group is formed by one Stratum-1-server (B), two Stratum-2-servers (D and E) and a number of clients (in the diagram there are 4 clients shown, c1 – c4). B is the trusted host, he holds the group key and a self-signed certificate marked as “trusted”.

D and E are NTP servers, which are “non-trusted” hosts of the group, they hold the group key and a self-signed certificate which lacks the “trusted” mark. The clients also hold the group key and a self-signed certificate.

In order to distribute new public keys to the whole group, the administrator only has to generate a new “t” key, which will be distributed automatically to the two hosts D and E. Because these two servers can now present a unbroken chain of certificates to a trusted host, they can be considered “trusted” by the clients as well.

More about the technical background and detailed processes of the AUTOKEY technique can be found at the official NTP website (<http://www.ntp.org>).

# Configuration: Local



- Ethernet
- Notification
- Security
- NTP
- Local
- Statistic
- Manual
- Main Menu

## Local configuration

### Lantime services:

- Reboot Lantime
- Manual configuration
- Send test notification
- Save NTP drift file
- Reset to factory defaults
- Download SNMP MIB files

### Lantime User Management:

- User administration

### Show Lantime information:

- List all messages
- List detailed version information
- List Lantime options
- List detailed GPS information

### Lantime firmware update:

- 
- Start firmware update

### Lantime configuration:

- Check configuration
- Get diagnostics information

### General Information:

Contact:

Location:

Web interface language:

- Save settings
- Reset changes
- Back

[ top ]

Meinberg Funkuhren GmbH & Co. KG  
Auf der Landwehr 22  
D - 31812 Bad Pyrmont, Germany


Contact  
Phone: +49 (0) 52 81 / 93 09 - 0  
Fax: +49 (0) 52 81 / 93 09 - 30

Internet  
Homepage: <http://www.meinberg.de>  
Email: [info@meinberg.de](mailto:info@meinberg.de)

## Administrative functions

In the first section there are several functions which may be used by the administrator. The button “Reboot LANTIME” is restarting the system, the built-in reference clock is not affected by this, only the included computer system is rebooted, which may take up to 30 seconds.

With “Manual configuration“ you are able to change the main configuration by editing the configuration file by hand. After editing, press the “Save file” button to preserve your changes, afterwards you are asked if your changes should be activated by reloading the configuration (this results in reloading several subsystems like NTPD, HTTPD etc.).

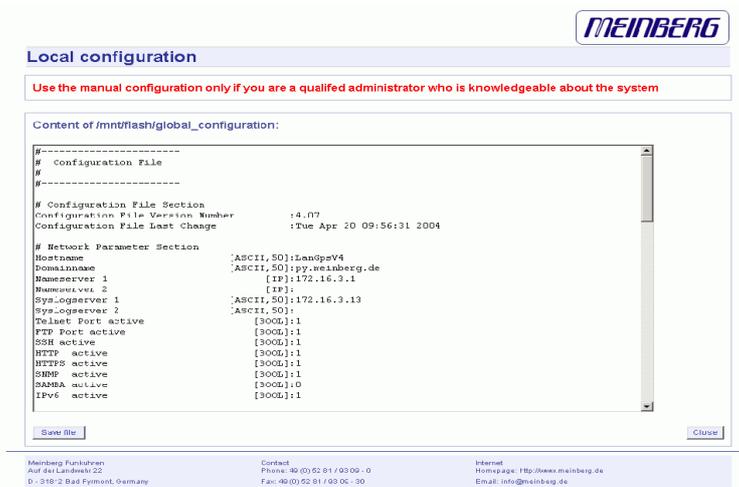

The function “Send test notification“ is generating a test alarm message and sends it using all configured notify possibilities (e-mail, WMail, SNMP-Traps, wall mount display).

You can use the function “Save NTP drift file“ to copy the file /etc/ntp.drift to the internal flash disc of your LANTIME. NTP is using this file to have the parameters for compensation of the incorrectness of the system clock available directly after a restart. This results in a faster synchronisation process of the NTPD subsystem after a system restart. You should use this function only, if the NTPD has been synchronized to the internal reference clock for more than one day. This is done here at Meinberg directly before shipping the LANTIME unit to our customers, so you do not need to use this function during normal operation. It may be applicable after a software update.

The function “Reset to factory defaults“ is setting all configuration parameters back to default values. The regular file /mnt/flash/global\_configuration will be replaced with the file /mnt/flash/factory.conf, but first a copy of the configuration is saved under /mnt/flash/global\_configuration.old for backup reasons. The default password “timeserver” is replacing the actual password, too. After using this function, all certificates should be recreated because of the change of the unit’s hostname.

Please be aware of the fact that the default configuration is not activated instantly. If you want to avoid setting up the IP address of your unit by locally configuring it on site with the buttons of the front panel (meaning physical presence of someone directly at the location of the LANTIME), you have to configure the network parameters of your LANTIME immediately after using the “reset to factory defaults” button. So, please proceed directly to the Ethernet page and check/change the IP address and the possible access subsystems (HTTP for example) of the LANTIME. The first usage of “Save settings” will load the configuration from flash into memory and activate it.

The point “Download SNMP MIB files“ can be used to download all Meinberg specific SNMP MIB files to your workstation. They can be distributed to all SNMP management clients afterwards.

## User Management

For administration different users can be set up. 3 group memberships can be assigned to each user: the Super-User has all properties for administration. The group membership Administrator can change all parameters via the command line interface (CLI) configuration tool and the WEB interface. The group Administrator cannot use any Linux command in a Telnet, SSH or Terminal session. If the Administrator will login, the setup program will be started directly. After termination of the Setup program this user will be logout automatically. The group membership “Info“ has the same properties like the Administrator but cannot change any parameter.

The screenshot shows the 'Local configuration' page with a 'User Management' section. It features input fields for 'Add new User' and 'Password', and radio buttons for 'Group membership' with options 'Super-User', 'Administrator', and 'Info'. A 'Create User' button is present. Below, an 'Available User' table lists existing users and their group memberships, with 'Delete User' buttons for 'gast' and 'admin'.

Username	Group membership	Option
root	Super-User	
gast	Info User	Delete User
admin	Admin+User	Delete User

The menu “User Management“ allows you to set up different users with a password and the group membership. To change the properties of a user you have to delete the old user and set up a new one. The user “root“ cannot be deleted and has always the membership of Super-User. The password of the user “root“ can be set on the security page.

## Administrative Information

The button “List all messages“ displays the SYSLOG of the LANTIME completely. In this log all subsystems create their entries, even the OS (upper case) kernel. The SYSLOG file /var/log/messages is only stored in the system’s ram disk, therefore it is lost after a power off or restart. If you configured an external SYSLOG server, all LANTIME syslog entries will be duplicated on this remote system and can be saved permanently this way.

```
Mar 15 13:35:17 LanGpsV4 ntpd[12948]: ntpd 4.2.0@1.1161-r Fri Mar 5
15:58:48 CET 2004 (3)
Mar 15 13:35:17 LanGpsV4 ntpd[12948]: signal_no_reset: signal 13 had
flags 4000000
Mar 15 13:35:17 LanGpsV4 ntpd[12948]: precision = 3.000 usec
Mar 15 13:35:17 LanGpsV4 ntpd[12948]: kernel time sync status 2040
Mar 15 13:35:17 LanGpsV4 ntpd[12948]: frequency initialized 45.212
PPM from /etc/ntp.drift
Mar 15 13:38:36 LanGpsV4 lantime[417]: NTP sync to GPS
Mar 15 13:38:36 LanGpsV4 lantime[417]: NTP restart
Mar 15 13:45:36 LanGpsV4 proftpd[14061]: connect from 172.16.3.2
(172.16.3.2)
Mar 15 14:01:11 LanGpsV4 login[15711]: invalid password for `root'
on `tty1' from `172.16.3.45'
Mar 15 14:01:17 LanGpsV4 login[15711]: root login on `tty1' from
`172.16.3.45'
```

With ”List detailed version information“ a number of version numbers (including LANTIME software, operating system and NTPD) are shown in a textbox.



The function “List LANTIME Options“ shows the hardware options installed in your LANTIME.



Using the button "List detailed GPS information" gives you the possibility to check detailed GPS status information. The first parameter indicates the time and date of the last update of the shown parameters. Next you find the GPS receiver status and the NTP status, followed by the GPS position data. The position uses the Latitude / Longitude / Altitude format. Latitude and Longitude are shown in degrees, minutes and seconds, Altitude is shown in meters above sea level.

The satellite section shows the numbers of satellites in view and the number of usable satellites ("good SV"). Additionally, the selected set of the four used satellites can be read.



The accuracy of the calculated receiver position and time deviation is dependent on the constellation of the four selected satellites. Using the position of the receiver and the satellites, a number of values can be calculated, which allow a rating of the selected constellation. These values are called "Dilutions of Precision (DOP)".

PDOP is the abbreviation for "Position Dilution of Precision", TDOP means "Time Dilution of Precision" and GDOP stands for "General Dilution of Precision". Lower values are indicating better accuracy.

The next section "Satellite Info" shows information about all the satellites, which are in view momentarily. The satellite ID, elevation, Azimuth and distance to the receiver reveal the position of the satellite in the sky. The Doppler shows whether the satellite is ascending (positive values) or descending (negative value).

## Software Update

If you need to update the software of your LANTIME, you need a special file from Meinberg, which can be uploaded to the LANTIME by first choosing the file on your local computer with the “Browse” button and then press “Start firmware update”.

The chosen file will be uploaded to the LANTIME, afterwards you are prompted to confirm the start of the update process. The scope of the update only depends on the chosen file.



**Local configuration**

Should the following command really be performed?

---

Perform lantime update - if you perform a full update you have to reboot the device

---

Meinberg Funkuhren Auf der Landwehr 22 D - 31812 Bad Pyrmont, Germany	Contact Phone: 49 (0) 52 81 / 93 09 - 0 Fax: 49 (0) 52 81 / 93 09 - 30	Internet Homepage: <a href="http://www.meinberg.de">http://www.meinberg.de</a> Email: <a href="mailto:info@meinberg.de">info@meinberg.de</a>
---	--	--

## Automatic configuration check

All parameters of the LANTIME can be checked for plausibility and all configured servers (e.g. SYSLOG servers, nameservers) are tested for reachability. All red coloured values should be reviewed by the administrator. Because all configured hostnames / IP addresses of the servers are processed during the reachabilitytests, the whole check process may take a while.



---

### Local configuration

---

#### Checking the configuration

---

**Ethernet:**

Hostname:	lantimeGregoire	ok
Nameserver 1:	172.16.3.1	ok
IPv4 Gateway:	172.16.3.1	ok

**Ethernet interface 0:**

TCP/IP address:	172.16.3.228	ok
Netmask:	255.255.255.000	ok

**Notification:**

To address:	gregoire.diehl@meinberg.de	ok
From address:	LantimeGregoire	ok
CC:	info@meinberg.de	ok
Smarthost:	gateway	ok

**NTP:**

External NTP server address 1:	172.16.3.227	ok
--------------------------------	--------------	----

---

#### Checking the reachability of configured ip-addresses or hostnames

---

**Ethernet:**

Nameserver 1:	172.16.3.1	reachable
IPv4 Gateway:	172.16.3.1	reachable

**Notification:**

E-Mail Smarthost:	gateway	reachable
-------------------	---------	-----------

**NTP:**

External NTP server address 1:	172.16.3.227	reachable
--------------------------------	--------------	-----------

[ top ]

---

Meinberg Funkuhren Auf der Landwehr 22 D - 31812 Bad Pyrmont, Germany	Contact Phone: +49 (0) 52 81 / 93 09 - 0 Fax: +49 (0) 52 81 / 93 09 - 30	Internet Homepage: <a href="http://www.meinberg.de">http://www.meinberg.de</a> Email: <a href="mailto:info@meinberg.de">info@meinberg.de</a>
---	--	--

## **Get Diagnostics Information**

The diagnostics information is a set of configuration parameters and files stored in a packed text file. With the help of these informations the technical support from Meinberg can reproduce the current state of your LANTIME. It takes some time to collect all information from the LANTIME. Do not press the button again while this process is running - some web browsers will cancel the job if you press the button twice. After that you can download the packed file "config.zip" to your local computer. If you have any questions or problems with your LANTIME please send this file "config.zip" as an attachment of an e-mail to Meinberg support and describe your problem.

## **Web interface language**


With the selector box "Web interface language" you can change the displayed language of the WEB interface.

# Configuration: Statistics



## Statistic

### Statistic information:

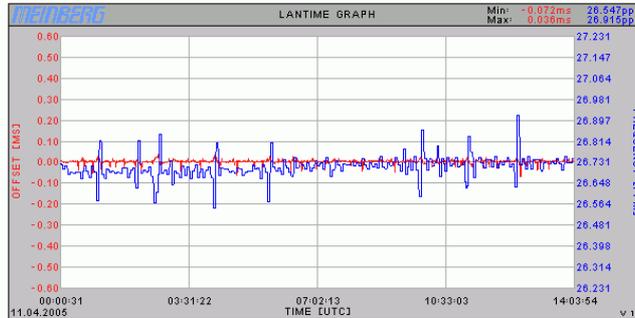

Available logfiles:    
 merge loopstats

### Lantime information:

S/N: n/a  
 GPS167 :4.13 S/N:10060740  
 NTP Version: 4.2.0a@1.1320-o Mon Feb 7 12:39:58 UTC 2005 (1)  
 Kernel Version: 2.4.20-NANO  
 Filesystem Version: n/a  
 ETHERNET HWaddr 00:E0:4B:06:B3:03  
 Uptime: 248 h  
 Mem free: 4392 kB  
 Disk free: 18723 kB

### NTP access information:

remote address	port	local address	count	m	ver	code	avglen	first
127.0.0.1	2225	127.0.0.1	1597854	7	2	0	0	0
172.16.3.41	123	172.16.3.228	12624	3	4	0	64	10
172.16.3.13	123	172.16.3.228	2865	3	4	0	64	19
172.16.3.5	123	172.16.3.228	1793	3	4	0	1020	200
172.16.3.227	123	172.16.3.228	887	4	4	0	1024	322
172.16.3.48	123	172.16.3.228	363	3	4	0	979	595

### Output of "ntpq -p":

remote	refid	st	t	when	poll	reach	delay	offset	jitter
LOCAL(0)	LOCAL(0)	12	l	25	64	377	0.000	0.000	0.004
+GENERIC(0)	.GPS.	0	l	56	64	377	0.000	0.000	0.004
oPPS(0)	.PPS.	0	l	52	64	377	0.000	-0.003	0.004
172.16.3.227	.INIT.	16	u	323	1024	0	0.000	0.000	4000.00

### Output of "ntpq -c 'cv assID'":

```

assID=22365 status=0003 clk_okay, last_clk_fault,
device="Meinberg GPS16x receiver",
timecode="x0211.04.05; 1; 14:04:46; +00:00; ; 51.9827N 9.2258E 180m/x03",
poll=13852, noreply=0, badformat=0, baddata=0, fudgetime1=4.400,
stratum=0, refid=GPS, flags=4,
refclock_ppstime="c605027d.ffffabbd Mon, Apr 11 2005 14:04:45.999",
refclock_time="c605027e.00000000 Mon, Apr 11 2005 14:04:46.000",
refclock_status="UTC DISPLAY; TIME CODE; PPS; POSITION; (LEAP INDICATION; PPS SIGNAL; POSITION)",
refclock_format="Meinberg GPS Extended",
refclock_states=""NOMINAL: 10d+08:09:24 (100.00%); FAULT: 00:00:03 (0.00%); running time: 10d+08:09:27"
    
```

[ top ]

## Statistical Information

In the first section a graphical diagram shows the running synchronisation process. NTP is storing this statistical information in so-called “loopstats” files, which are used here to draw the curves. The red line is describing the offset between the internal reference clock (GPS) and the system clock. The blue line shows the frequency errors of the system time (in PPM, parts per million). In the upper right corner of the diagram you will find the measurement range of the red and blue curve. The last 24 hours are shown initially, but you are able to select the last 10 days (or fewer days, depending on the system uptime) or switch to a “merge loopstats” diagram, which shows all available days in one diagram (with a maximum of 10 days). All time data is using UTC.

The next sections shows version information for a number of subsystems, including the OS kernel version, NTPD version and the GPS firmware revision of the internal reference clock. Additionally, the MAC address of the first Ethernet interface can be found here. The “Mem free” value is indicating the free memory available to the system, the Disk free value is related to the ram disk of the LANTIME. Both system memory and ram disk have a total capacity of 32 MB (each). The Uptime parameter displays the time since the last boot process of the unit.

In the next section all NTP clients accessing the NTP server are listed. This list is maintained internally by NTPD, clients who did not access the NTPD for a longer period are automatically removed. This section can grow very long in large networks. There are no further information found about the parameters “code, avglen and first. The name resolution of the IP address in the first column will take too much time; so its disabled.

After that a list of all actually refclocks of the internal NTP server will be shown.

remote	refid	st	t	when	poll	reach	delay	offset	jitter
LOCAL(0)	LOCAL(0)	3	1	36	64	3	0.00	0.000	7885
lantime	.GPS.	0	1	36	64	1	0.00	60.1	15875

with the following meaning:

- remote:	list of all valid time servers (ntp.conf)
- refid:	reference number
- st:	actual stratum value (hierarchy level)
- when:	last request (seconds)
- poll:	period of requesting the time server (seconds)
- reach:	octal notation of the successful requests, shifted left
- delay:	delay of the network transmission (milliseconds)
- offset:	difference between system time and reference time (milliseconds)
- jitter:	variance of the offsets (milliseconds)

The last section will show some NTP specific informations about the refclock.

## Configuration: Manual



---

### Manual

---

**Available documents:**

Filename	Language	Type	Date	Size	Option
1he_langps_ebx_v4	german	pdf	2004-04-20	2215.71kb	<a href="#">download</a>
1he_langps_ebx_v4_e	english	pdf	2004-04-20	2377.50kb	<a href="#">download</a>

2 documents available

---

You need Adobe's Acrobat Reader to open most of the documents [download](#)

---

**Customer notes:**

Filename	Language	Type	Date	Size	Options
no notes available	n/a	n/a	n/a	n/a	n/a

---

<small>Meinberg Funkuhren Auf der Landwehr 22 D - 31812 Bad Pyrmont, Germany</small>	<small>Contact Phone: 49 (0) 52 81 / 93 09 - 0 Fax: 49 (0) 52 81 / 93 09 - 30</small>	<small>Internet Homepage: <a href="http://www.meinberg.de">http://www.meinberg.de</a> Email: <a href="mailto:info@meinberg.de">info@meinberg.de</a></small>
--	---	---

This page gives you access to the documents stored on your LANTIME, especially the manuals and your own notes. The two lists include filename, language, file type, date and size of the documents/notes.

The LANTIME documents can be downloaded from here in order to read / print them on your workstation.

The customer notes are a way of storing small pieces of information on your LANTIME, for example if you want to keep track of configuration changes and want to comment them, you can create a note called "config\_changes" and show or edit it from here. If you want to get rid of one of your notes, you are able to delete it by choosing the appropriate button.

## Manual

Content of /www/manual/customer/english/test.txt:

```
here you can add some notes  
for this special device
```

Save file

Close

Meinberg Funkuhren  
Auf der Landwehr 22  
D - 31812 Bad Pyrmont, Germany

Contact  
Phone: 49 (0) 52 81 / 93 09 - 0  
Fax: 49 (0) 52 81 / 93 09 - 30

Internet  
Homepage: <http://www.meinberg.de>  
Email: [info@meinberg.de](mailto:info@meinberg.de)

If you want to add a note (you can maintain more than one note on your LANTIME), after choosing the button “add note” you have to enter a filename (without a directory path, all notes are stored in a fixed directory on the flash disk of your LANTIME) and the language of your note first. After you confirmed these parameters with “Add document”, you are able to edit the text of your new note.

## Manual

Please enter the following information:

Filename:

Language:

Add document

Back


Meinberg Funkuhren  
Auf der Landwehr 22  
D - 31812 Bad Pyrmont, Germany

Contact  
Phone: 49 (0) 52 81 / 93 09 - 0  
Fax: 49 (0) 52 81 / 93 09 - 30

Internet  
Homepage: <http://www.meinberg.de>  
Email: [info@meinberg.de](mailto:info@meinberg.de)

## The Command Line Interface

The command line interface (CLI) can be used within a TELNET or SSH session. After login, just enter “setup” to start the CLI setup tool.

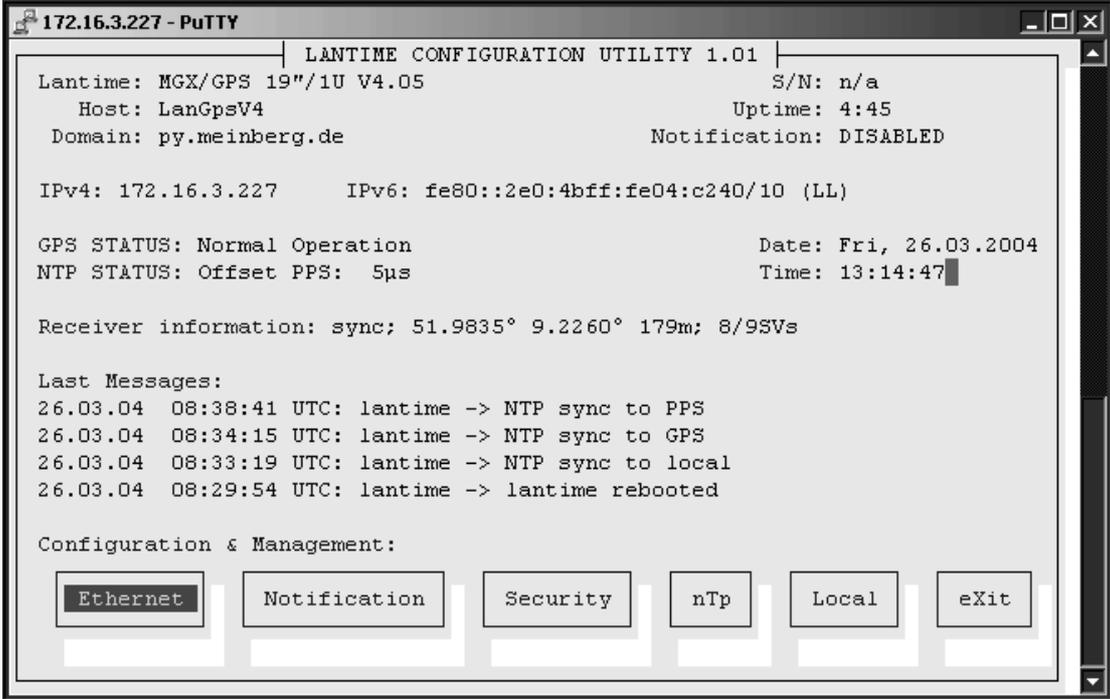

```
LANTIME CONFIGURATION UTILITY 1.01
Lantime: MGX/GPS 19"/1U V4.05          S/N: n/a
Host: LanGpsV4                       Uptime: 4:45
Domain: py.meinberg.de                Notification: DISABLED

IPv4: 172.16.3.227      IPv6: fe80::2e0:4bff:fe04:c240/10 (LL)

GPS STATUS: Normal Operation          Date: Fri, 26.03.2004
NTP STATUS: Offset PPS: 5µs          Time: 13:14:47

Receiver information: sync; 51.9835° 9.2260° 179m; 8/9SVs

Last Messages:
26.03.04 08:38:41 UTC: lantime -> NTP sync to PPS
26.03.04 08:34:15 UTC: lantime -> NTP sync to GPS
26.03.04 08:33:19 UTC: lantime -> NTP sync to local
26.03.04 08:29:54 UTC: lantime -> lantime rebooted

Configuration & Management:
[Ethernet] [Notification] [Security] [nTp] [Local] [eXit]
```


The start page gives a short overview of the most important configuration parameters and the runtime statistics of the unit. In the upper left corner you can read which LANTIME type and version of the LANTIME software you are using. This LANTIME software version is a head version number describing the base system and important subsystem. Below the version you will find the actual hostname and domain of your LANTIME unit, the IPv4 and IPv6 network address of the first network interface and on the right side the serial number, the uptime of the system (time since last boot) and the notification status is reported.

In the second section the actual status of the GPS reference clock and the NTP subsystem is shown, additional information about the GPS receiver can also be found here. This includes the number of satellites in view and the number of good satellites in view.

The third section shows the last messages of the system, each with a timestamp added. The newest messages are placed at the top of the list. This reflects the content of the file `/var/log/messages`, which is created after every start of the system (and is lost after a power off or reboot, see “Syslog server” to learn how to save the entries of your SYSLOG).

By using the buttons in the lower part of the screen, you can reach a number of configuration pages, that are described below.

## CLI Ethernet

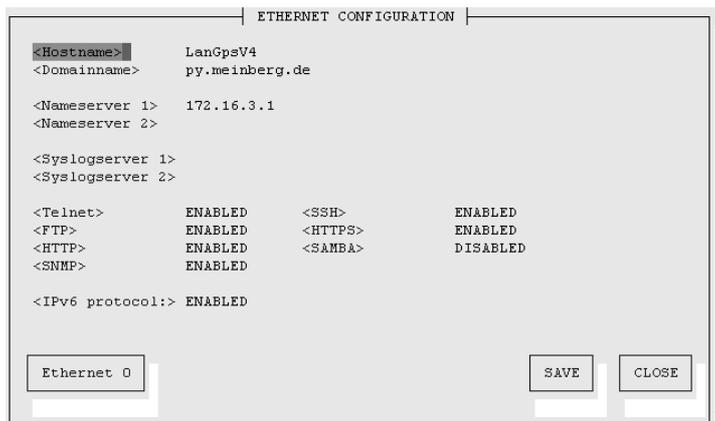

The screenshot shows a window titled "ETHERNET CONFIGURATION" with the following settings:

```
<Hostname> LanGpsV4
<Domainname> py.meinberg.de

<Nameserver 1> 172.16.3.1
<Nameserver 2>

<Syslogserver 1>
<Syslogserver 2>

<Telnet>      ENABLED   <SSH>        ENABLED
<FTP>        ENABLED   <HTTPS>     ENABLED
<HTTP>       ENABLED   <SAMBA>     DISABLED
<SNMP>      ENABLED

<IPv6 protocol:> ENABLED
```

At the bottom, there is a label "Ethernet 0" and two buttons: "SAVE" and "CLOSE".

In the network configuration all parameters related to the network interfaces can be changed. In the first section you can change the hostname and domain name. You can also specify two nameservers and two SYSLOG servers. In the nameserver and SYSLOG server fields you may enter an IPv4 or IPv6 address (the SYSLOG servers can be specified as a hostname, too).

All information which is written to the LANTIME SYSLOG (/var/log/messages) can be forwarded to one or two remote SYSLOG servers. The SYSLOG daemon of this remote SYSLOG needs to be configured to allow remote systems to create entries. A Linux SYSLOGD can be told to do so by using the command “syslogd -r” for starting the daemon.

If you enter nothing in the SYSLOG server fields or specify 0.0.0.0 as the SYSLOG server's addresses, the remote SYSLOG service is not started on your LANTIME.

Please be aware of the fact that all SYSLOG entries of the timeserver are stored in /var/log/messages and will be deleted when you power off or reboot the timeserver. A daily CRON job is checking for the size of the LANTIME SYSLOG and deletes them automatically, if their size is exceeding a limit.


By specifying one or two remote SYSLOG servers, you can preserve the SYSLOG information even when you have to reboot or switch off the LANTIME.

In the second section the possible network protocols and access methods can be configured. You can enable/disable TELNET, FTP, SSH, HTTP, HTTPS, SNMP and NETBIOS by checking/unchecking the appropriate check box. After you saved your settings with the “Save” button, all of these subsystems are stopped and restarted (if they are enabled).

The third section allows you to select the IP protocol 6. In this version the IPv4 protocol is mandatory and cannot be disabled, but a standalone IPv6 mode can be reached by entering an IPv4 address “0.0.0.0” and disabling the DHCP client option for every network interface of your LANTIME. By doing so, you ensure that the

timeserver cannot be reached with IPv4. Please note that TELNET, FTP and NETBIOS cannot be used over IPv6 in this version. IPv4 and IPv6 can be used together on one LANTIME.

To manage the interface specific parameters, you can enter the Ethernet Configuration Line page by using one of the ETHERNET buttons. If your LANTIME is equipped with only one network interface, you will find only one button (ETHERNET 0). Otherwise you see one button for each installed Ethernet port.

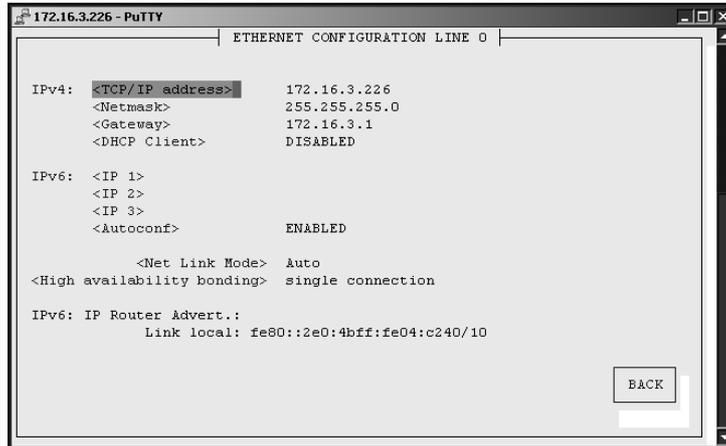

Here, the parameters for the network port can be changed. In the upper section of the page you can enter the IPv4 parameters, the lower part gives you access to the IPv6 parameters of the interface.

IPv4 addresses are built of 32 bits, which are grouped in four octets, each containing 8 bits. You can specify an IP address in this mask by entering four decimal numbers, separated by a point “.”.

Example: 192.168.10.2

Additionally you can specify the IPv4 Netmask and your default gateway address.

Please contact your network administrator, who will provide you with the settings suitable for your specific network.

If you are running a DHCP (Dynamic Host Configuration Protocol) server in your network, the LANTIME system can obtain its IPv4 settings automatically from this server. If you want to use this feature (you should also ask your network administrator if this is applicable in your network), you can change the DHCP Client parameter to “ENABLED”. In order to activate the DHCP client functionality, you can also enter the IP address “000.000.000.000” in the LCD menu by using the front panel buttons of the LANTIME. This is the default setting.

The MAC address of your timeserver can be read in the LCD menu by pressing the NEXT button on the front panel twice. This value is often used by the network administrator when setting up the DHCP parameters for your LANTIME at the DHCP server.

If the DHCP client has been activated, the automatically obtained parameters are shown in the appropriate fields (IPv4 address, netmask, gateway).

You can specify up to three IPv6 addresses for your LANTIME timeserver. Additionally you can switch off the IPv6 AUTOCONF feature. IPv6 addresses are 128 bits in length and written as a chain of 16 bit numbers in hexadecimal notation, separated with colons. A sequence of zeros can be substituted with "::" once.

**Examples:**

```
"::" is the address, which simply consists of zeros
"::1" is the address, which only consists of zeros and a 1 as the
last bit. This is the so-called host local address of IPv6 and is
the equivalent to 127.0.0.1 in the IPv4 world
"fe80::0211:22FF:FE33:4455"
is a typical so-called link local address, because it uses
the "fe80" prefix.
In URLs the colon interferes with the port section, therefore IPv6-
IP-addresses are written in brackets in an URL.
("http://[1080::8:800:200C:417A]:80/" ; the last ":80" simply sets
the port to 80, the default http port)
```

If you enabled the IPv6 protocol, the LANTIME always gets a link local address in the format "fe80:: ...", which is based upon the MAC address of the interface. If a IPv6 router advertiser is available in your network and if you enabled the IPv6 AUTOCONF feature, your LANTIME will be set up with up to three link global addresses automatically.

The next parameter in this sub section is "Netlink mode". This controls the port speed and duplex mode of the selected Ethernet port. Under normal circumstances, you should leave the default setting ("autosensing") untouched, until your network administrator tells you to change it.

The standard moniker for this technology is IEEE 802.3ad, although it is known by the common names of trunking, port trunking, teaming and link aggregation. The conventional use of bonding under Linux is an implementation of this link aggregation. Only one link is used at any given time. At least two physical Ethernet ports must be linked to one bonding group to activate this feature. The first Ethernet Port in one bonding group provides the IP-Address and the net mask of this new virtual device. The implementation of the LANTIME Bonding feature will not replace the MAC address of the active ethernet port. Depending on the LINK state of the ETH-port the IP address of the first port in the bonding group will be set to the next ethernet port. All services will be restarted automatically.

At this menu point it is possible to add each Ethernet port to a bonding group. At least two physical Ethernet ports must be linked to one bonding group to activate this feature. The first Ethernet Port in one bonding group provides the IP Address and the net mask of this new virtual device.

## CLI Notification

```

NOTIFICATION CONFIGURATION
Email:      <To address>      gregoire.diehl@meinberg.de
            <From address>    LantimeGregoire
            <Smarthost>      gateway
            <CC recipients>  info@meinberg.de

Windows Mail: <Mail address 1>
              <Mail address 2>

SNMP:       <SNMP manager 1>
            <Community>
            <SNMP manager 2>
            <Community>

Display     <Display 1 address>
            <Serial number 1>
            <Display 2 address>
            <Serial number 2>

            <Show user defined script>      <Edit user defined script>

            <Notification conditions>      <SAVE>      <CLOSE>

```

## Alarm events

On this page you can set up different notification types for a number of events. This is an important feature because of the nature of a timeserver: running in the background. If an error or problem occurs, the timeserver is able to notify an administrator by using a number of different notification types.

The LANTIME timeserver offers four different ways of informing the administrator or a responsible person about nine different events: EMAIL send an e-mail message to a specified e-mail account, SNMP-TRAP sends a SNMP trap to one or two SNMP trap receivers, WINDOWS POPUP MESSAGE sends a Winpopup message to one or two different computers and DISPLAY shows the alarm message on a wall mount display model VP100/NET, that is an optional accessory you can obtain from us.

"NTP not sync"	NTP is not synchronised to a reference time source
"NTP stopped"	NTP has been stopped (mostly when very large time offsets occur)
"Server boot"	System has been restarted
"Receiver not responding"	No contact to the internal GPS receiver
"Receiver not sync"	Internal GPS clock is not synchronised to GPS time
"Antenna faulty"	GPS antenna disconnected
"Antenna reconnect"	GPS antenna reconnected
"Config changed"	Configuration was changed by a user
„Leap second announced“	A leap second has been announced


Every event can use a combination of those four notification types, of course you can disable notification for events by disabling all notification types. The configuration of the four notification types can be changed in the upper section of the page, you can control which notification is used for which event by using the button “notification conditions” in the lower part of the page.

## E-mail messages

You can specify the e-mail address which is used as the senders address of the notification e-mail (From: address), the e-mail address of the receiver (To: address) and a SMTP smarthost, that is a mail server who is forwarding your mail to the receiver. If your LANTIME system is connected to the internet, it can deliver those e-mails itself. Additional e-mail recipients can be configured with the button “CC recipients”.

These settings cannot be altered with the LC display buttons of the front panel. Please note the following:

- The LANTIME hostname and domain name should be known to the SMTP smarthost
- A valid nameserver entry is needed
- The domain part of the From: address has to be valid

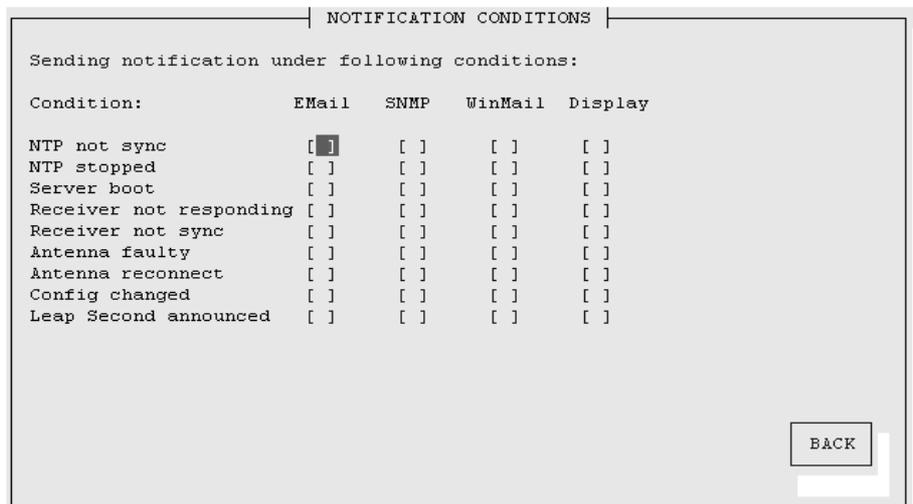

## Windows Popup Messages

Most Microsoft Windows operating systems provide you with a local notification tool. You can send messages via the special Windows protocol in your local network. It is not necessary to enable the NETBIOS protocol of the LANTIME in order to use this notification. On the Windows client side it is necessary to activate the “Microsoft Client for Windows” in the network configuration.

You can enter the Windows computer name of up to two Windows PCs in the appropriate fields. Every message contains a time stamp and a plain text message:



## **SNMP-TRAP messages**

Up to two SNMP trap receiver hosts can be configured in this subsection, you may use IPv4 or IPv6 addresses or specify a hostname. Additionally you have to enter a valid SNMP community string for your trap receiving community. These are mostly independent from the SNMP community strings used for status monitoring and configuration (see SNMP configuration on the “Security” page).

## **VP100/NET wall mount display**


The VP100/NET wall display is an optional accessory for the LANTIME timeserver, it has an own integrated Ethernet port (10/100 Mbit) and a SNTP client. The time of the display can be received from any NTP server using the SNTP protocol, additionally the display is able to show text messages, which are sent by using special software. The LANTIME can send an alarm message to one or two VP100/NET displays over the network, whenever an event occurs, for which you selected the display notification type. An alarm message is shown three times as a scrolling message.

Just enter the display’s IP address and its serial number (this is used for authorization), which can be found by pressing the red SET button on the back of the display four times. The serial number consists of 8 characters, representing four bytes in hexadecimal notation.


If you want to use the display for other purposes, you can send text messages to it by using our command line tool *send2display*, which can be found on the LANTIME. This allows you to use the display by CRON jobs or your own shell scripts etc. If you run the tool without parameters, a short usage screen is shown, explaining all parameters it may understand. See appendix for a printout of this usage screen.

## NTP Client Monitoring

You can monitor a group of NTP clients and supervise the time offset, the NTP stratum value and if the client is reachable or not. With the button „edit client list“ you can edit the list of clients to monitor. You can add the TCP/IP address or the hostname of the client:

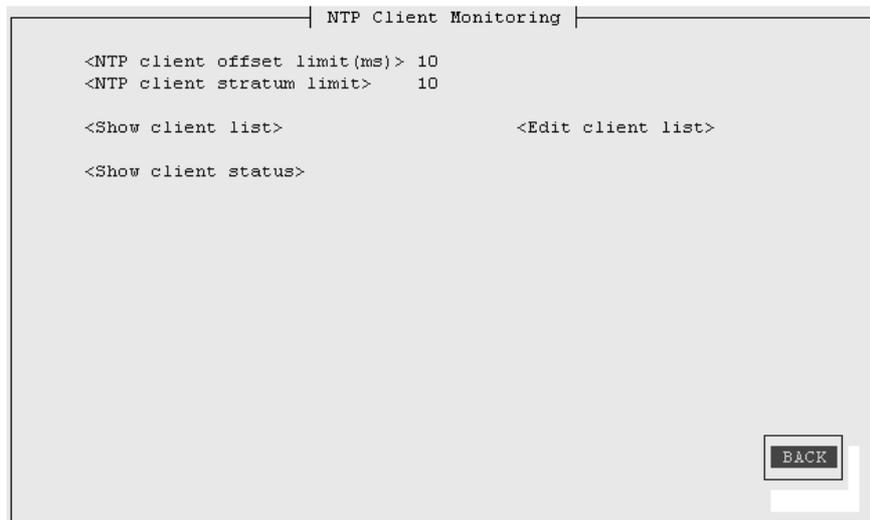

You can monitor the current states of the configured clients:

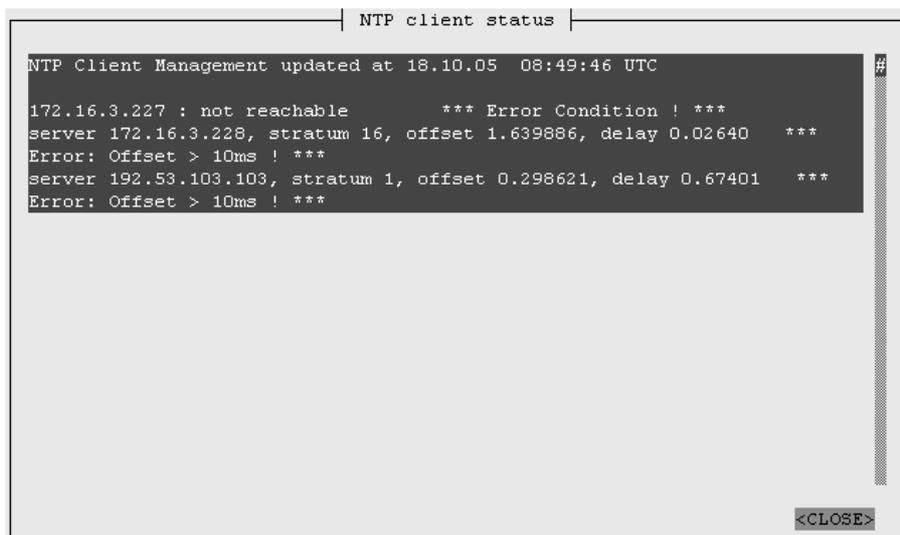

## CLI Security

```
CONFIG SECURITY PARAMETERS

Security management:

<Lantime password>

<Generate SSH key>
<Show SSH key>

<Generate SSL certificate for HTTP>      <Show SSL certificate for HTTP>

<Show NTP MD5 keys>                    <Edit NTP MD5 keys>
<Generate new NTP public key>          <Generate groupkey>
<NTP autokey password> timeserver

<Change SNMP user>
<Read community>      public
<Write community>
<SNMP contact>       Meinberg
<SNMP location>     Germany

SAVE  CLOSE
```

### Password

On the “Security“ page you can manage all security relevant parameters for your timeserver. In the first section “Login” the administration password can be changed, which is used for SSH, TELNET, FTP, HTTP and HTTPS access. The password is stored encrypted on the internal flash disk and can only be reset to the default value “timeserver” by a “factory reset”, changing all settings back to the factory defaults. Please refer to the LCD configuration section in this manual.

### SSH Secure Shell Login

The SSH provides you with a secure shell access to your timeserver. The connection is encrypted, so no readable passwords are transmitted over your network. The actual LANTIME version supports SSH1 and SSH2 over IPv4 and IPv6. In order to use this feature, you have to enable the SSHD subsystem and a security key has to be generated on the timeserver by using the “Generate SSH key” button. Afterwards, a SSH client can connect to the timeserver and opens a secure shell:

```
ssh root @ 192.168.16.111
```

The first time you connect to a SSH server with an unknown certificate, you have to accept the certificate, afterwards you are prompted for your password (which is configured in the first section of this page).

If you generate a new SSH key, you can copy and paste it into your SSH client configuration afterwards in order to allow you to login without being prompted for a password. We strongly recommend to use SSH for shell access, TELNET is a very insecure protocol (transmitting passwords in plain text over your network).

If you enabled SSH, your LANTIME automatically is able to use secure file transfer with SCP or SFTP protocol. The usage of FTP as a file transfer protocol is as insecure as using TELNET for shell access.

## **Generate SSL Certificate for HTTPS**

HTTPS is the standard for encrypted transmission of data between web browser and web server. It relies on X.509 certificates and asymmetric crypto procedures. The timeserver uses these certificates to authenticate itself to the client (web browser). The first time a web browser connects to the HTTPS web server of your LANTIME, you are asked to accept the certificate of the web server. To make sure that you are talking to your known timeserver, check the certificate and accept it, if it matches the one stored on the LANTIME. All further connections are comparing the certificate with this one, which is saved in your web browser configuration. Afterwards you are prompted to verify the certificate only when it changed.

By using the button “Generate SSL certificate for HTTP” you can create a new certificate. Please enter your organisation, name, mail address and the location in the upcoming form and press “Generate SSL certificate” to finally generate it.

## **NTP keys and certificates**

The fourth and fifth section of the “Security” page allow you to create the needed crypto keys and certificates for secure NTP operation (please see NTP authentication below).

The function “Generate new NTP public key“ is creating a new self-signed certificate for the timeserver, which is automatically marked as “trusted“.

**Important note:** This certificate is depending on the hostname of your LANTIME, it is mandatory to recreate the certificate after changing the hostname. The certificates are build with the internal command “ntp-keygen -T” (ntp-keygen is part of the installed NTP suite). Your LANTIME is using the /etc/ntp/ directory for storing its private and public keys (this is called the “keysdir”). Please refer to the chapter “NTP Autokey” for further information (below).

The two options “Show NTP MD5 key“ and “Edit NTP MD5 keys“ allow you to manage the symmetric keys used by NTP. More about that can be found in the chapter about symmetric keys (below).

## CLI NTP Parameter

```
CONFIG NTP PARAMETERS

<Config External NTP Server>

  <NTP Broadcast address> 0
  <NTP Broadcast intervall>
    <Autokey> DISABLED <Key>

  <Stratum of local clock> 12
    <Local Clock> ENABLED

    <PPS> ENABLED
    <Autokey> DISABLED

  <Trusted key>

  <NTP trust time> 0 hour(s)

  <Edit additional NTP Parameter> <Show current NTP configuration>

  SAVE CLOSE
```

The NTP configuration page is used to set up the additional NTP parameters needed for a more specific configuration of the NTP subsystem.

The default configuration of the timeserver consists of a local clock, which represents the hardware clock of your LANTIME system and the GPS reference clock. The local clock is only chosen as the NTP time reference after the GPS clock lost its synchronisation. The stratum level of this local clock is set to 12, this ensures that clients recognise the switchover to the local clock and are able to eventually take further actions. The local clock can be disabled.

Because the GPS reference clock is internally connected to the LANTIME system by using a serial connection, the accuracy using this way of synchronisation is around 1 ms. The high accuracy of the LANTIME timeserver (around 10 microseconds) is available by using the ATOM driver of the NTP subsystem, which is directly interpreting the PPS (pulse per second) of the GPS reference clock. The default configuration looks like this:

```
# *** lantime ***
# NTP.CONF for GPS167 with UNI ERLANGEN

server 127.127.1.0 # local clock
fudge 127.127.1.0 stratum 12 # local stratum

server 127.127.8.0 mode 135 prefer # GPS167 UNI Erlangen PPS
fudge 127.127.8.0 time1 0.0042 # relative to PPS
server 127.127.22.0 # ATOM (PPS)
fudge 127.127.22.0 flag3 1 # enable PPS API
enable stats
statsdir /var/log/
statistics loopstats
driftfile /etc/ntp.drift

# Edit /mnt/flash/ntpconf.add to add additional NTP parameters
```


## **CLI NTP Authentication**

Please see the corresponding chapter in the web interface description.

## **CLI NTP Autokey**

Please see the corresponding chapter in the web interface description.

## CLI Local

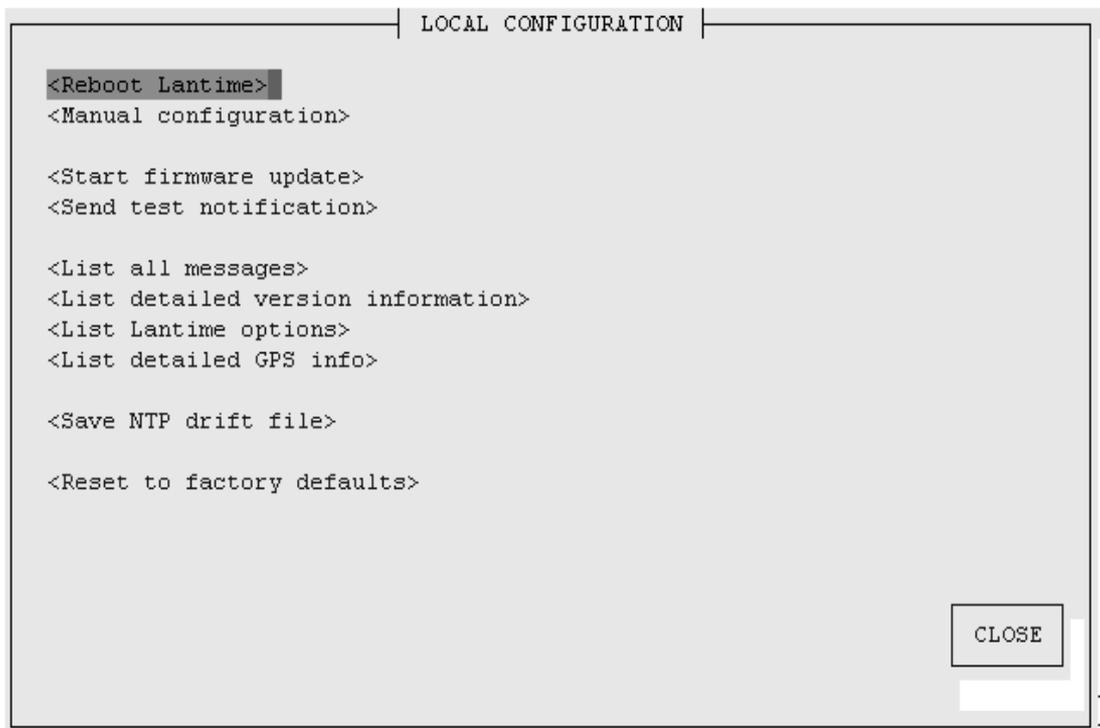

### Administrative functions

In the first section there are several functions which may be used by the administrator. The button “Reboot LANTIME” is restarting the system, the built-in reference clock is not affected by this, only the included computer system is rebooted, which may take up to 30 seconds.

With “Manual configuration“ you are able to change the main configuration by editing the configuration file by hand. After editing, press the “Save file” button to preserve your changes, afterwards you are asked if your changes should be activated by reloading the configuration (this results in reloading several subsystems like NTPD, HTTPD etc.).

The function “Send test notification“ is generating a test alarm message and sends it using all configured notify possibilities (e-mail, WMail, SNMP-Traps, wall mount display).

You can use the function “Save NTP drift file“ to copy the file /etc/ntp.drift to the internal flash disc of your LANTIME. NTP is using this file to have the parameters for compensation of the incorrectness of the system clock available directly after a restart. This results in a faster synchronisation process of the NTPD subsystem after a system restart. You should use this function only, if the NTPD has been synchronized to the internal reference clock for more than one day. This is done here at Meinberg directly before shipping the LANTIME unit to our customers, so you do not need to use this function during normal operation. It may be applicable after a software update.

The function “Reset to factory defaults“ is setting all configuration parameters back to default values. The regular file /mnt/flash/global\_configuration will be replaced with the file /mnt/flash/factory.conf, but first a copy of the configuration is saved under /mnt/flash/global\_configuration.old for backup reasons. The default password “timeserver” is replacing the actual password, too. After using this function, all certificates should be recreated because of the change of the unit’s hostname.

Please be aware of the fact that the default configuration is not activated instantly. If you want to avoid setting up the IP address of your unit by locally configuring it on site with the buttons of the front panel (meaning physical presence of someone directly at the location of the LANTIME), you have to configure the network parameters of your LANTIME immediately after using the “reset to factory defaults” button. So, please proceed directly to the Ethernet page and check/change the IP address and the possible access subsystems (HTTP for example) of the LANTIME. The first usage of “Save settings” will load the configuration from flash into memory and activate it.

## **User Management**

For administration different users can be set up. 3 group memberships can be assigned to each user: the Super-User has all properties for administration. The group membership Administrator can change all parameters via the command line interface (CLI) configuration tool and the WEB interface. The group Administrator cannot use any Linux command in a Telnet, SSH or Terminal session. If the Administrator will login, the setup program will be started directly. After termination of the Setup program this user will be logout automatically. The group membership “Info“ has the same properties like the Administrator but cannot change any parameter.

The menu “User Management“ allows you to set up different users with a password and the group membership. To change the properties of an user you have to delete the old user and set up a new one. The user “root“ cannot be deleted and has always the membership of Super-User. The password of the user “root“ can be set on the security page.

## **Administrative information**

The button “List all messages“ displays the SYSLOG of the LANTIME completely. In this log all subsystems create their entries, even the OS kernel. The SYSLOG file /var/log/messages is only stored in the system’s ram disk, therefore it is lost after a power off or restart. If you configured an external SYSLOG server, all LANTIME SYSLOG entries will be duplicated on this remote system and can be saved permanently this way.

```
Mar 15 13:35:17 LanGpsV4 ntpd[12948]: ntpd 4.2.0@1.1161-r Fri Mar 5
15:58:48 CET 2004 (3)
Mar 15 13:35:17 LanGpsV4 ntpd[12948]: signal_no_reset: signal 13 had
flags 4000000
Mar 15 13:35:17 LanGpsV4 ntpd[12948]: precision = 3.000 usec
Mar 15 13:35:17 LanGpsV4 ntpd[12948]: kernel time sync status 2040
```

```

Mar 15 13:35:17 LanGpsV4 ntpd[12948]: frequency initialized 45.212
PPM from /etc/ntp.drift
Mar 15 13:38:36 LanGpsV4 lantime[417]: NTP sync to GPS
Mar 15 13:38:36 LanGpsV4 lantime[417]: NTP restart
Mar 15 13:45:36 LanGpsV4 proftpd[14061]: connect from 172.16.3.2
(172.16.3.2)
Mar 15 14:01:11 LanGpsV4 login[15711]: invalid password for `root'
on `tty1' from `172.16.3.45'
Mar 15 14:01:17 LanGpsV4 login[15711]: root login on `tty1' from
`172.16.3.45'

```

With "List detailed version information" a number of version numbers (including LANTIME software, operating system and NTPD) are shown in a textbox.

The function "List LANTIME Options" shows the hardware options installed in your LANTIME.

```

OUTPUT OF /gps_info
GPS Information File
Updated: Fri Mar 26 14:13:45 2004

GPS Mode      : Normal Operation
GPS           : sync
NTP           : Offset PPS: -1µs

Position:
  Lat: 51.9835°
  Lon: 9.2260°
  Alt: 184m

Satelite:
  in view : 08
  good SV : 07
  selected: 28 22 31 11

Dilution of Prec:
  PDOP: 2.31

```

Using the button "List detailed GPS information" gives you the possibility to check detailed GPS status information. The first parameter indicates the time and date of the last update of the shown parameters. Next you find the GPS receiver status and the NTP status, followed by the GPS position data. The position uses the Latitude / Longitude / Altitude format. Latitude and Longitude are shown in degrees, minutes and seconds, Altitude is shown in meters above sea level.

The satellite section shows the numbers of satellites in view and the number of usable satellites ("good SV"). Additionally, the selected set of the four used satellites can be read.

The accuracy of the calculated receiver position and time deviation is dependent on the constellation of the four selected satellites. Using the position of the receiver and the satellites, a number of values can be calculated, which allow a rating of the selected constellation. These values are called "Dilutions of Precision (DOP)".

PDOP is the abbreviation for "Position Dilution of Precision", TDOP means "Time Dilution of Precision" and GDOP stands for "General Dilution of Precision". Lower values are indicating better accuracy.

The next section “Satellite Info“ shows information about all the satellites, which are in view momentarily. The satellite ID, elevation, Azimuth and distance to the receiver reveal the position of the satellite in the sky. The Doppler shows whether the satellite is ascending (positive values) or descending (negative value).

## **Software Update**

If you need to update the software of your LANTIME, you need a special file update.tgz from Meinberg, which has to be uploaded to the LANTIME by using ftp, SCP or SFTP to the root dir (/update.tgz), after the file transfer is complete, press “Start firmware update”.

Afterwards you are prompted to confirm the start of the update process. The scope of the update only depends on the chosen file.

## SNMP Support

The Simple Network Management Protocol (SNMP) has been created to achieve a standard for the management of different networks and the components of networks. SNMP is operating on the application layer and uses different transport protocols (like TCP/IP and UDP), so it is network hardware independent. The SNMP design consists of two types of parties, the agent and the manager. SNMP is a client-server architecture, where the agent represents the server and the manager represents the client. The LANTIME has an integrated SNMP agent, who is designed especially to handle SNMP requests for LANTIME specific status information (including status variables for the internal reference clock). The LANTIME SNMP agent is also capable of handling SET requests in order to manage the LANTIME configuration via SNMP, if your SNMP management software is also supporting this feature. The elements (objects / variables) are organised in data structures called Management Information Base (MIB). The LANTIME includes the standard NET-SNMP MIB and is based on SNMPv1 (RFC 1155, 1157), SNMPv2 (RFC 1901-1908) and SNMPv3. The following SNMP version is installed on the timeserver:

Net-SNMP Version:	5.0.8
Network transport support:	Callback Unix TCP UDP TCPIPv6 UDPIPv6
SNMPv3 Security Modules:	usm
Agent MIB code:	mibII, ucd_snmp, snmpv3mibs, notification, target, agent_mibs, agentx agent_mibs, utilities, meinberg, mibII/ipv6
Authentication support:	MD5 SHA1
Encryption support:	DES

By using the special Meinberg SNMP-agent all important status variables can be read with SNMP conformant client software. Where applicable, a variable is implemented as string and numeric value, for example allowing SNMP client software to use the information for drawing diagrams or monitor threshold levels.

When using the NET-SNMP suite, you can read all status information your LANTIME offers via SNMP by using the `snmpwalk` command:

```
snmpwalk -v2c -c public timeserver enterprises.5597
```

```

...mbgLtNtp.mbgLtNtpCurrentState.0 = 1 : no good refclock (->local)
...mbgLtNtp.mbgLtNtpCurrentStateVal.0 = 1
...mbgLtNtp.mbgLtNtpStratum.0 = 12
...mbgLtNtp.mbgLtNtpActiveRefclockId.0 = 1
...mbgLtNtp.mbgLtNtpActiveRefclockName.0 = LOCAL(0)
...mbgLtNtp.mbgLtNtpActiveRefclockOffset.0 = 0.000 ms
...mbgLtNtp.mbgLtNtpActiveRefclockOffsetVal.0 = 0
...mbgLtNtp.mbgLtNtpNumberOfRefclocks.0 = 3
...mbgLtNtp.mbgLtNtpAuthKeyId.0 = 0
...mbgLtNtp.mbgLtNtpVersion.0 = 4.2.0@I.1161-r Fri Mar 5 15:58:56 CET 2004 (3)

...mbgLtRefclock.mbgLtRefClockType.0 = Clock Type: GPS167 IHE
...mbgLtRefclock.mbgLtRefClockTypeVal.0 = 1
...mbgLtRefclock.mbgLtRefClockMode.0 = Clock Mode: Normal Operation

...mbgLtRefclock.mbgLtRefClockModeVal.0 = 1
...mbgLtRefclock.mbgLtRefGpsState.0 = GPS State: sync
...mbgLtRefclock.mbgLtRefGpsStateVal.0 = 1
...mbgLtRefclock.mbgLtRefGpsPosition.0 = GPS Position: 51.9834° 9.2259° 181m
...mbgLtRefclock.mbgLtRefGpsSatellites.0 = GPS Satellites: 06/06
...mbgLtRefclock.mbgLtRefGpsSatellitesGood.0 = 6
...mbgLtRefclock.mbgLtRefGpsSatellitesInView.0 = 6
...mbgLtRefclock.mbgLtRefPzfState.0 = PZF State: N/A
...mbgLtRefclock.mbgLtRefPzfStateVal.0 = 0
...mbgLtRefclock.mbgLtRefPzfKorrelation.0 = 0
...mbgLtRefclock.mbgLtRefPzfField.0 = 0

```

Please note that you only see the object names (like “mbgLtRefclock.mbgLtRefPzfField”) if you installed the Meinberg MIB files on your client workstation first (please see the web interface or CLI setup tool chapters to find out how to do this).

By using the standard MIB, no NTP get requests are allowed. Only the standard system and network parameters can be accessed (e.g. using the NET-SNMP command “snmpget”).

Only by using the Meinberg MIB the change of configuration parameters is possible (the command “snmpset“ is used to alter a variable, for example).

## Configuration over SNMP

The LANTIME timeserver can be configured via several user interfaces. Besides the possibility to setup its parameters with the web interface (HTTP and/or HTTPS) and the direct shell access via Telnet or SSH, a SNMP based configuration interface is available.

In order to use the SNMP configuration features of the timeserver, you need to fulfil the following requirements (the system has to be reachable over the network, of course):

- a) SNMP has to be activated in the timeservers setup by setting up a RWCOMMUNITY
- b) In the SNMP configuration the read-write-access needs to be activated
- c) The timeserver-specific MIB files must be present on the clients, they have to be included in the SNMP setup of the client software

a) and b) can be achieved by using the web interface or the shell access, please see the appropriate chapters in this manual. The mentioned MIB files can be found directly on the timeserver located at /usr/local/share/snmp/mibs. All files with names starting with "MBG-SNMP-" have to be copied onto the SNMP clients by using the timeservers ftp access (for example). You may also use the web interface, on the page "Local" you will find a button "Download MIB files". You will get a tar-archive if you are using the download button, which you have to unpack first. Afterwards, copy all MIB files to the MIB directory on your client(s) and configure your SNMP client software to use them.

## Examples for the usage of the SNMP configuration features

The following examples are using the software net-snmp, a SNMP open source project. You will find detailed information at [www.net-snmp.org](http://www.net-snmp.org)!

To browse the configuration branch of the timeserver-MIB, you could use the following command on a UNIX system with net-snmp SNMP tools installed:

```
root@testhost:/# snmpwalk -v2c -c public timeserver.meinberg.de mbgLtCfG
```

```
MBG-SNMP-LANTIME-CFG-MIB::mbgLtCfghostname.0 = STRING: LantimeSNMPTest
MBG-SNMP-LANTIME-CFG-MIB::mbgLtCfGDomainname.0 = STRING: py.meinberg.de
MBG-SNMP-LANTIME-CFG-MIB::mbgLtCfGNameserver1.0 = STRING: 172.16.3.1
MBG-SNMP-LANTIME-CFG-MIB::mbgLtCfGNameserver2.0 = STRING:
MBG-SNMP-LANTIME-CFG-MIB::mbgLtCfGSyslogserver1.0 = STRING:
MBG-SNMP-LANTIME-CFG-MIB::mbgLtCfGSyslogserver2.0 = STRING:
[ . . . ]
```

To alter a parameter, with net-snmp you would use the snmpset command:

```
root@testhost:/# snmpset -v2c -r 0 -t 10 -c rwsecret timeserver.meinberg.de
mbgLtCfghostname.0 string „helloworld“
```

```
MBG-SNMP-LANTIME-CFG-MIB::mbgLtCfghostname.0 = STRING: helloworld
```

```
root@testhost:/#
```

Please note that your SNMP request has to be sent with a sufficient timeout (in the above snmpset example this was achieved by using the “-t 10” option, choosing a timeout of 10 seconds), because after each parameter change, the timeserver reloads its configuration, which takes a few seconds. The request is acknowledged by the SNMP agent afterwards.

To change a group of parameters without reloading the configuration after each parameter, you have to send all parameter changes in one single request. You can do this with the net-snmp snmpset command by specifying multiple parameters in one command line:

```
root@testhost:/# snmpset -v2c -r 0 -t 10 -c rwsecret timeserver.meinberg.de
mbgLtCfghostname.0 string „helloworld“ mbgLtCfGDomainname.0 string
„internal.meinberg.de“
```

```
MBG-SNMP-LANTIME-CFG-MIB::mbgLtCfghostname.0 = STRING: helloworld
MBG-SNMP-LANTIME-CFG-MIB::mbgLtCfGDomainname.0 = STRING: internal.meinberg.de
```

```
root@testhost:/#
```

The available SNMP variables are described in detail in the “SNMP configuration reference“ part of this manual. Additionally, it is recommended to also read the mentioned MIB files.

## **Further configuration possibilities**

Because the timeserver uses a standard version of the net-snmp SNMP daemon (with extended features covering the timeserver-specific functions), all configuration parameters of the SNMPD can be used. The configuration file of the SNMP daemon is located at `/usr/local/share/snmp` after boot time, the filename is `snmpd.conf`.

During the boot sequence, this file is created dynamically by using a template file and appending the SNMP parameters stored in the timeserver setup.

If you need to customize the configuration of the timeservers SNMPD (for setting up detailed access control rights for example), you may edit `/mnt/flash/packages/snmp/etc/snmpd_conf.default` (which is the mentioned template file). Please note that some lines are appended to this file (as described above), before it is used as `/usr/local/share/snmp/snmpd.conf` by the `snmpd` process.

## **Send special timeserver commands with SNMP**

The timeserver is capable of receiving special commands by SNMP in order to reboot the unit or reload its configuration after you manually changed it. A special SNMP variable is reserved for this (`mbgLtCmdExecute`) and has to be set to a special integer value for each command. The following commands are available:

### **Reboot(1)**

Setting the `mbgLtCmdExecute` variable to value 1 will reboot the timeserver after a short waiting period of approximately 3-5 seconds.

### **FirmwareUpdate(2)**

This command installs a previously uploaded (with FTP for example) firmware version.

### **ReloadConfig(3)**

The parameters of the timeserver configuration (stored in `/mnt/flash/global_configuration`) are re-read and afterwards a number of subsystems (e.g. NTPD, HTTPD/HTTPSD, SMBD) will be restarted in order to use those eventually changed settings. Please note that the SNMPD will not be restarted by this command (you have to use `reboot` instead or restart it manually by killing the process and starting it again in the shell).

### **GenerateSSHKey(4)**

A new SSH key will be generated.

### **GenerateHTTPSKey(5)**

A new HTTPS key will be generated.

### **ResetFactoryDefaults(6)**

The configuration of the timeserver is reset to factory defaults, afterwards an automatic ReloadConfig is executed in order to use these default settings.

### **GenerateNewNTPAutokeyCert(7)**

A new key is generated, it can be used with the NTP AUTOKEY feature.

### **SendTestNotification(8)**

A test message is sent by using all notification methods the timeserver has a configuration for (e.g. mail, winpopup, SYSLOG etc.).

A few examples:

(we are again using the snmpset command which comes with the net-snmp tools).

```
root@testhost:/# snmpset -v2c -r 0 -t 10 -c rwsecret timeserver.meinberg.de  
mbgLtCmdExecute.0 int 1
```

MBG-SNMP-LANTIME-CMD-MIB::mbgLtCmdExecute.0 = INTEGER: Reboot(1)

```
root@testhost:/#
```

The command shown above is forcing the timeserver to reboot. Instead of using the integer value, you may also enter the command name, as it is defined in the MIB file MBG-SNMP-LANTIME-CMD.txt (and in the command list above).

If you want the timeserver to reload it's configuration file (which you previously uploaded via FTP probably), you would enter this command:

```
root@testhost:/# snmpset -v2c -r 0 -t 10 -c rwsecret timeserver.meinberg.de  
mbgLtCmdExecute.0 int ReloadConfig
```

MBG-SNMP-LANTIME-CMD-MIB::mbgLtCmdExecute.0 = INTEGER: ReloadConfig(3)

```
root@testhost:/#
```

Please pay attention to the options “-r 0“ (meaning “no retries“) and “-t 10“ (meaning “timeout of 10 secs“) in the above examples. These options avoid multiple executions of the desired command, additionally they give your snmpset command enough time to wait for an acknowledgement from the timeservers snmp agent.

## Configuration of the timeserver with SNMP: Reference

The MIB of the timeserver includes the following parts:

SNMP Object	Name	Description
enterprises.5597	mbgSNMP	Root node of the Meinberg-MIB
mbgSNMP.3	MbgLANTIME	Root node of the LANTIME MIB
mbgLANTIME.1	mbgLtNtp	LANTIME NTP status variables
mbgLANTIME.2	mbgLtRefclock	LANTIME reference time source status variables
mbgLANTIME.3	mbgLtTraps	LANTIME SNMP traps
mbgLANTIME.4	mbgLtCfg	LANTIME configuration variables
mbgLANTIME.5	mbgLtCmd	LANTIME control commands

Further detailed information can be found in the Meinberg MIB files.

Reference of LANTIME SNMP configuration variables:

<i>SNMP branch</i>	<i>Variable</i>	<i>Data type</i>	<i>Description</i>
mbgLtCfgNetwork	mbgLtCfghostname	string	The hostname of the timeserver
	mbgLtCfgDomainname	string	The Domainname of the timeserver
	mbgLtCfgNameserver1	string (IPv4 or IPv6-address)	IP-address of first nameserver
	mbgLtCfgNameserver2	string (IPv4 or IPv6-address)	IP-address of second nameserver
	mbgLtCfgSyslogserver1	string (IPv4 or IPv6-address or hostname)	IP-address or hostname of first syslog-server
	mbgLtCfgSyslogserver2	string (IPv4 or IPv6-address or hostname)	IP-address or hostname of second syslog-server
	mbgLtCfgTelnetAccess	integer (0 = disabled, 1 = enabled)	Telnet access activated?
	mbgLtCfgFTPAccess	integer (0 = disabled, 1 = enabled)	FTP-access activated?
	mbgLtCfgHTTPAccess	integer (0 = disabled, 1 = enabled)	Webinterface activated?
	mbgLtCfgHTTPSAccess	integer (0 = disabled, 1 = enabled)	Encrypted webinterface activated?
	mbgLtCfgSNMPAccess	integer (0 = disabled, 1 = enabled)	SNMP-daemon activated?
	mbgLtCfgSambaAccess	integer (0 = disabled, 1 = enabled)	LANManager-access activated?
	mbgLtCfgIPv6Access	integer (0 = disabled, 1 = enabled)	IPv6-protocol enabled?
	mbgLtCfgSSHAccess	integer (0 = disabled, 1 = enabled)	SSH-access activated?
mbgLtCfgNTP	mbgLtCfgNtpServer1IP	string (IPv4 or IPv6-address or hostname)	First external NTP-server
	mbgLtCfgNtpServer1KEY	integer	Link to the key which should be used for the first NTP-server
	mbgLtCfgNtpServer2IP	string (IPv4 or IPv6-address or hostname)	Second external NTP-server
	mbgLtCfgNtpServer2KEY	integer	Link to the key which should be used for the second NTP-server
	mbgLtCfgNtpServer3IP	string (IPv4 or IPv6-address or hostname)	Third external NTP-server

<i>SNMP branch</i>	<i>Variable</i>	<i>Data type</i>	<i>Description</i>
	mbgLtCfgNtpServer3KEY	integer	Link to the key which should be used for the third NTP-server
	mbgLtCfgStratumLocalClock	integer(0..15)	Stratum-value of the internal system clock of the timeserver
	mbgLtCfgNTPTrustedKey	integer	Link to the key which should be used for the internal reference time source
	mbgLtCfgNTPBroadcastIP	string (IPv4 or IPv6-address)	IP-address, which has to be used for NTP-broadcasts (or multicasts)
	mbgLtCfgNTPBroadcastKey	integer	Link to the key which should be used for outgoing NTP-broadcasts
	mbgLtCfgNTPBroadcastAutokey	integer (0 = disabled, 1 = enabled)	Use autokey for NTP broadcasts?
	mbgLtCfgAutokeyFeature	integer (0 = disabled, 1 = enabled)	Use autokey feature of the NTP server?
	mbgLtCfgAtomPPS	integer (0 = disabled, 1 = enabled)	Atom PPS (pulse per second) activated?
mbgLtCfgEMail	mbgLtCfgEMailTo	string (Liste von EMail-addressn)	One or more (semicolon separated) email address(es), which should receive warnings and alarm notifications from the timeserver
	mbgLtCfgEMailFrom	string (EMail-address)	The EMail-address which is used as the senders address for email notifications
	mbgLtCfgEMailSmarthost	string (IPv4 or IPv6-address or hostname)	The SMTP-host, which is used for sending mails
mbgLtCfgSNMP	mbgLtCfgSNMPTrapReceiver1	string (IPv4 or IPv6-address or hostname)	First host, which receives notifications sent as SMTP-traps
	mbgLtCfgSNMPTrapReceiver1Community	string	The SNMP community used when sending SNMP-Traps to the first host
	mbgLtCfgSNMPTrapReceiver2	string (IPv4 or IPv6-address or hostname)	Second host, which receives notifications sent as SMTP-traps
	mbgLtCfgSNMPTrapReceiver2Community	string	The SNMP community used when sending SNMP-Traps to the second host
	mbgLtCfgSNMPROCommunity	string	The SNMP community, which has read-only access and therefore can be used to only monitor status variables or configuration values (SNMP V2c)
	mbgLtCfgSNMPRWCommunity	string	The SNMP community, which has read-write access and there for can be used to monitor status variables and get/set configuration values (SNMP V2c)
	mbgLtCfgSNMPContact	string	Contact information (e.g. name of a contact person) of the timeserver
	mbgLtCfgSNMPLocation	string	Location (e.g. building/room number) of the timeserver
mbgLtCfgWinpopup	mbgLtCfgWMailAddress1	string	First receiver of notifications sent as windows popup messages
	mbgLtCfgWMailAddress2	string	Second receiver of notifications sent as windows popup messages
mbgLtCfgWalldisplay	mbgLtCfgVP100Display1IP	string (IPv4 or IPv6-address or hostname)	hostname or IP-address of the first wallmount display used for showing notifications
	mbgLtCfgVP100Display1SN	string (Hexstring)	The serial number of the first wall mount display used for showing notifications (can be found in the setup menu of the display)
	mbgLtCfgVP100Display2IP	string (IPv4 or IPv6-address or hostname)	hostname or IP-address of the second wall mount display used for showing notifications
	mbgLtCfgVP100Display2SN	string (Hexstring)	The serial number of the first wall mount display used for showing notifications (can be found in the setup menu of the display)

<i>SNMP branch</i>	<i>Variable</i>	<i>Data type</i>	<i>Description</i>
mbgLtCfgNotify	mbgLtCfgNotifyNTPNotSync	string(combination)	Exactly one, none or a combination of the following notification types:  email=sending an email wmail=sending a winpopup-message snmp=sending a SNMP-trap, disp=showing on wall mount display, syslog=sending a syslog-entry  for the event „NTP not synchronized“
	mbgLtCfgNotifyNTPStopped	string (combination)	(see mbgLtCfgNotifyNTPNotSync) for the event „NTP Daemon stopped“
	mbgLtCfgNotifyServerBoot	string (combination)	(see mbgLtCfgNotifyNTPNotSync) for the event „Timeserver reboot“
	mbgLtCfgNotifyRefclockNotResponding	string (combination)	(see mbgLtCfgNotifyNTPNotSync) for the event „Refclock not ready“
	mbgLtCfgNotifyRefclockNotSync	string (combination)	(see mbgLtCfgNotifyNTPNotSync) for the event „Refclock not synchron“
	mbgLtCfgNotifyAntennaFaulty	string (combination)	(see mbgLtCfgNotifyNTPNotSync) for the event „GPS antenna not connected or damaged“
	mbgLtCfgNotifyAntennaReconnect	string (combination)	(see mbgLtCfgNotifyNTPNotSync) for the event „GPS antenna reconnected“
	mbgLtCfgNotifyConfigChanged	string (combination)	(see mbgLtCfgNotifyNTPNotSync) for the event „Configuration changed“
	mbgLtCfgNotifyLeapSecondAnnounced	string (combination)	(see mbgLtCfgNotifyNTPNotSync) for the event „Leap second announced“
mbgLtCfgEthernet	mbgLtCfgEthernetIf0IPv4IP	string (IPv4 IP-address)	IPv4-address of first network interface of the timeserver
	mbgLtCfgEthernetIf0IPv4Netmask	string (IPv4 Netzmaske)	IPv4-netmask of first network interface of the timeserver
	mbgLtCfgEthernetIf0IPv4Gateway	string (IPv4 IP-address)	IPv4-address of the default gateway of the timeservers first network interface
	mbgLtCfgEthernetIf0DHCPClient	integer (0 = disabled, 1 = enabled)	Configure the first network interface of the timeserver with DHCP?
	mbgLtCfgEthernetIf0IPv6IP1	string (IPv6 IP-address)	First IPv6-IP-address of the timeservers first network interface
	mbgLtCfgEthernetIf0IPv6IP2	string (IPv6 IP-address)	Second IPv6-IP-address of the timeservers first network interface
	mbgLtCfgEthernetIf0IPv6IP3	string (IPv6 IP-address)	Third IPv6-IP-address of the timeservers first network interface
	mbgLtCfgEthernetIf0IPv6Autoconf	integer (0 = disabled, 1 = enabled)	Activate autoconf for the IPv6 - configuration of the timeservers first network interface?
	mbgLtCfgEthernetIf0NetlinkMode	integer (0..4)	Configuration of the network-speed and duplex settings of the timeservers first network interface  0 = autosensing, 1 = 10Mbit/s half duplex, 2= 10Mbit/s full duplex, 3=100Mbit/s half duplex, 4=100Mbit/s full duplex

For all additional Ethernet interfaces of the timeserver, “If0“ only has to be replaced with “Ifx“, where “x“ is substituted by the number of the desired Ethernet interface. Example: The IPv4-address of the timeservers third Ethernet interface can be set with mbgLtCfgEthernetIf2IPv4IP!

## SNMP Traps

If configured, the LANTIME is sending SNMP traps, which can be received by up to 2 SNMP management systems. These traps can be received by using the NET-SNMP suite tool “snmptrapd”, you can start it on a UNIX system with “snmptrapd – p” (-p is for output to stdout, -s would use the syslog for output). The corresponding MIB files can be found on the LANTIME at /usr/local/share/snmp/mibs/ , all Meinberg specific MIB files are named “MBG-SNMP...”. These MIB files can be downloaded by using the web interface (see “Local” page, “Download MIB files” button), after unpacking the archive file you can import the MIB files into your management system.

The following SNMP-traps are available:

"NTP not sync"	NTP not synchronised to refclock
"NTP stopped"	NTP stopped
"Server boot"	System has rebooted
"Receiver not responding"	no answer from GPS
"Receiver not sync"	GPS receiver not synchronised
"Antenna faulty"	GPS antenna not connected
"Antenna reconnect"	GPS antenna reconnected
"Config changed"	System parameter changed by user
„Leap second announced“	Leap second announced

See the ”Notification“ page at the web interface and Command Line Interface description to learn how to configure the SNMP trap receivers.

## SNMP Trap Reference

All traps can be found under the `mbgLtTraps` section in the Meinberg MIB. A special trap exists for every notification event the timeserver knows. Please note that the traps are only sent if you configured the notification type “SNMP trap” for the event, otherwise no trap is generated. All traps have a string parameter included, which contains the plain text event message for the appropriate event (you are able to change the default text messages, see web interface and/or CLI setup section to find out how to do this).

Here is a list of all traps the timeserver knows:

`mbgLtTrapNTPNotSync` (`mbgLtTraps.1`): Whenever the NTP daemon (`ntpd`) loses sync, it will generate this trap and send it to the configured SNMP trap receivers.

`mbgLtTrapNTPStopped` (`mbgLtTraps.2`): This trap is sent when the NTP daemon stopped, manually or because of an error condition.

`mbgLtTrapServerBoot` (`mbgLtTraps.3`): After finishing the boot process, this trap is generated.

`mbgLtTrapReceiverNotResponding` (`mbgLtTraps.4`): Trap to be sent when the internal receiver of the timeserver is not responding.

`mbgLtTrapReceiverNotSync` (`mbgLtTraps.5`): If the internal receiver loses sync, the SNMP trap receivers will receive this trap.

`mbgLtTrapAntennaFaulty` (`mbgLtTraps.6`): This trap will be sent whenever the timeserver recognises a broken connection to the antenna of the receiver.

`mbgLtTrapAntennaReconnect` (`mbgLtTraps.7`): After the connection to the antenna has been re-established, this trap is sent.

`mbgLtTrapConfigChanged` (`mbgLtTraps 8`): After reloading its configuration, the timeserver generates this trap.

`mbgLtTrapLeapSecondAnnounced` (`mbgLtTraps 9`): If a leap second has been announced by the internal GPS receiver, this trap will be sent.

`mbgLtTrapTestNotification` (`mbgLtTraps 99`): This trap is sent whenever you are requesting a test notification; it is only used for testing the connection between the timeserver and your SNMP trap receivers.

## **Attachment: Technical Information**

### **Skilled/Service-Personnel only: Replacing the Lithium Battery**

The life time of the lithium battery on the board is at least 10 years. If the need arises to replace the battery, the following should be noted:

### **ATTENTION!**

**There is a Danger of explosion if the lithium battery is replaced incorrectly. Only identical batteries or batteries recommended by the manufacturer must be used for replacement. The waste battery has to be disposed as proposed by the manufacturer of the battery.**

### **Technical Specifications M600/300 Multipac**

HOUSING: Metal desktop case, Schroff 282T  
Front panel: 1U/84HP (43 mm high / 442 mm wide)

PROTECTION  
RATING: IP20

POWER  
CONSUMPTION: 28W

PHYSICAL  
DIMENSIONS: 442 mm wide x 43 mm high x 288 mm deep  
(498 mm wide with mounting bracket)

## **Safety instructions for building-in equipment**

This building-in equipment has been designed and tested in accordance with the requirements of Standard IEC60950-1 "Safety of Information Technology Equipment, including Electrical Business Equipment".

During installation of the building-in equipment in an end application (i.e. rack) additional requirements in accordance with Standard IEC60950-1 have to be taken into account.

- o The building-in equipment is a class 1 - equipment and must be connected to an earthed outlet (TN Power System).
- o The building-in equipment has been evaluated for use in office environment (pollution degree 2) and may be only used in this environment. For use in rooms with a higher pollution degree more stringent requirements are applicable.
- o The building-in equipment may not be opened.
- o Protection against fire must be assured in the end application.
- o The ventilation opening may not be covered.
- o The equipment/building-in equipment was evaluated for use in a maximum ambient temperature of 40 °C.
- o For safe operation the building-in equipment must be protected by max 16 A fuse in the power installation system.
- o Disconnection of the equipment from mains is done by pulling the mains plug.

## **CE-Label**



EN 60950-1

Safety of Information Technology Equipment,  
including Electrical Business Equipment

Electromagnetic compatibility

EN50081-1

Electromagnetic compatibility (EMC). Generic emission  
standard. Part 1: Residential, commercial and light industry



EN50082-2

Electromagnetic compatibility (EMC). Generic immunity  
standard. Part 2: Industrial environment

## Rear Panel Connectors


Name	Type	Signal	Cable
2x Network	RJ-45	Ethernet	shielded data line
PPS	BNC	TTL	shielded coaxial line
10 MHz,	BNC	TTL	shielded coaxial line
Time Sync Error	DFK	screw terminal	
COM0,COM1	9pol. DSUB	RS232	shielded data line
Antenna	BNC	10 MHz / 35.4 MHz	shielded coaxial line
Power supply	power cord receptable		power supply cord
<b>option</b>			
2x Network	RJ-45	Ethernet	shielded data line
Time Code modulated	BNC	3Vpp into 50 Ohm	shielded coaxial line
DCLS	BNC	2.5Vpp into 50 Ohm	shielded coaxial line
PPS, PPM, PPH, progr. Pulse, Synthesizer	BNC	2.5Vpp into 50 Ohm	shielded coaxial line
10 MHz,	BNC	2.5Vpp into 50 Ohm	shielded coaxial line
10 MHz sine,	BNC	1.2Vpp into 50 Ohm	shielded coaxial line

## Connector Assignments

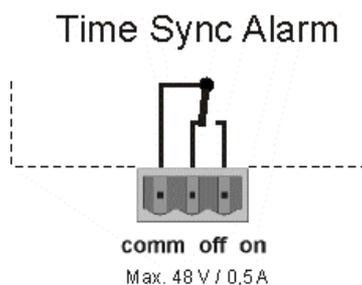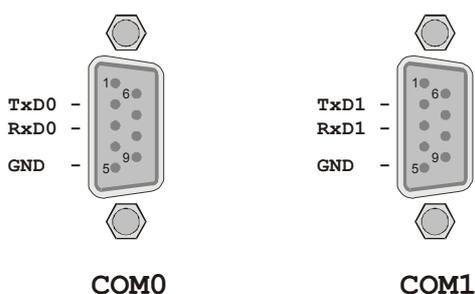

## RS232 TERMINAL

To connect a serial terminal use 9 pin SUBD RS232 connector in the front panel. Via the serial terminal connection it possible to configure parameters with the command line interface. You have to use a NULL-MODEM cable connecting to your PC or Laptop computer. You can use e.g. the standard Hyperterminal program shipped with your Windows operating system. Configure your terminal program with 38400 Baud, 8 Databits, no parity and 1 Stopbit. The terminal emulation have to set to VT100. After connecting to the timeserver there will be displayed the login message (press RETURN for first connection; default user: root password: timeserver).

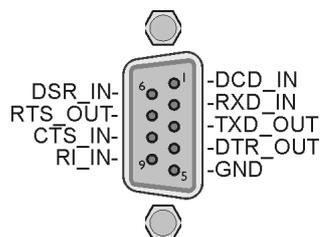

TERM

## Time Sync Error Relay

On the back panel of the device you can find a DFK connector labeled „Time Sync Error“. This relay output is connected to the TTL TIME\_SYNC out of the reference clock (GPS, PZF, TCR, ...). By default the relay will switch to mode „ON“ if the internal reference clock has not been synchronized by its sink (GPS, DCF77 or IRIG). This is the case if the reception of the antenna signal is bad or the device has been switched off. If the reference clock has been synchronized (Mode “Time Sync”) the relay will set to state “OFF”. Additionally the relay can be switched by one of the notification conditions. In the notification condition table via WEB or CLI interface you can select the relay out. The priority is on the “TIME SYNC ERROR” signal of the receiver (“refclock not sync”). Relay state which will be set via notification conditions will be reseted by any access via the WEB or CLI interface (if no “TIME SYNC ERROR” is active).

## Technical Specification

SWITCHING VOLTAGE max.:		125 VDC	
		150 VAC	
SWITCHING CURRENT max.:		1A	
SWITCHING LOAD max.:	DC	30 W	
	AC	60 VA	
SWITCHING-CURRENT UL/CSA:		0.46A	150V AC
		0.46A	65V DC
		1A	30V DC
RESPONSE TIME:		ca.2ms	

## Time Sync Error

Comm off on



## Technical Specifications GPS receiver


RECEIVER:	6 channel C/A code receiver with external antenna/converter unit
ANTENNA:	Antenna/converter unit with remote power supply refer to chapter "Technical Specifications GPS Antenna"
ANTENNA INPUT:	Antenna circuit dc-insulated; dielectric strength: 1000 V Length of cable: refer to chapter "Mounting the Antenna"
LC DISPLAY:	1HE: 2 x 40 character, menu selectable by push buttons and light BGT: 4 x 16 Zeichen, menu selectable by push buttons
TIME TO SYN-CHRONIZATION:	One minute with known receiver position and valid almanac 12 minutes if invalid battery buffered memory
PULSE OUTPUTS:	Change of second (P_SEC, TTL level) Change of minute (P_MIN, TTL level)
ACCURACY OF PULSES:	Better than $\pm 250$ nsec after synchronization and 20 minutes of operation Better than $\pm 2$ $\mu$ sec during the first 20 minutes of operation
FREQUENCY OUTPUTS:	10 MHz (TTL level)
SERIAL PORTS:	3 asynchronous serial ports (RS-232)  COM0: fixed, internal used COM1: fixed, internal used COM2+3: configurable, sending Standard Meinberg Time String (once per second or per minute)
POWER REQUIREMENTS:	5 V $\pm$ 5 %, @ 700 mA
PHYSICAL DIMENSION:	Eurocard, 100 mm x 160 mm
REAR EDGE CONNECTOR:	According to DIN 41612, type C 64, rows a+c (male)
RF CONNECTOR:	Coaxial SMB connector (male)
AMBIENT TEMPERATURE:	0 ... 50 °C
HUMIDITY:	85 % max.

# Oscillator options

Accuracy of time and frequency outputs of Meinberg GPS- and DCF77 (PZF) receivers with different oscillator options						
	TCXO	OCXO LQ	OCXO MQ	OCXO HQ	OCXO DHQ	Rubidium
short term stability (t = 1 sec)	2 * 10 <sup>-9</sup>	1 * 10 <sup>-9</sup>	2 * 10 <sup>-10</sup>	5 * 10 <sup>-12</sup>	2 * 10 <sup>-12</sup>	2 * 10 <sup>-11</sup>
accuracy of PPS (pulse per second)	< +/- 250 nsec < +/- 500 nsec (GPS163)	< +/- 250 nsec	< +/- 100 nsec	< +/- 100 nsec	< +/- 100 nsec	< +/- 100 nsec
phase noise	1 Hz -60 dBc/Hz 10 Hz -90 dBc/Hz 100 Hz -120 dBc/Hz 1 kHz -130 dBc/Hz	1 Hz -60 dBc/Hz 10 Hz -90 dBc/Hz 100 Hz -120 dBc/Hz 1 kHz -130 dBc/Hz	1 Hz -75 dBc/Hz 10 Hz -110 dBc/Hz 100 Hz -130 dBc/Hz 1 kHz -140 dBc/Hz	1 Hz < -85 dBc/Hz 10 Hz < -115 dBc/Hz 100 Hz < -130 dBc/Hz 1 kHz < -140 dBc/Hz	1 Hz < -80 dBc/Hz 10 Hz < -110 dBc/Hz 100 Hz < -125 dBc/Hz 1 kHz < -135 dBc/Hz	1 Hz -75 dBc/Hz 10 Hz -89 dBc/Hz 100 Hz -128 dBc/Hz 1 kHz -140 dBc/Hz
accuracy free run, one day	+/- 1 * 10 <sup>-7</sup> +/- 1 Hz (Note 1)	+/- 2 * 10 <sup>-8</sup> +/- 0,2 Hz (Note 1)	+/- 1,5 * 10 <sup>-9</sup> +/- 15 mHz (Note 1)	+/- 5 * 10 <sup>-10</sup> +/- 5 mHz (Note 1)	+/- 1 * 10 <sup>-10</sup> +/- 1 mHz (Note 1)	+/- 2 * 10 <sup>-11</sup> +/- 0,2 mHz (Note 1)
accuracy free run, one year	+/- 1 * 10 <sup>-6</sup> +/- 10 Hz (Note 1)	+/- 4 * 10 <sup>-7</sup> +/- 4 Hz (Note 1)	+/- 1 * 10 <sup>-7</sup> +/- 1 Hz (Note 1)	+/- 5 * 10 <sup>-8</sup> +/- 0,5 Hz (Note 1)	+/- 1 * 10 <sup>-8</sup> +/- 0,1 Hz (Note 1)	+/- 5 * 10 <sup>-10</sup> +/- 5 mHz (Note 1)
accuracy GPS-synchronous averaged 24 h	+/- 1 * 10 <sup>-11</sup>	+/- 1 * 10 <sup>-11</sup>	+/- 5 * 10 <sup>-12</sup>	+/- 1 * 10 <sup>-12</sup>	+/- 1 * 10 <sup>-12</sup>	+/- 1 * 10 <sup>-12</sup>
accuracy of time free run, one day	+/- 8,6 msec	+/- 1,8 msec	+/- 130µsec	+/- 44 µsec	+/- 10 µsec	+/- 1,8 µsec
accuracy of time free run, one year	+/- 32 sec	+/- 13 sec	+/- 3,5 sec	+/- 1,6 sec	+/- 300 msec	+/- 16 msec
temperature dependent drift free run	+/- 1 * 10 <sup>-6</sup> (-20...70°C)	+/- 2 * 10 <sup>-7</sup> (0...60°C)	+/- 5 * 10 <sup>-8</sup> (-20...70°C)	+/- 1 * 10 <sup>-8</sup> (5...70°C)	+/- 2 * 10 <sup>-10</sup> (5...70°C)	+/- 6 * 10 <sup>-10</sup> (-25...70°C)
power supply@25°C steady state warm up	5V / 20mA N/A	5V / 160mA 5V / 380mA	5V / 300mA 5V / 700mA	5V / 300mA 5V / 700mA	12V / 250mA 12V / 700mA	24V / 540mA N/A
suitable for clock type	GPS161 GPS163 GPS164 GPS167 (SV) GPS170 (SV) GPS170 (SV) GPS16xPCI GPS16xPC	GPS161 GPS167 (SV) GPS170 (SV) GPS16xPCI (5V only) GPS16xPC (5V only)	GPS161 GPS167 (SV) GPS170 (SV)	GPS161 GPS167 (SV) GPS170 (SV)	GPS167 (SV) GPS170 (SV)	GPS167 (SV) GPS170 (SV)
<b>Note 1:</b> The accuracy in Hertz is based on the standard frequency of 10 MHz. For example: Accuracy of TCXO (free run one day) is +/- 1 * 10 E-7 * 10 MHz = +/- 1 Hz						
<b>A minimum time of 24 hours of GPS-synchronicity is required before free run starts.</b>						

## Technical Specifications GPS Antenna

- ANTENNA: Dielectric patch antenna, 25 x 25 mm  
Receive frequency: 1575.42 MHz  
Bandwidth: 9 MHz
- CONVERTER: Local oscillator to converter frequency: 10 MHz  
First IF frequency: 35.4 MHz
- POWER REQUIREMENTS: 12 V ... 18 V, @ 100 mA (provided via antenna cable)
- CONNECTOR: Coax type N, female
- AMBIENT TEMPERATURE: -40 ... +65 °C
- HOUSING: ABS plastic case for outdoor installation (IP56)
- PHYSICAL DIMENSION:

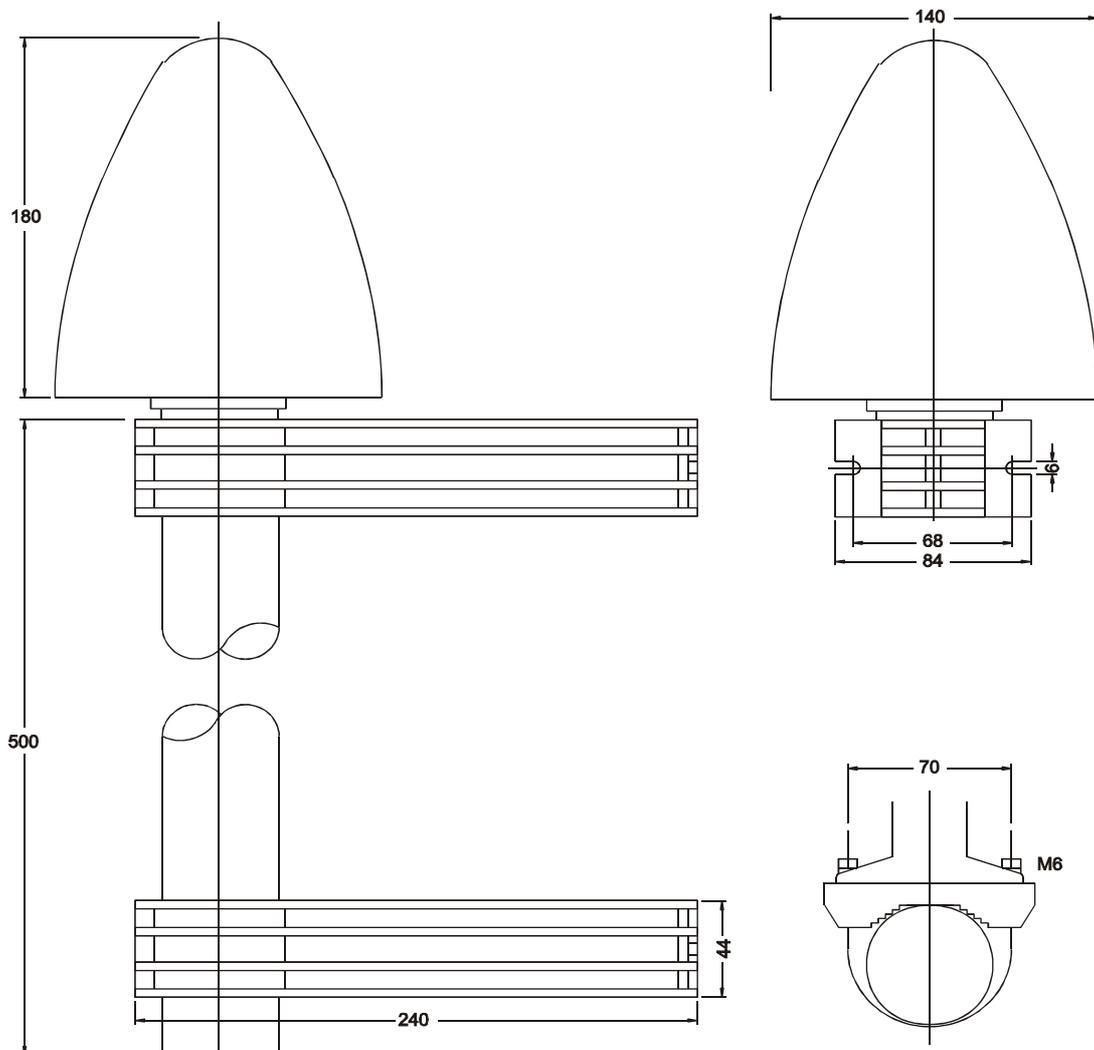

## Signal Description GPS170

Name	Pin	Function
GND	32a+c	Ground
VCC in (+5 V)	1a+c	+5 V supply
VCC in (+12 V)	2a+c	+12 V supply
P_SEC out	6c	Pulse when second changes, TTL level, active high, length 200 msec
P_MIN out	8c	Pulse when minute changes, TTL level, active high, length 200 msec
DCF_MARK out	17c	DCF77 compatible second marks, TTL level, active high, length 100/200 msec
100 kHz out	10a	100 kHz frequency output, TTL-level
1 MHz out	11a	1 MHz frequency output, TTL- level
10 MHz out	12a	10 MHz frequency output, TTL- level
F_SYNTH	21c	Synthesizer output, TTL- level
F_SYNTH_OD	22c	Synthesizer output, Open Drain, max sink current to GND: 150 mA
F_SYNTH_SIN	23c	Synthesizer output, sine-wave 1.5 V eff.
TIME_SYN	19c	TTL output, HIGH level if synchronization has been achieved, LOW level after reset or in case of serious errors (e.g. antenna faulty)
CAPx	27c, 28c	Time capture inputs (TTL), capture on falling slope
COMx TxD out		COMx RS-232 transmit data output
COMx RxD in		COMx RS-232 receive data input
/RESET in/out	9c	RESET signal, Open Drain pulled up to +5 V
SDA, SCL, SCL_EN (reserved)		Internal serial control bus, for extension boards reserved, do not connect

## Rear Connector Pin Assignments GPS170

	a	c
1	VCC in (+5V)	VCC in (+5V)
2	VCC in (+12V)	VCC in (+12V)
3	VDD in (TCXO/OCXO)	VDD in (TCXO/OCXO)
4	(reserved, FreqAdjust out)	
5		
6		P_SEC out
7		
8	(reserved, 10 MHz in)	P_MIN out
9		/RESET in/out
10	100 kHz out	ProgPulse0 out
11	1 MHz out	ProgPulse1 out
12	10 MHz out	ProgPulse2 out
13		SCL
14		SCL_EN
15	COM2 RxD in	SDA
16	COM2 TxD out	(reserved, P3.2)
17	COM3 RxD in	DCF_MARK out
18	COM3 TxD out	(reserved, Vref/TxD2 TTL)
19	GND	TIME_SYN out
20	GND	(reserved, P2.3)
21	GND	F_SYNTH out
22	GND	F_SYNTH_OD out
23	GND	F_SYNTH_SIN out
24	GND	COM1 TxD out
25	GND	
26	GND	COM0 TxD out
27	GND	CAP1 in
28	GND	CAP0 in
29	GND	COM1 RxD in
30	GND	COM0 RxD in
31	GND	GND
32	GND	GND

DIN 41612 connector, Typ C 64, row a + c


## Technical Specifications LAN CPU

PROCESSOR:	Geode™ LX800 with 500 MHz
MAIN MEMORY:	256 MB
CACHE-MEMORY:	16 KB 2nd Level Cache
FLASHDISK:	64 MB (128 MB)
NETWORK CONNECTOR:	10/100 MBIT with RJ45-Jack DAVICOM DM9102AEthernet NIC Controller
SERIAL - INTERFACE:	Four serial RS232-Ports 16550 compatible to FIFO - RS232 9-pol. DSUB-male connector - three RS232 male connector according to DIN 41612, type C 96 ( only TxD, RxD, DCD)
PARALLEL INTERFACE :	One LPT-Port male connector type C 96
VGA-CONNECTION:	10-pol pin contact strip
KEYBOARD CONNECTION:	10-pol pin contact strip
STATE LEDs:	- power supply - 'Connect', 'Activity' and 'Speed' of the network connection
POWER REQUIREMENTS:	5 V ± 5 %, @ 1 A
FRONTPANEL:	3 HE / 4 TE (128 mm high x 20,3 mm wide)
CONNECTOR:	According to DIN 41612, type C 96, rows a+b+c (male) DSUB-plug (9-pol) RJ45-jack
AMBIENT TEMPERATURE:	0 ... 50 °C
HUMIDITY:	85 % max.

## Rear Connector Pin Assignments LAN CPU

	c	b	a	
1	VCC in (+5V)	VCC in (+5V)	VCC in (+5V)	
2	VCC in (+5V)	VCC in (+5V)	VCC in (+5V)	
3	GND	GND	GND	
4	PPS in	/AFD out	/STB out	
5	/ERR in	/SLIN out	/INIT out	
6	D5 in/out	D6 in/out	D7 in/out	LPT1
7	D2 in/out	D3 in/out	D4 in/out	
8	/ACK in	D0 in/out	D1 in/out	
9	/SLCT in	PE in	/BUSY in	
10	GND	GND	GND	
11	GND	GND	GND	
12	DIAG_S in/out	/CS1 out	/CS3 out	
13	A0 out	A1 out	A2 out	
14	RDY in	/AK out	INTRQ in	
15	DRQ in	/IOW out	/IOR out	
16	D15 in/out	D0 in/out	D14 in/out	Primary IDE
17	D1 in/out	D13 in/out	D2 in/out	
18	D12 in/out	D3 in/out	D11 in/out	
19	D4 in/out	D10 in/out	D5 in/out	
20		D9 in/out	D7 in/out	
21	D6 in/out	D8 in/out	/HDRST out	
22	GND	GND	GND	
23	Rx+ in	Tx- out	Tx+ out	
24	Rx- in	LED LINK out	LED ACTIVITY out	Ethernet
25		LED SPEED 100M out	LED SPEED10M out	
26	GND	GND	GND	
27	RxD4 in	TxD4 out	DCD4 in	
28	RxD3 in	TxD3 out	DCD3 in	RS232
29	RxD2 in	TxD2 out		
30	RxD1 in	TxD1 out	DCD1 in	
31	GND	GND	GND	
32	GND	GND	GND	

## VGA, Keyboard Connector Pin Assignments

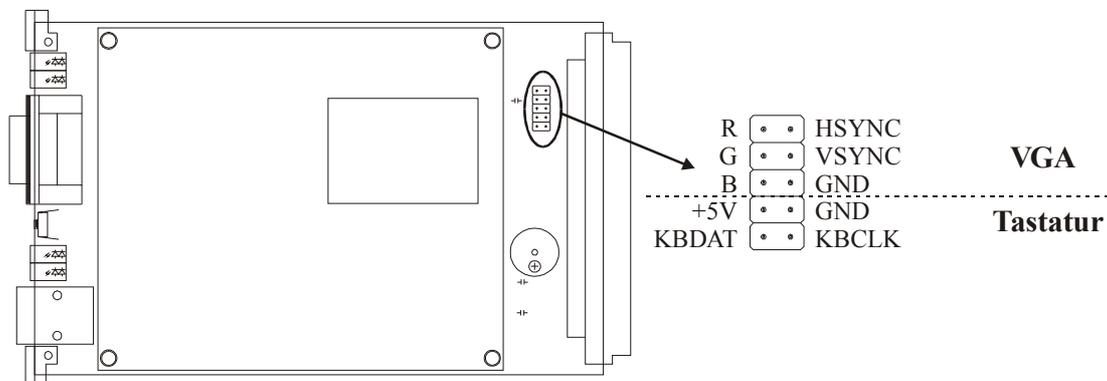

## Technical Specifications Power Supply

INPUT: 85 ... 264 V AC, 47 ... 63 Hz, 1 A/230 V, 2 A/115 V

FUSE: Electronic

CURRENT  
LIMITING: 105 – 150 %  $I_{out\ nom}$

OUTPUTS:  $V_{out1}$ : 5.05 V / 5 A  
 $V_{out2}$ : +12 V / 2.5 A  
 $V_{out3}$ : -12 V / 0.5 A

TOTAL  
LOAD: Max. 61 Watt

CONNECTORS: Screw terminal

HOUSING: Metal housing : 159 mm x 97 mm x 38 mm

AMBIENT  
TEMPERATURE: -10 °C ... +60 °C

HUMIDITY: 90 % max.

## Timecode (option)

### Abstract


The transmission of coded timing signals began to take on widespread importance in the early 1950's. Especially the US missile and space programs were the forces behind the development of these time codes, which were used for the correlation of data. The definition of time code formats was completely arbitrary and left to the individual ideas of each design engineer. Hundreds of different time codes were formed, some of which were standardized by the "Inter Range Instrumentation Group" (IRIG) in the early 60's.

Except these "IRIG Time Codes", other formats like NASA36, XR3 or 2137 are still in use. The board GPS-TC however generates the IRIG-B, AFNOR NFS 87-500 code as well as IEEE1344 code which is an IRIG-B123 coded extended by information for time zone, leap second and date. Other formats may be available on request.


### Principle of Operation

The Board GPS-TC has been designed for the generation of IRIG, AFNOR and IEEE1344 standard time codes. Apart from the digitally generated amplitude-modulated code, GPS-TC also provides the unmodulated DC-Level shift code. The modulated sine wave carrier and the board's internal time pattern are derived from the radio clock's disciplined oscillator.


### Block Diagram Timecode

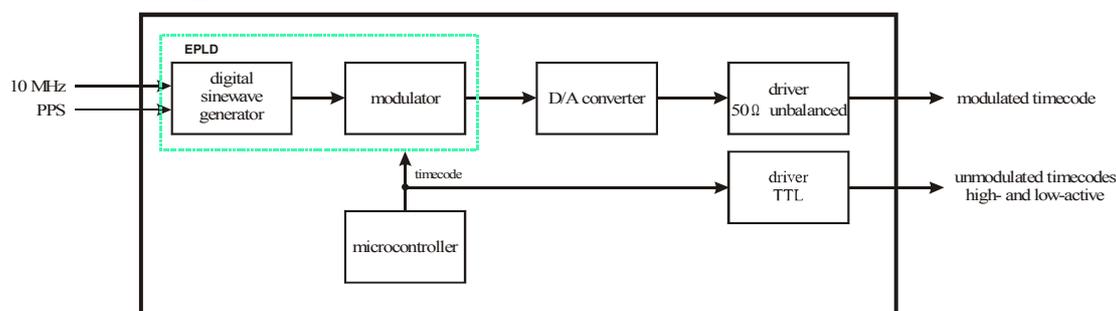

# IRIG Standard Format

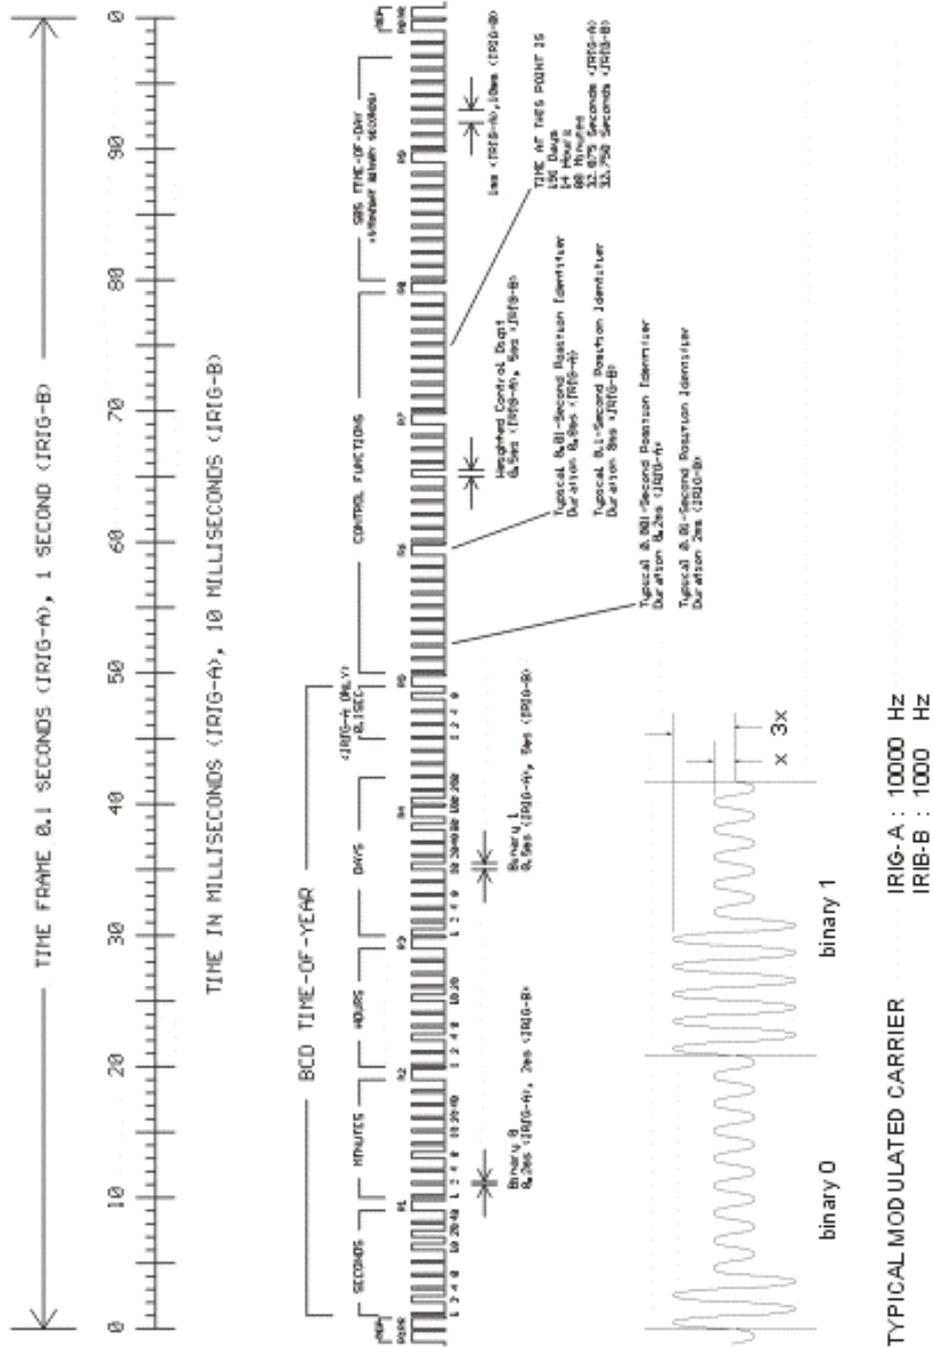

# AFNOR Standard Format

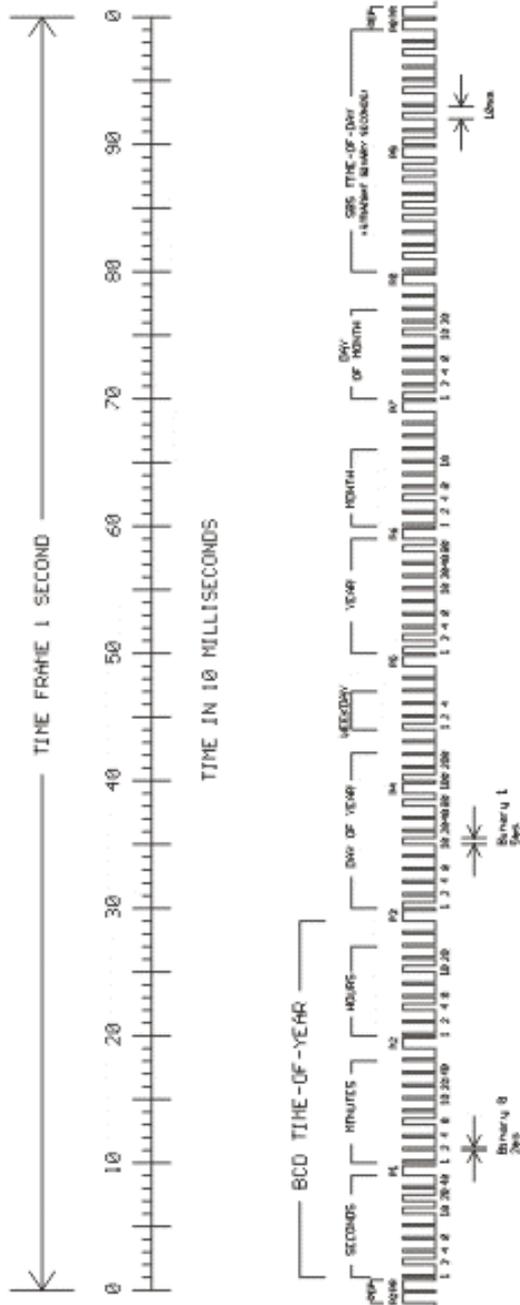

## Assignment of CF Segment in IEEE1344 Code

Bit No.	Designation	Description
49	Position Identifier P5	
50	Year BCD encoded 1	low nibble of BCD encoded year
51	Year BCD encoded 2	
52	Year BCD encoded 4	
53	Year BCD encoded 8	
54	empty, always zero	
55	Year BCD encoded 10	high nibble of BCD encoded year
56	Year BCD encoded 20	
57	Year BCD encoded 40	
58	Year BCD encoded 80	
59	Position Identifier P6	
60	LSP - Leap Second Pending	set up to 59s before LS insertion
61	LS - Leap Second	0 = add leap second, 1 = delete leap second <sup>1)</sup>
62	DSP - Daylight Saving Pending	set up to 59s before daylight saving changeover
63	DST - Daylight Saving Time	set during daylight saving time
64	Timezone Offset Sign	sign of TZ offset 0 = '+', 1 = '-'
65	TZ Offset binary encoded 1	Offset from IRIG time to UTC time. Encoded IRIG time plus TZ Offset equals UTC at all times !
66	TZ Offset binary encoded 2	
67	TZ Offset binary encoded 4	
68	TZ Offset binary encoded 8	
69	Position Identifier P7	
70	TZ Offset 0.5 hour	set if additional half hour offset
71	TFOM Time figure of merit	time figure of merit represents approximated clock error. <sup>2)</sup> 0x00 = clock locked 0x0F = clock failed
72	TFOM Time figure of merit	
73	TFOM Time figure of merit	
74	TFOM Time figure of merit	
75	PARITY	parity on all preceding bits incl. IRIG-B time
<sup>1)</sup> current firmware does not support leap deletion of leap seconds		
<sup>2)</sup> TFOM is cleared, when clock is synchronized first after power up. <i>see chapter Selection of generated timecode</i>		

## Generated Time Codes

Besides the amplitude modulated sine wave signal, the board also provides unmodulated DC-Level Shift TTL output in parallel. Thus six time codes are available.

- a) B002: 100 pps, PWM DC signal, no carrier  
BCD time-of-year
- b) B122: 100 pps, AM sine wave signal, 1 kHz carrier frequency  
BCD time-of-year
- c) B003: 100 pps, PWM DC signal, no carrier  
BCD time-of-year, SBS time-of-day
- d) B123: 100 pps, AM sine wave signal, 1 kHz carrier frequency  
BCD time-of-year, SBS time-of-day
- e) AFNOR: Code according to NFS-87500, 100 pps,  
AM-Sine wave signal, 1kHz carrier frequency,  
BCD time-of-year, complete date, SBS time-of-day,  
Signal level according to NFS-87500
- f) IEEE1344: Code according to IEEE1344-1995, 100 pps,  
AM sine wave signal, 1kHz carrier frequency,  
BCD time-of-year, SBS time-of-day, IEEE1344  
extensions for date, timezone, daylight-saving  
and leap second in control functions (CF) segment.

*also see table 'Assignment of CF segment in IEEE1344 mode'*

## Selection of Generated Time Code

The time code to be generated can be selected by Menu Setup IRIG-settings or the GPS Monitorprogram. DC-Level Shift Codes (PWM-signal) B00x and modulated sine wave carrier B12x are always generated simultaneously. Both signals are provided at the VG64-Connector, i.e. if code B132 is selected also code B002 is available. This applies for the codes AFNOR NFS 87-500 and IEEE1344 as well.

The TFOM field in IEEE1344 code is set dependent on the 'already sync'ed' character ('#') which is sent in the serial time telegram. This character is set, whenever the preconnected clock was not able to synchronize after power up reset. The 'time figure of merit' (TFOM) field is set as follows.

Clock synchronized once after power up:	TFOM = 0000
Clock <u>not</u> synchronized after power up:	TFOM = 1111

For testing purposes the output of TFOM in IEEE1344 mode can be disabled. The segment is set to all zeros then.

## Outputs

The module GPS-TC provides modulated and unmodulated (DC-Level Shift) outputs. The format of the timecodes is illustrated in the diagrams "IRIG-" and "AFNOR standard-format".

### AM - Sine Wave Output

The amplitude-modulated carrier is available at the VG-connector pin 14a. The carrier frequency depends on the code and has a value of 1 kHz (IRIG-B). The signal amplitude is  $3 V_{pp}$  (MARK) and  $1 V_{pp}$  (SPACE) into  $50 \Omega$ . The encoding is made by the number of MARK-amplitudes during ten carrier waves. The following agreements are valid:

- |                         |                                       |
|-------------------------|---------------------------------------|
| a) binary "0":          | 2 MARK-amplitudes, 8 SPACE-amplitudes |
| b) binary "1":          | 5 MARK-amplitudes, 5 SPACE-amplitudes |
| c) position-identifier: | 8 MARK-amplitudes, 2 SPACE-amplitudes |

### PWM DC Output

The pulse width modulated DC signals shown in the diagrams "IRIG" and "AFNOR standard format" are coexistent to the modulated output and is available at the VG connector pin 13a with TTL level.

### Technical Data

OUTPUTS:            Unbalanced AM-sine wave-signal:  
                          $3 V_{pp}$  (MARK) /  $1 V_{pp}$  (SPACE) into  $50 \Omega$   
                         PWM signal: TTL, high and low active

## Time Strings

### Format of the Meinberg Standard Time String

The Meinberg Standard Time String is a sequence of 32 ASCII characters starting with the STX (start-of-text) character and ending with the ETX (end-of-text) character. The format is:

**<STX>D:dd.mm.yy;T:w;U:hh.mm.ss;uvxy<ETX>**

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

<i>&lt;STX&gt;</i>	Start-Of-Text (ASCII code 02h) sending with one bit accuracy at change of second
<i>dd.mm.yy</i>	the current date: <i>dd</i> day of month (01..31) <i>mm</i> month (01..12) <i>yy</i> year of the century (00..99) <i>w</i> the day of the week (1..7, 1 = Monday)
<i>hh.mm.ss</i>	the current time: <i>hh</i> hours (00..23) <i>mm</i> minutes (00..59) <i>ss</i> seconds (00..59, or 60 while leap second)
<i>uv</i>	clock status characters: <i>u</i> : ‘#’ clock has not synchronized after reset ‘ ‘ (space, 20h) clock has synchronized after reset  <i>v</i> : different for DCF77 or GPS receivers:  ‘*’ DCF77 clock currently runs on XTAL GPS receiver has not checked its position  ‘ ‘ (space, 20h) DCF77 clock is sync'd with transmitter GPS receiver has determined its position
<i>x</i>	time zone indicator: ‘U’ UTC Universal Time Coordinated, formerly GMT ‘ ‘ MEZ European Standard Time, daylight saving disabled ‘S’ MESZ European Summertime, daylight saving enabled
<i>y</i>	announcement of discontinuity of time, enabled during last hour before discontinuity comes in effect: ‘!’ announcement of start or end of daylight saving time ‘A’ announcement of leap second insertion ‘ ‘ (space, 20h) nothing announced
<i>&lt;ETX&gt;</i>	End-Of-Text (ASCII code 03h)

## Format of the GPS Capture String

The Meinberg GPS Capture String is a sequence of 31 ASCII characters terminated by a CR/LF (Carriage Return/Line Feed) combination. The format is:

**CHx\_***tt.mm.jj\_hh:mm:ss.fffffff***<CR><LF>**

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

x	0 or 1 corresponding on the number of the capture input
_	ASCII space 20h
<i>dd.mm.yy</i>	the capture date:
<i>dd</i>	day of month (01..31)
<i>mm</i>	month (01..12)
<i>yy</i>	year of the century (00..99)
<i>hh:mm:ss.fffffff</i>	the capture time:
<i>hh</i>	hours (00..23)
<i>mm</i>	minutes (00..59)
<i>ss</i>	seconds (00..59, or 60 while leap second)
<i>fffffff</i>	fractions of second, 7 digits
<CR>	Carriage Return, ASCII code 0Dh
<LF>	Line Feed, ASCII code 0Ah

## Format of the SAT-Time String

The SAT-Time String is a sequence of 29 ASCII characters starting with the STX (start-of-text) character and ending with the ETX (end-of-text) character. The format is:

`<STX>dd.mm.yy/w/hh:mm:ssxxxuv<ETX>`

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

<code>&lt;STX&gt;</code>	Start-Of-Text (ASCII code 02h) sending with one bit accuracy at change of second
<code>dd.mm.yy</code>	the current date: <i>dd</i> day of month (01..31) <i>mm</i> month (01..12) <i>yy</i> year of the century (00..99) <i>w</i> the day of the week (1..7, 1 = Monday)
<code>hh:mm:ss</code>	the current time: <i>hh</i> hours (00..23) <i>mm</i> minutes (00..59) <i>ss</i> seconds (00..59, or 60 while leap second)
<code>xxxx</code>	time zone indicator: 'UTC' Universal Time Coordinated, formerly GMT 'MEZ' European Standard Time, daylight saving disabled 'MESZ' European Summertime, daylight saving enabled
<code>u</code>	clock status characters: '#' clock has not synchronized after reset ' ' (space, 20h) clock has synchronized after reset
<code>v</code>	announcement of discontinuity of time, enabled during last hour before discontinuity comes in effect: '!' announcement of start or end of daylight saving time ' ' (space, 20h) nothing announced
<code>&lt;CR&gt;</code>	Carriage-return (ASCII code 0Dh)
<code>&lt;LF&gt;</code>	Line-feed (ASCII code 0Ah)
<code>&lt;ETX&gt;</code>	End-Of-Text (ASCII code 03h)

## Format of the Uni Erlangen String (NTP)

The time string Uni Erlangen (NTP) of a **GPS-clock** is a sequence of 66 ASCII characters starting with the STX (start-of-text) character and ending with the ETX (end-of-text) character. The format is:

*<STX>tt.mm.jj; w; hh:mm:ss; voo:oo; acdfg i;bbb.bbbbn lll.lllle hhhhm<ETX>*

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

<i>&lt;STX&gt;</i>	Start-Of-Text (ASCII code 02h) sending with one bit accuracy at change of second
<i>dd.mm.yy</i>	the current date: <i>dd</i> day of month (01..31) <i>mm</i> month (01..12) <i>yy</i> year of the century (00..99) <i>w</i> the day of the week (1..7, 1 = Monday)
<i>hh.mm.ss</i>	the current time: <i>hh</i> hours (00..23) <i>mm</i> minutes (00..59) <i>ss</i> seconds (00..59, or 60 while leap second)
<i>v</i>	sign of the offset of local time zone related to UTC
<i>oo:oo</i>	offset of local time zone related to UTC in hours and minutes
<i>ac</i>	clock status characters: <i>a:</i> ‘#’ clock has not synchronized after reset ‘ ‘ (space, 20h) clock has synchronized after reset  <i>c:</i> ‘*’ GPS receiver has not checked its position ‘ ‘ (space, 20h) GPS receiver has determined its position
<i>d</i>	time zone indicator: ‘S’ MESZ European Summertime, daylight saving enabled ‘ ‘ MEZ European Standard Time, daylight saving disabled
<i>f</i>	announcement of discontinuity of time, enabled during last hour before discontinuity comes in effect: ‘!’ announcement of start or end of daylight saving time ‘ ‘ (space, 20h) nothing announced
<i>g</i>	announcement of discontinuity of time, enabled during last hour before discontinuity comes in effect: ‘A’ announcement of leap second insertion ‘ ‘ (space, 20h) nothing announced

*i* leap second insertion  
     'L' leap second is actually inserted  
         (active only in 60th sec.)  
     ' ' (space, 20h) no leap second is inserted

*bbb.bbbb* latitude of receiver position in degrees  
             leading signs are replaced by a space character (20h)

*n* latitude, the following characters are possible:  
     'N' north of equator  
     'S' south d. equator

*lll.llll* longitude of receiver position in degrees  
             leading signs are replaced by a space character (20h)

*e* longitude, the following characters are possible:  
     'E' east of Greenwich  
     'W' west of Greenwich

*hhhh* altitude above sea level in meters  
             leading signs are replaced by a space character (20h)

<ETX> End-Of-Text (ASCII-Code 03h)

## Format of the NMEA 0183 String (RMC)

The NMEA String is a sequence of 65 ASCII characters starting with the '\$' character and ending with the characters CR (carriage return) and LF (line-feed). The format is:

**\$GPRMC,*hhmmss.ss,A,bbbb.bb,n,llll.ll,e,0.0,0.0,ddmmyy,0.0,a\*hh*<CR><LF>**

The letters printed in *italics* are replaced by ASCII numbers or letters whereas the other characters are part of the time string. The groups of characters as defined below:

\$	start character (ASCII-Code 24h) sending with one bit accuracy at change of second												
<i>hhmmss.ss</i>	the current time: <table> <tr> <td><i>hh</i></td> <td>hours</td> <td>(00..23)</td> </tr> <tr> <td><i>mm</i></td> <td>minutes</td> <td>(00..59)</td> </tr> <tr> <td><i>ss</i></td> <td>seconds</td> <td>(00..59, or 60 while leap second)</td> </tr> <tr> <td><i>ss</i></td> <td>fractions of seconds</td> <td>(1/10 ; 1/100)</td> </tr> </table>	<i>hh</i>	hours	(00..23)	<i>mm</i>	minutes	(00..59)	<i>ss</i>	seconds	(00..59, or 60 while leap second)	<i>ss</i>	fractions of seconds	(1/10 ; 1/100)
<i>hh</i>	hours	(00..23)											
<i>mm</i>	minutes	(00..59)											
<i>ss</i>	seconds	(00..59, or 60 while leap second)											
<i>ss</i>	fractions of seconds	(1/10 ; 1/100)											
A	Status (A = time data valid) (V = time data not valid)												
<i>bbbb.bb</i>	latitude of receiver position in degrees leading signs are replaced by a space character (20h)												
<i>n</i>	latitude, the following characters are possible: 'N' north of equator 'S' south d. equator												
<i>llll.ll</i>	longitude of receiver position in degrees leading signs are replaced by a space character (20h)												
<i>e</i>	longitude, the following characters are possible: 'E' east of Greenwich 'W' west of Greenwich												
<i>ddmmyy</i>	the current date: <table> <tr> <td><i>dd</i></td> <td>day of month</td> <td>(01..31)</td> </tr> <tr> <td><i>mm</i></td> <td>month</td> <td>(01..12)</td> </tr> <tr> <td><i>yy</i></td> <td>year of the century</td> <td>(00..99)</td> </tr> </table>	<i>dd</i>	day of month	(01..31)	<i>mm</i>	month	(01..12)	<i>yy</i>	year of the century	(00..99)			
<i>dd</i>	day of month	(01..31)											
<i>mm</i>	month	(01..12)											
<i>yy</i>	year of the century	(00..99)											
<i>a</i>	magnetic variation												
<i>hh</i>	checksum (EXOR over all characters except '\$' and '*')												
<CR>	carriage-return; ASCII-Code 0Dh												
<LF>	line-feed; ASCII-Code 0Ah												

## Format of the ABB SPA Time String

The ABB SPA Time String is a sequence of 32 ASCII characters starting with the characters ">900WD" and ending with the <CR> (Carriage Return) character. The format is:

**>900WD:yy-mm-tt\_hh.mm;ss.fff:cc<CR>**

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

<i>yy-mm-tt</i>	the current date:	
<i>yy</i>	year of the century	(00..99)
<i>mm</i>	month	(01..12)
<i>dd</i>	day of month	(01..31)
<i>_</i>	Space (ASCII code 20h)	
<i>hh.mm;ss.fff</i>	the current time:	
<i>hh</i>	hours	(00..23)
<i>mm</i>	minutes	(00..59)
<i>ss</i>	seconds	(00..59, or 60 while leap second)
<i>fff</i>	milliseconds	(000..999)
<i>cc</i>	Check sum. EXCLUSIVE-OR result of the previous characters, displayed as a HEX byte (2 ASCII characters 0..9 or A..F)	
<CR>	Carriage Return (ASCII code 0Dh)	

## Format of the COMPUTIME Time String

The COMPUTIME Time String is a sequence of 24 ASCII characters starting with the characters "T" and ending with the <LF> (Line-Feed, ASCII-Code 0Ah) character. The format is:

**T:*jj:mm:tt:ww:hh:mm:ss*<CR><LF>**

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

T	Start character sending with one bit accuracy at change of second
<i>jj:mm:tt</i>	the current date: <i>jj</i> year of the century (00..99) <i>mm</i> month (01..12) <i>tt</i> day of month (01..31) <i>ww</i> day of week (01..07, 01 = monday)
<i>hh:mm:ss</i>	the current time: <i>hh</i> hours (00..23) <i>mm</i> minutes (00..59) <i>ss</i> seconds (00..59, oder 60 wenn Schaltsekunde)
<CR>	Carriage-Return (ASCII-Code 0Dh)
<LF>	Line-Feed, (ASCII-Code 0Ah)

## Format of the RACAL standard Time String

The RACAL standard Time String is a sequence of 16 ASCII characters terminated by a X (58h) character and ending with the CR (Carriage Return, ASCII Code 0Dh) character. The format is:

**<X><G><U>yymmddhhmmss<CR>**

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

<X>	Control character	code 58h
	sending with one bit accuracy at change of second	
<G>	Control character	code 47h
<U>	Control character	code 55h
<i>yymmdd</i>	the current date:	
	<i>yy</i> year of the century	(00..99)
	<i>mm</i> month	(01..12)
	<i>dd</i> day of month	(01..31)
<i>hh:mm:ss</i>	the current time:	
	<i>hh</i> hours	(00..23)
	<i>mm</i> minutes	(00..59)
	<i>ss</i> seconds	(00..59, or 60 while leap second)
<CR>	Carriage Return, ASCII code 0Dh	

### Interface parameters:

7 Databits, 1 Stopbit, odd. Parity, 9600 Bd

## Format of the SYSPLEX-1 Time String

The SYSPLEX1 time string is a sequence of 16 ASCII characters starting with the SOH (Start of Header) ASCII control character and ending with the LF (line feed, ASCII Code 0Ah) character. The format is:

**<SOH>ddd:hh:mm:ssq<CR><LF>**

The letters printed in *italics* are replaced by ASCII numbers whereas the other characters are part of the time string. The groups of characters as defined below:

<b>&lt;SOH&gt;</b>	Start of Header (ASCII control character) sending with one bit accuracy at change of second
<b>ddd</b>	day of year (001..366)
<b>hh:mm:ss</b>	the current time: <i>hh</i> hours (00..23) <i>mm</i> minutes (00..59) <i>ss</i> seconds (00..59, or 60 while leap second)
<b>q</b>	Quality indicator (space) Time Sync (GPS lock) (?) no Time Sync (GPS fail)
<b>&lt;CR&gt;</b>	Carriage-return (ASCII code 0Dh)
<b>&lt;LF&gt;</b>	Line-feed (ASCII code 0Ah)

## Konformitätserklärung

### Declaration of Conformity

Hersteller  
Manufacturer

**Meinberg Funkuhren GmbH & Co. KG**  
**Lange Wand 9**  
**D-31812 Bad Pyrmont**

erklärt in alleiniger Verantwortung, dass das Produkt,  
declares under its sole responsibility, that the product

Produktbezeichnung

**NTP Timeserver**

Product Name

Modell / Typ

**Lantime M300/GPS**

Model Designation

auf das sich diese Erklärung bezieht, mit den folgenden Normen übereinstimmt.  
to which this declaration relates is in conformity with the following standards.

EN55022:1998  
(+A1:2000 +A2:2003)

**Grenzwerte und Messverfahren für Funkstörungen von  
informationstechnischen Einrichtungen**

Limits and methods of measurement of radio interference characteristics of  
information technology equipment

EN55024:1998  
(+A1:2001 +A2:2003)

**Grenzwerte und Messverfahren für Störfestigkeit von  
informationstechnischen Einrichtungen**

Limits and methods of measurement of Immunity characteristics of  
information technology equipment

EN 60950/2001  
(+A11:2004)

**Sicherheit von Einrichtungen der Informationstechnik**  
Safety of information technology equipment

gemäß den Richtlinien 89/336/EWG (Elektromagnetische Verträglichkeit), 2006/95/EG  
(Niederspannungsrichtlinie) und 93/68/EWG (CE Kennzeichnung) sowie deren Ergänzungen  
following the provisions of the directives 89/336/EEC (electromagnetic compatibility), 2006/95/EC (low voltage  
directive) and 93/68/EEC (CE marking) and its amendments.

Bad Pyrmont, den 08.10.2007



Authorized Signature

## Manual VP100/NET Display configuration

send2display Version 0.1

usage:

send2display -h hostname -s serialnumber [options]

Valid options are:

-h, --host H	Uses H as the hostname of the display unit
-s, --serialnumber S	Uses S as the serialnumber of the display (e.g. 03A00C7F)
-c, --clear M	Clear message M (0-31)
-b, --beep	Beeper sound while showing the message
-a, --clearall	Clear all messages of the display
-m, --message M	Create/change message M (0-31, default = 0)
-e, --executions E	Sets number of consecutive executions to E (1-9, default = 1)
-q, --quiet	Quiet mode (no program output to stdout/stderr)
-v, --verbose	Verbose mode (output of debugging info on stdout)
-?, --help	Show help message

Defining messages

=====

a) Static or flashing text:

You can define a maximum of 9 lines for a message.

Start with -(x) "text", where (x) represents the line number.

-1, --line1 "text"	Set text for line 1
-2, --line2 "text"	Set text for line 2
...	

You can set the duration and mode for each line separately. Specify the following options directly after the text-definition of a line:

-f, --noflash	Change line mode to static (default is flashing)
-d, --duration X	Set the duration of the line to x seconds (default is 3 seconds)

b) Scrolling text:

You can define a maximum of 241 characters per scrolling message. If you want the message to "softly" end, simply add some spaces to the end of your text (attention: text and spaces must be no more than 241 chars in length).

-t, --scrolltext "text"	Set scrolltext
-------------------------	----------------

If you want the message (any type) to appear periodically, you can set the time interval with:

-D, --periodday D	Display message every D days
-H, --periodhour H	Display message every H hours
-M, --periodminute M	Display message every M minutes

(You can combine these options. Default is: message is displayed only once)

Possible error codes: 1=parameter error, 2=no ACK from display, 3=network error

Examples:

```
send2display -h 172.16.3.251 -s 0a03007f -m1 -e2 -1"Hello World" -d5 -2"what  
a nice day" -d3
```

(shows two lines of text (2 times), 1st line is shown for 5 seconds and 2nd line for 3 seconds)

```
send2display -h 172.16.3.251 -s 0a03007f -m1 -e1 -1"Oops" -H2 -M30
```

(shows one line of text every 2 hours and 30 minutes, a sound (beep) can be heard while

the message is displayed)

```
send2display -h 172.16.3.251 -s 0a03007f -c1
```

(deletes the message 1, so no more beeps every 2:30 hrs ...)

```
send2display -h 172.16.3.251 -s 0a03007f -t"Hello world..." -e3
```

(shows a scrolling message with soft end, repeating it 3 times)

## Global Configuration File

This file contains all global parameters of the LANTIME. You can find this file on the write protected flash disk at /mnt/flash/global\_configuration:

```
#-----
# Configuration File
#
#-----

# Configuration File Section
Configuration File Version Number :4.05
Configuration File Last Change    :Mon Mar 15 07:44:21 2004

# Network Parameter Section
Hostname [ASCII,50]:LanGpsV4
Domainname [ASCII,50]:py.meinberg.de
IPv4 GATEWAY ..... [IP]:0
IPv6 GATEWAY ..... [IP]:0
Nameserver 1 [IP]:
Nameserver 2 [IP]:
Syslogserver 1 [ASCII,50]:
Syslogserver 2 [ASCII,50]:
Telnet Port active [BOOL]:1
FTP Port active [BOOL]:1
SSH active [BOOL]:1
HTTP active [BOOL]:1
HTTPS active [BOOL]:1
SNMP active [BOOL]:1
SAMBA active [BOOL]:0
IPv6 active [BOOL]:1

# NTP Section
External NTP Server 1 IP [ASCII,50]:
External NTP Server 1 KEY [NUM]:
External NTP Server 1 AUTOKEY [BOOL]:
External NTP Server 2 IP [ASCII,50]:
External NTP Server 2 KEY [NUM]:
External NTP Server 2 AUTOKEY [BOOL]:
External NTP Server 3 IP [ASCII,50]:
External NTP Server 3 KEY [NUM]:
External NTP Server 3 AUTOKEY [BOOL]:
NTP Stratum Local Clock [NUM,0..15]:12
NTP Trusted Key [NUM]:
NTP AUTOKEY feature active [BOOL]:0
NTP ATOM PPS active [BOOL]:1
NTP Broadcast TCPIP [IP]:0
NTP Broadcast KEY [NUM]:0
NTP Broadcast AUTOKEY [BOOL]:
NTP Trust Time..... [BOOL]:0

# EMail Section
EMail To Address [ASCII,50]:
EMail From Address [ASCII,50]:
EMail Smarthost [ASCII,50]:

# SNMP Section
SNMP Trap Receiver Address 1 [ASCII,50]:
SNMP Trap Receiver Community 1 [ASCII,50]:
SNMP Trap Receiver Address 2 [ASCII,50]:
SNMP Trap Receiver Community 2 [ASCII,50]:
SNMP V3 User Name [ASCII,50]:root
SNMP Read Community String [ASCII,50]:public
```

```

SNMP Write Community String      [ASCII,50]:
SNMP Contact String              [ASCII,50]:Meinberg
SNMP Location String             [ASCII,50]:Germany
# Windows Messages Section
WMail Address 1                  [ASCII,50]:
WMail Address 2                  [ASCII,50]:

# VP100 Display Section
VP100 Display Address 1          [ASCII,50]:
VP100 Display Sernum 1          [ASCII,50]:
VP100 Display Address 2          [ASCII,50]:
VP100 Display Sernum 2          [ASCII,50]:

# Notification Section
Notification on NTP_not_sync     [CASE]:
Notification on NTP_stopped      [CASE]:
Notification on Server_boot      [CASE]:
Notification on Refclock_not_respon.[CASE]:
Notification on Refclock_not_sync [CASE]:
Notification on Antenna_faulty   [CASE]:
Notification on Antenna_reconnect [CASE]:
Notification on Config_changed   [CASE]:
Notification on Leap second announ. [CASE]:

# Ethernet Parameter Section
ETH0 IPv4 TCPIP address          [IP]:0
ETH0 IPv4 NETMASK                [IP]:0
ETH0 DHCP CLIENT                 [BOOL]:1
ETH0 IPv6 TCPIP address 1        [IP]:
ETH0 IPv6 TCPIP address 2        [IP]:
ETH0 IPv6 TCPIP address 3        [IP]:
ETH0 IPv6 Autoconf               [BOOL]:1
ETH0 Net Link Mode               [NUM,0:4]:
ETH0 Bonding Group               [NUM,0:4]:

```

## Global Option File

This file contains all global options for special hardware configuration of the LANTIME. Do not modify this file. You can find this file on the write protected flash disk at /mnt/flash/global\_options:

```

#GLOBAL OPTIONS

NUMBER ETHERNET INTERFACES: 1
SYSTEM LAYOUT: 0
SYSTEM ADV LAYOUT: 0
SYSTEM LANGUAGE: 0
SYSTEM PARAMETER: server
SYSTEM DESIGN: 0

```

## **Third party software**

The LANTIME network timeserver is running a number of software products created and/or maintained by open source projects. A lot of people contributed to this and we explicitly want to thank everyone involved for her/his great work.

The used open source software comes with its own license which we want to mention below. If one of the licenses for a third party software product is violated, we will as soon as possible apply any changes needed in order to conform with the corresponding license after we acknowledged about that violation.

If a license for one of the software products states that we have to provide you with a copy of the source code or other material, we will gladly send it to you on data media via normal post or by e-mail upon request. Alternatively we can provide you with a link to a download location in the internet, allowing you to download the most actual version. Please note that we have to charge you for any incurred expenses if you choose to receive the source code on data media.

## **Operating System GNU/Linux**

The distribution of the GNU/Linux operating system is covered by the GNU General Public License (GPL), which we included below.

More information about GNU/Linux can be found on the GNU website ([www.gnu.org](http://www.gnu.org)) and on the website of GNU/Linux ([www.linux.org](http://www.linux.org)).

Our version of the Linux kernel has been optimized for the time server application by applying the so-called PPSkit-patch from Ulrich Windl.

## **Samba**

The Samba software suite is a collection of programs, which implement the Server Message Block (SMB) protocol for UNIX systems. By using Samba your Lantime is capable of sending Windows popup messages and serves request for network time by clients using the NET TIME command.

The distribution of Samba is covered – like GNU/Linux – by the GNU General Public License, see below.

The website of the Samba project (or a mirror) can be reached at [www.samba.org](http://www.samba.org)!

## Network Time Protocol Version 4 (NTP)

The NTP project, lead by David L. Mills, can be reached in the internet at [www.ntp.org](http://www.ntp.org). There you will find a wealthy collection of documentation and information covering all aspects of the application of NTP for time synchronization purposes. The distribution and usage of the NTP software is allowed, as long as the following notice is included in our documentation:

```
*****
*
* Copyright (c) David L. Mills 1992-2004
*
* Permission to use, copy, modify, and distribute this software
* and its documentation for any purpose and without fee is hereby
* granted, provided that the above copyright notice appears in all
* copies and that both the copyright notice and this permission
* notice appear in supporting documentation, and that the name
* University of Delaware not be used in advertising or publicity
* pertaining to distribution of the software without specific,
* written prior permission. The University of Delaware makes no
* representations about the suitability this software for any
* purpose. It is provided "as is" without express or implied
* warranty.
*
*****
```

## mini\_httpd

For our web based configuration tool (HTTP and HTTPS) we use mini\_httpd from ACME Labs. The distribution and usage of this program is free provided as long as the following notice appears in the documentation:

```
Copyright © 2000 by Jef Poskanzer <jef@acme.com>. All rights reserved.
```

```
Redistribution and use in source and binary forms, with or without
modification, are permitted provided that the following conditions
are met:
```

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

```
THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND
ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE
ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE
FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS
OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT
LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY
OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF
SUCH DAMAGE.
```

Find out more regarding mini\_httpd at the ACME Labs homepage ([www.acme.com](http://www.acme.com)).

# GNU General Public License (GPL)

GNU GENERAL PUBLIC LICENSE  
Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.  
675 Mass Ave, Cambridge, MA 02139, USA  
Everyone is permitted to copy and distribute verbatim copies  
of this license document, but changing it is not allowed.

## Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

## GNU GENERAL PUBLIC LICENSE TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program

is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among

countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

## Reference

- [Mills88] Mills, D. L., "Network Time Protocol (Version 1) - specification and implementation", DARPA Networking Group Report RFC-1059, University of Delaware, July 1988
- [Mills89] Mills, D. L., "Network Time Protocol (Version 2) - specification and implementation", DARPA Networking Group Report RFC-1119, University of Delaware, September 1989
- [Mills90] Mills, D. L., "Network Time Protocol (Version 3) - specification, implementation and analysis", Electrical Engineering Department Report 90-6-1, University of Delaware, June 1989
- Kardel, Frank, "Gesetzliche Zeit in Rechnernetzen", Funkuhren, Zeitsignale und Normalfrequenzen, Hrsg. W. Hilberg, Verlag Sprache und Technik, Groß-Bieberau 1993
- Kardel, Frank, "Verteilte Zeiten", ix Multiuser-Multitasking-Magazin, Heft 2/93, Verlag Heinz Heise, Hannover 1993